


MICRO

DIGITAL DIARY  
SF-5100  
SF-5300

OWNER'S MANUAL  
MANUAL DEL PROPIETARIO  
MANUAL DO PROPRIETARIO

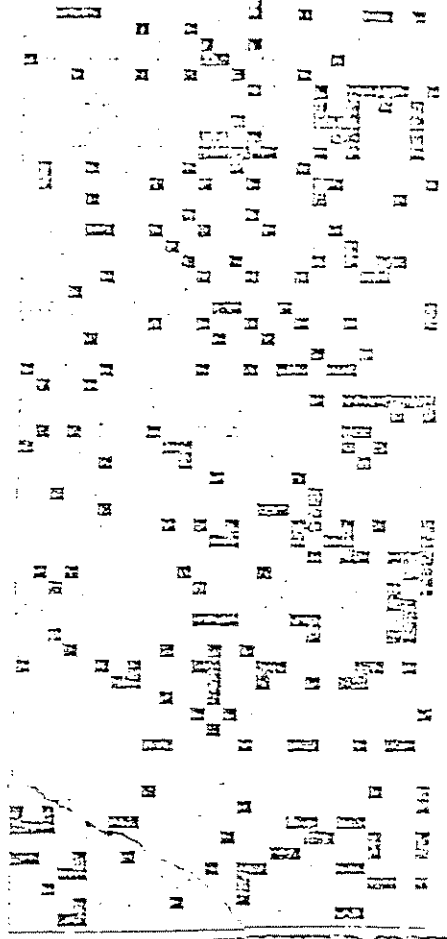

SPARE PARTS MASTER

CASIO

X2

## Introduction SF-5100/SF-5300

Congratulations on your selection of CASIO's new SF-5100/SF-5300. This innovative new personal data management tool features a selection of powerful functions, including:

- Telephone Directory
- Memo Mode
- Schedule Keeper
- Reminder Mode
- Copy Function
- Secret Function
- Calendar
- Clock with Home Time and World Time functions
- Calculator

Functions are specially designed to be easy to understand and use, making your personal data management easier than ever before.

- All data stored in memory is erased if the calculator should malfunction, when you have it repaired, when the batteries go dead, and whenever you remove the batteries. *Be sure to make written back up copies of all important data.*
- In no event will CASIO and its suppliers be liable to you or any other person for any damages, including any incidental or consequential damages, expenses, lost profits, lost savings or any other damages arising out of use of or inability to use this calculator.

## About this manual...

This manual is divided into 8 parts.

### PART 1 — Getting Started

Be sure to read this part of the manual before doing anything else! It includes important information that you need to know in order to use the SF-5100/SF-5300 correctly. It also helps you to get acquainted with the keys, features, and functions of the SF-5100/SF-5300. It tells you where everything is located, what the display indicators mean how to adjust the display contrast, and other important information.

### PART 2 — Operation Reference

This part of the manual gives you more detail about the fundamental operation of the SF-5100/SF-5300. It provides all of the detail you need to help you use the SF-5100/SF-5300 to its full potential.

### PART 3 — Data Management Functions

This part of the manual details the versatile data management functions of the SF-5100/SF-5300. It describes the procedures required for data storage, recall and editing in the Telephone Directory, the Memo Mode, and the Schedule Keeper.

### PART 4 — Timekeeping Functions

Your SF-5100/SF-5300 includes powerful timekeeping functions that help to keep you on time all time. The Home Time function lets you set the current time for your home, specifying 12-hour or 24-hour format, standard time or summer time, even your hometown name. The World Time function gives you instant access to the current time in any one of 29 time zones around the globe.

### PART 5 — Calculator Functions

The SF-5100/SF-5300 also gives you the capability to perform all of the mathematical operations available on today's calculators. In addition, you also get an innovative date calculation function that makes it possible to perform addition and subtraction operations that involve dates.

### PART 6 — Data Communications

The data communications capabilities of the SF-5100/SF-5300 let you transfer data between two SF Units, or between the SF-5100/SF-5300 and a personal computer.

### PART 7 — Floppy Disk Storage

Besides being able to transfer data to a personal computer for long-term storage, the SF-5100/SF-5300 can also store data directly to an optional floppy disk drive. For complete details on connection to the SF-5100/SF-5300 and operation, see the owner's manual that comes with the floppy disk drive.

### PART 8 — Technical Reference

This part of the manual provides technical information on troubleshooting, user maintenance, specifications, etc.

## Contents

Introduction — SF-5100/SF-5300	1
<b>PART 1 — Getting Started</b>	11
About data errors	12
About the memory overflow message	13
General Precautions	13
About the Power Supply	14
Battery Precautions	14
To replace the batteries	16
General Guide	17
To open the SF-5100/SF-5300	17
<b>PART 2 — Operation Reference</b>	18
Setting Up the SF-5100/SF-5300	18
To switch power on and off	18
About the Auto Power Off function	18
To adjust the display contrast	19
To check the memory status	19
About the SOUND menu	19
To switch the key input tone on and off	20
To select a mode	20
<b>Inputting Letters, Numbers, and Symbols</b>	21
To input letters and numbers	21
To input upper-case letters	21
Key Identification Chart	21
To change one character to another	23
To delete a character	23
To insert characters	24
<b>PART 3 — Data Management Functions</b>	25
Using the Telephone Directory	25
About Telephone Directory data items and data entries	25
To enter the Telephone Directory	26
To input Telephone Directory data	26
About mark protection	29
To mark protect and unprotect a Telephone Directory data item	29
About Telephone Directory displays	30
How to find data stored in memory	31
To locate Telephone Directory data using index search	31
To locate Telephone Directory data using initial character search	32
To locate Telephone Directory data using mode search	34
To edit a Telephone Directory data item	35
To delete a single Telephone Directory data item	36
To delete all Telephone Directory data items that are not mark protected	37
To change a FREE entry label	38
<b>Using the Memo Mode</b>	40
To enter the Memo Mode	40
To input Memo Mode data	40
About mark protection	42
To mark protect and unprotect a Memo Mode data item	42
About Memo Mode displays	42
How to find data stored in memory	43
To locate Memo Mode data using index search	44
To locate Memo Mode data using initial character search	44
To locate Memo Mode data using mode search	46
To insert a new Memo Mode data item between two items in memory	47
To edit a Memo Mode data item	48
To delete a single Memo Mode data item	49
To delete all Memo Mode data items that are not mark protected	50

<b>Using the Calendar</b> .....	52
To display the calendar .....	52
To scroll through calendars .....	53
About the date cursor .....	53
To display a calendar from the Calculator .....	54
To specify a month for display in the Calendar mode .....	54
To specify a month and date for display in the Calendar mode .....	55
To highlight and unhighlight specific dates .....	56
To highlight days of the week for multiple months .....	56
To unhighlight all dates in a specific month .....	59
To unhighlight all dates up to a specific month .....	60
<b>Using the Schedule Keeper</b> .....	62
To enter the Schedule Keeper from outside Calendar display .....	62
To specify a Schedule Keeper date from the Calendar display .....	62
About date and time input .....	63
To specify a Schedule Keeper date while in the Schedule Keeper .....	63
About Schedule Keeper data and initial displays .....	64
To input Schedule Keeper data .....	65
About Schedule Keeper data .....	68
About mark protection .....	69
To mark protect and unprotect a Schedule Keeper data entry .....	69
About schedule alarms .....	69
To set a schedule alarm when inputting data .....	70
To switch schedule alarms on and off .....	72
About Schedule Keeper displays .....	73
How to find data stored in memory .....	74
To locate Schedule Keeper data using index search .....	75
To use initial character search to locate a description .....	76
To use initial character search to locate a time .....	78
To use mode search to locate a description .....	79
To use mode search to locate a specific time .....	81
To use mode search to locate all times within a specific range .....	82
About mode searches for times .....	83
To edit a Schedule Keeper data entry .....	84
To move a Schedule Keeper data to a different date .....	85
To set or change a schedule alarm for an existing data entry .....	87
To view a data entry's current schedule alarm setting .....	89
To delete a specific schedule alarm .....	89
To delete a single Schedule Keeper data entry .....	90
To delete unmarked Schedule Keeper data entries up to a specific date .....	91
<b>Using the Reminder Mode</b> .....	94
To enter the Reminder Mode .....	94
About date and time input .....	94
To input annual reminder data .....	95
About Reminder Mode data .....	97
To input monthly reminder data .....	98
To input daily reminder data .....	99
About mark protection .....	100
To mark protect and unprotect a reminder .....	101
About reminder alarms .....	101
To set a reminder alarm when inputting data .....	102
To switch reminder alarms on and off .....	103
About Reminder Mode displays .....	103
How to find data stored in memory .....	104
To locate a reminder using index search .....	105
To use initial character search to locate a reminder message .....	106
To use initial character search to locate a date .....	107
To use mode search to locate a reminder message .....	109
To use mode search to locate a date .....	110
To edit a reminder .....	112
To delete a single reminder .....	113
To delete all reminders that are not mark protected .....	114

Using the Secret function.....	115
To create a secret memory area.....	115
To enter an existing secret memory area.....	116
To edit an existing password.....	117
To transfer data from the open memory area to the secret memory area.....	118
To transfer data from the secret memory area to the open memory area.....	119
Using the Copy function.....	120
To copy a data item.....	120

#### PART 4 — Timekeeping Functions.....122

Using the Home Time function.....	122
About Home Time displays.....	122
To display the Home Time.....	123
To set the Home Time zone.....	124
To set the Home Time.....	125
To switch the Home Time between 12-hour and 24-hour format.....	127
To switch the Home Time between standard and daylight saving time.....	128
To set the Daily Alarm.....	129
To switch the daily alarm on and off.....	130
About the daily alarm.....	130
To edit a city code name.....	131
To select the date format.....	133
Using the World Time function.....	134
About World Time displays.....	134
To display the World Time.....	135
To set the World Time zone.....	135
To switch a World Time zone between standard and daylight saving time.....	136
To edit a city code name.....	137
City Code List.....	139

PART 5 — Calculator Functions.....	140
Using the Calculator.....	140
To enter the Calculator Mode.....	140
About the Calculator Mode keys.....	140
To perform calculations.....	142
To perform constant calculations.....	143
To correct errors in calculations.....	143
About calculation errors.....	144
To clear errors.....	144
Performing date calculations.....	145
To calculate the number of days between two dates.....	145
To calculate the date that is a specific number of days after another date.....	146

#### PART 6 — Data Communications.....147

Setting Up for Data Communications.....	147
To connect two SF Units.....	147
To connect the SF-5100/SF-5300 with a personal computer.....	148
About personal computer connections.....	149
To set the SF-5100/SF-5300 hardware parameters.....	151
About communications parameters.....	152
To set up the SF-5100/SF-5300 to receive data.....	153
Sending Data.....	156
About data transfer types.....	156
To send all data items.....	157
To send one Telephone Directory, Memo Mode, or Reminder Mode item.....	159
To send one Schedule Keeper entry.....	161
To send one month of Calendar data (highlights).....	163
To send all Telephone Directory, Memo Mode, or Reminder Mode data.....	164
To send all Schedule Keeper data in a specific period.....	166
To send all Calendar data in a specific period.....	168

## PART 1 Getting Started

PART 7 — Floppy Disk Storage.....	171
Setting Up for Floppy Disk Operations.....	171
Performing Floppy Disk Operations.....	171
About disk data types.....	172
To format a floppy disk.....	173
To save SF-5100/SF-5300 data to a floppy disk.....	175
About filenames and passwords.....	178
To load data from a floppy disk to the SF-5100/SF-5300.....	179
To delete a file from a floppy disk.....	182
To create a directory of files on a floppy disk.....	185
To compare the contents of two files.....	188
To change the name of a floppy disk file.....	191

PART 8 — Technical Reference.....	194
Keys.....	194
Storage Capacity.....	197
Auto Sort Sequence.....	199
Filename and password characters.....	200
Resetting the SF-5100/SF-5300's Memory.....	201
To reset the SF-5100/SF-5300's memory.....	201
Error Table.....	203
Specifications.....	204

Be sure to read this part of the manual before doing anything else! It includes important information that you need to know in order to use the SF-5100/SF-5300 correctly. It also helps you to get acquainted with the keys, features, and functions of the SF-5100/SF-5300. It tells you where everything is located, what the display indicators mean, how to adjust the display contrast, and other important information.

### Read this first!

You must be familiar with the following information in order to use the SF-5100/SF-5300 correctly. It tells you what to do in order to avoid losing important data stored in memory. Please be sure to read the following before using the SF-5100/SF-5300!


### Make back up copies of important data!

Your SF-5100/SF-5300 employs electronic memory, which makes it possible to store large volumes of data and to recall stored data quickly and easily. Data is retained as long as power is supplied by the batteries. This means that should batteries go dead, or if you make a mistake while replacing batteries, the data stored in memory may be damaged or lost entirely. Data contents can also be damaged or lost due to strong electrostatic charge, strong impact, or extremes in temperature and humidity.

All of this means that you should always keep back up copies of important data on a floppy disk (either by transferring the data to a personal computer or using the optional floppy disk drive unit), or by writing it down in a notebook.

## About data errors...

Whenever you switch on the power of the SF-5100/SF-5300, it performs a self-check to make sure that everything is in order before beginning operation. If the SF-5100/SF-5300 detects a problem with the data stored in memory, it displays the following message.

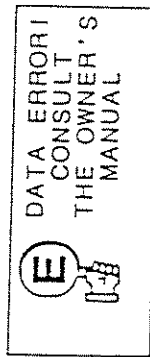

Note that once data is lost it cannot be recovered. Such data errors are generally caused by one of the following problems.

- Interruption of battery power (page 14).
- Severe electrostatic charge, impact, change in temperature, or change in humidity (page 13).
- Hardware problem.

Once the Data Error display appears, you will not be able to input or edit data, though you will be able to recall data after pressing **CLEAR** to clear the error message. In order to return memory to normal (allowing further input and editing of data), you must perform the **RESET** operation described on page 201 to clear the memory of all data. Before doing so, you may want to recall important data and write it down (if you don't already have a copy). You can then re-input the data after clearing the memory.

If you still have trouble after trying the **RESET** operation, you may have a hardware problem. If so, consult with your nearest CASIO dealer.

## About the memory overflow message...

The memory overflow message appears on the display when the data you are trying to store exceeds memory capacity.

When this happens, perform the two following operations.

1. Press  $\triangleleft$  or  $\triangleright$  to display the data you are trying to input and reduce the number of characters. If the memory overflow message appears again when you try to store the data, try the steps below.
2. Press **CLEAR** to display the input prompt for the mode you are in ("NAME ?" "MEMO ?").
3. Either delete data you no longer need (to make room for the new data), transfer some of the data in memory to a personal computer, or save some of the data onto a floppy disk (using an optional floppy disk drive).


## General Precautions

Note the following important precautions to ensure that you get the most out of your SF-5100/SF-5300.

- Never try to take the SF-5100/SF-5300 apart.
- Avoid strong impact and sudden temperature changes.
- At very low temperatures, the display response time may slow down or the display may fail completely. This is temporary and correct operation should return at normal temperature.
- To avoid serious damage to the SF-5100/SF-5300 caused by leaking batteries, replace batteries once every two years, regardless of how much you use the SF-5100/SF-5300 during that time.
- Never use thinner, benzine or other volatile agents to clean the exterior of the SF-5100/SF-5300. Instead, wipe it off with a soft cloth dampened in a solution of water and a mild, neutral detergent. Wring the cloth out until it is almost dry.



- If the SF-5100/SF-5300 is exposed to strong electrostatic charge, the display may dim or the SF-5100/SF-5300 may lock up. To correct this situation, press the P button.

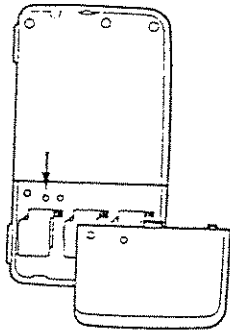

- Do not press the keys of the SF-5100/SF-5300 with a pen, pencil or other sharp object.
- The SF-5100/SF-5300 may cause interference with radio or television reception. Keep it away from such appliances when you are using it.

## About the Power Supply

The SF-5100/SF-5300 is powered by three CR2032 lithium batteries. If nothing appears on the display of the SF-5100/SF-5300 when you switch power on, or if the display becomes dim, it probably means that batteries are weak. When such symptoms occur, use the procedures described in this section to replace batteries as soon as possible.

### Caution

- All data stored in memory is lost if you remove more than one battery from the SF-5100/SF-5300 at one time.
- Be sure that you keep a separate copy of all important data that you store in the SF-5100/SF-5300.

### Battery Precautions

Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the SF-5100/SF-5300. Note the following precautions.

- Be sure that the positive (+) side of each battery is facing up (so you can see it).



- Never mix batteries of different types.



- Never mix old batteries and new ones.



- Never leave dead batteries in the battery compartment.

- Remove the batteries if you do not plan to use the SF-5100/SF-5300 for a long period.

- Replace batteries at least once every two years, no matter how much you use the SF-5100/SF-5300 during that period.

- Never try to recharge the batteries supplied with the SF-5100/SF-5300.




- Do not expose batteries to direct heat, let them become shorted, or try to take them apart.



Keep batteries out of the reach of small children. If swallowed, consult with a physician immediately.

## To replace the batteries


1. Loosen the screw on the back of the SF-5100/SF-5300 that holds the battery compartment cover in place, and remove the cover.
2. Loosen the screw that secures one of the three battery holders in place and remove the battery holder.

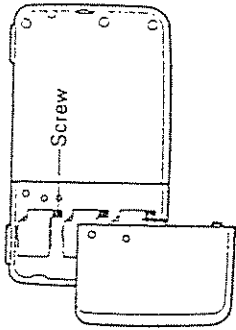

### Caution


Be sure to remove only one battery at a time. Otherwise, you will lose all data stored in memory.

3. Replace the old battery with a new one, making sure that the positive (+) side of the new battery is facing up (so you can see it).

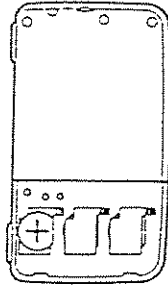


4. Replace the battery holder and secure it by tightening its screw.
  - Be sure careful that you do not over tighten the screw.
5. Repeat steps 2 through 4 for the other two batteries.
  - Be sure to replace all three batteries. Never mix old batteries with new ones, and be sure to use CR2032 lithium batteries only.
6. After you replace all three batteries, replace the battery compartment cover and secure it by tightening its screw.
  - Be careful that you do not over tighten the screw.
7. Check the Home Time setting (page 125) to make sure that it is correct.

## General Guide

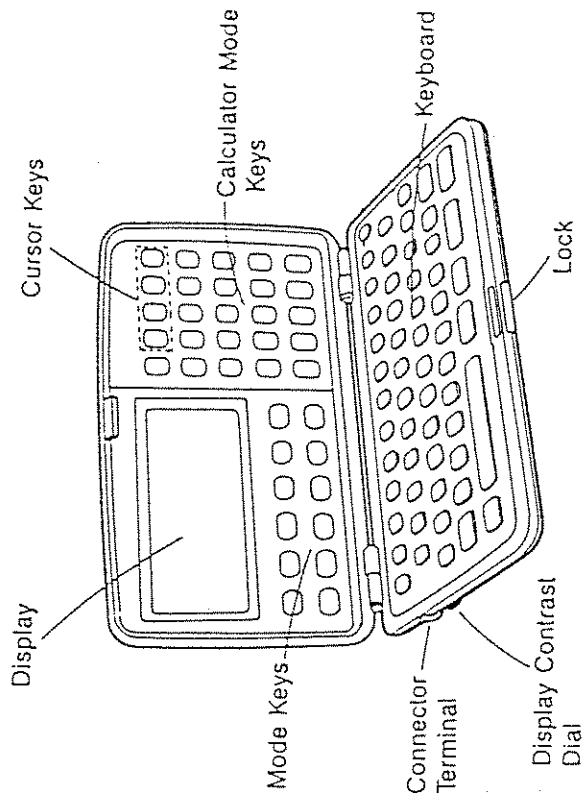

### To open the SF-5100/SF-5300

Open the two panels while pressing the lock.

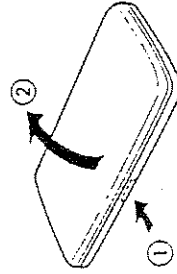

## PART 2 Operation Reference

This part of the manual gives you more detail about the fundamental operation of the SF-5100/SF-5300. It provides all of the detail you need to help you use the SF-5100/SF-5300 to its full potential.

### Setting Up the SF-5100/SF-5300

After batteries are loaded, use the following procedures to set up the SF-5100/SF-5300 for operation.

#### ■ To switch power on and off

1. Press **ON** to switch power on.
  - The initial screen for the mode that was selected when you last switched power off appears on the display.
  - If the data error message appears on the display, follow the procedures described on page 12.
  - If nothing appears on the display when you switch power on, replace batteries as soon as possible (page 16).
2. Press **OFF** to switch power off.

#### About the Auto Power Off function...

The SF-5100/SF-5300 is equipped with an Auto Power Off function that switches power off automatically whenever you do not perform any key operation for about six minutes. To restore power, press **ON**.

#### ■ To adjust the display contrast

Rotate the contrast adjustment dial.



#### ■ To check the memory status

- Hold down **CAPA** to display a screen that shows the current memory status. To clear the memory status display, release **CAPA**.

Remaining memory capacity

\*\*\*CAPACITY\*\*\*

FREE	27953	32%
USED	901	

Total number of characters stored in memory

#### About the SOUND menu...

The sound menu lets you switch the key input tone and the various alarms of the SF-5100/SF-5300 on and off.

Flashing dot indicates currently selected item

SCHED AL	●	ON	OFF
REMINDER	●	ON	OFF
DAILY AL	●	ON	OFF
KEYS	●	ON	OFF

Dot indicates on/off status

The on/off status of each SOUND menu items is indicated by a dot, and the dot that is flashing on the menu is the one that is currently selected.

Use **Δ** and **∇** to change the currently selected (flashing) item.  
Use **◀** and **▶** to switch the currently selected item on and off.

### ■ To switch the key input tone on and off

1. Press **FUNC** once to display the first function menu.
2. Press **4** to select the SOUND menu item.
3. Use **Δ** and **∇** to select KEYS.
4. Use **◀** and **▶** to switch the key input tone on and off.
5. Press **SET** to store your setting and clear the SOUND menu.

### ■ To select a mode

Press one of the mode keys to select the mode you want.

<b>TEL:</b>	Telephone Directory
<b>MEMO:</b>	Memo Function
<b>SCHEDULE:</b>	Schedule Keeper
<b>CALENDAR:</b>	Calendar
<b>HOME TIME:</b>	Home Time
<b>WORLD TIME:</b>	World Time
<b>REMINDER:</b>	Reminder Mode
<b>CAL:</b>	Calculator

## Inputting Letters, Numbers, and Symbols

The following describes the basic input operations for the SF-5100/5300. Note that you can use the following operations to input data only in the Telephone Directory, Memo Mode, and the Schedule Keeper. In all of the following operations, the input or correction is performed at the current cursor location. To move the cursor around the display, use the **Δ**, **∇**, **◀**, and **▶** cursor keys. Press **SHIFT** and then **◀** to make the cursor jump to the first character of an entry, or **SHIFT ▶** to jump to the end of an entry.

### ■ To input letters and numbers

Use the key operation as described under "Key identification chart" to input the letter, number, or character that you want.

### ■ To input upper-case letters



Press **CAPS** to switch the keyboard between upper-case and lower-case letters. The indicator "CAPS" on the display shows that the keyboard is shift-locked for upper-case letters.


- The upper-case/lower-case setting you make with **CAPS** remains in effect until you change it, even when you switch the SF-5100/SF-5300 off.
- A shift-lock operation using **CAPS** affects the letter keys only. It does not shift the number keys.

### Key Identification Chart

The keyboard illustrated below shows all of the characters that can be entered from the keyboard.

1 /	2 #	3 \$ %	4 &	5 ' ( )	6 ^	7 & *	8 ( )	9 { }	0 ~	1 /
Q A	W E	R O	T U	Y A	U E	I I	O O	P U	V V	1 3 4
Q a	w e	r o	t u	y a	u e	i i	o o	p u	v v	1 3 4
Q A	S E	D I	F O	G U	H A	J N	K O	L	:	" ' ^ _
Q a	s e	d i	f o	g u	h a	j n	k o	l	:	" ' ^ _
SHIFT	Z A	X E	C I	V O	B U	N M	- F	- X	? ÷	/ >
	z a	x e	c i	v o	b u	n m	- f	- x	? ÷	/ >
CODE										

Use the SHIFT and CODE modifier keys to select the character you want. The following illustration shows how the modifier keys are used.

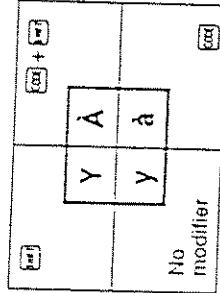

Example: **Y** enters y  
**SHIFT Y** enters Y  
**CODE Y** enters à  
**SHIFT CODE Y** enters Á

**Notes**

- In all of the above cases, the modifier key operations are valid for the next letter you input only.
- To shift-lock the keyboard for input to consecutive upper-case letters, press CAPS.

In addition, you can also manually enter accent marks as noted below. After you perform one of the following operations, the next character you enter is displayed along with the accent mark you entered.

<b>CODE</b> <b>SHIFT</b> <b>Y</b>	(acute accent)
<b>CODE</b> <b>SHIFT</b> <b>X</b>	(grave accent)
<b>SHIFT</b> <b>Y</b> <b>SHIFT</b>	(circumflex)
<b>CODE</b> <b>SHIFT</b> <b>X</b>	(umlaut)
<b>CODE</b> <b>SHIFT</b> <b>Z</b>	(tilde)

Example: **CODE SHIFT Y** enters à  
**CODE SHIFT X** enters Á

If you perform one of the above operations and then press the key for a letter that cannot be used with an accent mark (such as w or s), the letter is displayed without the accent mark.




 
■ **To change one character to another**

1. Move the cursor to the location of the character you want to change.
2. Press the key that is marked with the character you want to change to.

■ **To delete a character**

1. Move the cursor to the location of the character you want to delete.
2. Press DEL.
  - The character at the cursor location is deleted, and the space is filled in by sliding to the left any characters right of the cursor.

### ■ To insert characters

- 



1. Move the cursor to the location of the insertion.
  2. Press **INS**.
    - Each press of **INS** opens up a space at the cursor location, sliding to the right any characters to the right of the cursor. Open up as many spaces as you need.
  3. Input the characters you want in the space.

## PART 3 Data Management Functions

This part of the manual details the versatile data management functions of the SF-5100/SF-5300. It details the procedures required for data storage, recall and editing in the Telephone Directory, the Memo Mode, and the Schedule Keeper.

### Using the Telephone Directory

The innovative Telephone Directory mode of the SF-5100/SF-5300 lets you input names, telephone numbers, and addresses for instant look up when you need them. It even gives you a total of six user-definable items that you can use to record birthdays, hobbies, or any other information you want. Each Telephone Directory data item can contain up to 384 characters (including next and newline symbols).

#### About Telephone Directory data items and data entries...


Telephone Directory information is stored in units called *data items*. Each data item is made up of a number *data entries*. Telephone Directory data items are made up of the following nine entries:

NAME
NUMBER
ADDRESS
FREE 1
FREE 2
FREE 3
FREE 4
FREE 5
FREE 6

The "FREE" entries can be used for the storage of any type of data you want. You can even change the FREE entry labels (page 38) to produce the message you want during data input.


## To enter the Telephone Directory

Press TEL to enter the Telephone Directory. At this time the Initial Telephone Directory screen appears.

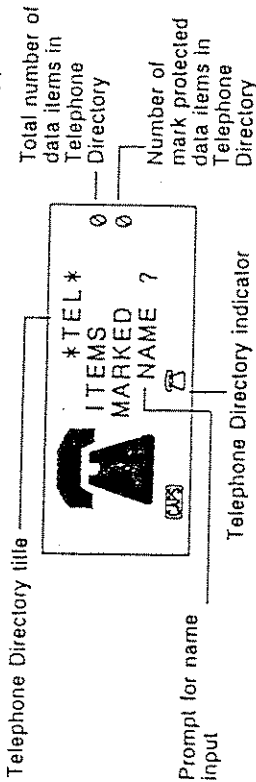

## To input Telephone Directory data

1. Enter the Telephone Directory.
2. At this time, you could press CLEAR to clear the initial Telephone Directory screen and change to the name input screen.

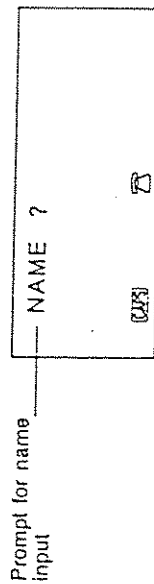


- You can skip step 2 and begin name input directly from the initial Telephone Directory screen.
- 3. Input the name of the person whose data you want to store.
- In the example here, we are using the name Eric Jackson. Note that we input the name with the last name first. This is because Telephone Directory data is automatically sorted according to the name entry when it is stored in memory.

- Remember that a Telephone Directory data item must have a name entry. Any of the other following entries can be skipped by pressing NEXT without entering anything for that entry. You can store a Telephone Directory data item by pressing SET at any point after you input a name entry.

- For full details on how to input letters, numbers, and symbols, see page 21.


4. After inputting a name, press NEXT to advance to telephone number input.

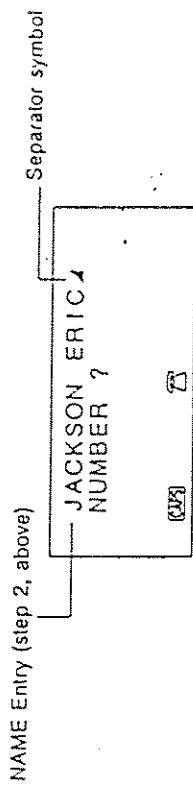

123-4567  
987-5432

5. Input the telephone number.

  - In the example here, we will actually use two telephone numbers. Enter the first one, and then press **↓** to move down to the next line within the number data entry.

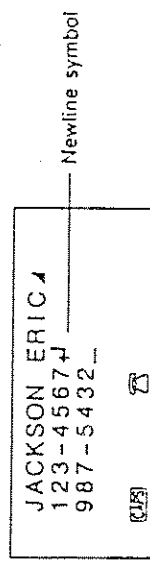



6. After inputting a telephone number, press NEXT to advance to address input.

```
JACKSON ERIC
123-4567
987-5432
ADDRESS ?
```

Indicates data runs off bottom of display

570 Casio Avenue  
Seattle WA



7. Input the address.
- The display scrolls automatically as you input more data.
8. After inputting an address, press NEXT to advance to the first user-definable item input.

```
987-5432
570 Casio Avenue
Seattle WA
FREE 1 ?
```

Prompt for first user-definable entry

- Switch between upper-case and lower-case letters using the CAPS and SHIFT keys (page 21).
- Blood Type: A
- In the example here, we input the Eric's blood type.
10. After inputting all of the data you want, press SET to store it in memory.



```
JACKSON ERIC
```

```
123-4567
987-5432
```

```
570 Casio Avenue
```



- Remember that nothing is stored in memory until you press SET.
- You can also mark protect a data item as you input it.
- You can press SET at any point in the above procedure to store the data you have input up to that point.

#### About mark protection.....

Once you mark protect a data item, it will not be deleted when you perform the all delete operation described on page 37. This makes it easy to clean up your data quickly and easily, without losing data items you would rather keep.

#### To mark protect and unprotect a Telephone Directory data item



Press MARK.

```
987-5432
570 Casio Avenue
Seattle WA
Blood Type: A
```

Indicates mark protection. This indicator is cleared when data item is unprotected.



- You can mark protect/unprotect a data item as you are inputting it (page 26) or as you are editing it (page 35).
- Each time you press MARK, the data item you are currently inputting or editing switches between being mark protected and unprotected.

### About Telephone Directory displays.....

There are two display formats used in the Telephone Directory. The *data display* format shows all of the data entries contained in a data item. The *data display* is the format that appears when you press SET to store a Telephone Directory data item you have just input.

#### Data Display

```

ANDERSON JACK
234-228-8333
1710 T.D. Street
Los Angeles CA
  
```

You can scroll through a data display line-by-line using the  $\Delta$  and  $\nabla$  cursor keys. If you press SHIFT before  $\Delta$  and  $\nabla$ , the display scrolls data item-by-data item.

There is also an *index display* format that shows you names and telephone numbers only. This helps you to quickly and easily find the information you need.

#### Index Display

```

ANDERSON JACK
234-228-8333
CASIO          6666-6666
  
```

You can scroll through an index display data item-by-data item using the  $\Delta$  and  $\nabla$  cursor keys. If you press SHIFT before  $\Delta$  and  $\nabla$ , the display scrolls two data items at a time.

You can switch between the data display and the index display formats by pressing DISP CHNG.

### How to find data stored in memory.....

Versatile search capabilities let you recall the Telephone Directory information you need quickly and easily.

With *index search*, you scroll through an index display of name and telephone number entries.

With *initial character search*, you specify the data item you are looking for by inputting the letters that begin its name entry.

With *mode search*, you specify the data item you are looking for by inputting characters that might occur anywhere in any one of its entries.

Each of the above search procedures produces an index display of the found data items. You can then use DISP CHNG to switch to the full data display of the data item you want.

### To locate Telephone Directory data using index search



1. Enter the Telephone Directory.
  2. Press  $\Delta$  or  $\nabla$  to switch to an index display of existing Telephone Directory data items.
- Pressing  $\nabla$  starts the index display from the first data item (in alphabetical sequence), while pressing  $\Delta$  starts from the last data item.
  - The index display shows the name and telephone number entries only.



3. Scroll through the index display item-by-item using  $\Delta$  and  $\nabla$ . You can also scroll two items at a time by pressing SHIFT  $\Delta$  or SHIFT  $\nabla$ .



4. When the name entry of the data item you are looking for is in the top line of the display, you can press DISP CHNG to switch to the full data display.

```

CASIO      666-6666
JACKSON ERIC
123-4567
  
```

Pressing DISP CHNG shows data display for "CASIO."

Indicates this index display is result of a search operation.

```

CASIO      666-6666
  
```

- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
  - If no data item matches your specification, the message "NOT FOUND!" appears on the display.
  - If there is no data stored in memory, the message "NO DATA!" appears on the display.
  - When one of the above error messages appears, you can press ESC,  $\Delta$ , or  $\nabla$  to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
4. Scroll through the index display item-by-item using  $\Delta$  and  $\nabla$ . You can also scroll two items at a time by pressing SHIFT  $\Delta$  or SHIFT  $\nabla$ .
  5. When the name entry of the data item you are looking for is in the top line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.



### To locate Telephone Directory data using initial character search



CA

1. Enter the Telephone Directory.
2. Enter the initial characters of the name entry for the data item you want to look for.
  - You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed. If you input a single letter, you might end up recalling a large number of data items.
3. Press SEARCH to start the search. An index display of all the data items that match your input appears on the display.



## To locate Telephone Directory data using mode search



1. Enter the Telephone Directory.

Los

2. Enter the characters you want to look for.
  - You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed.



3. Press **SHIFT** followed by **SEARCH** to start the search. An index display of all the data items that contain your input appears on the display.

```

ANDERSON JACK
234-228-8333
  
```

Indicates this index display is result of a search operation.

- With mode search, all entries are checked for the text you specify. In the above display, the characters "Los" do not appear, because they occur in the address entries of these data items.
- To clear the **SEARCH** indicator from the display (and cancel the current search operation), press either **ESC** or **SEARCH**. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no data item matches your specification, the message "NOT FOUND!" appears on the display.
- If there is no data stored in memory, the message "NO DATA!" appears on the display.

- When one of the above error messages appears, you can press **ESC**, **←**, or **→** to display your original specification. Make any necessary changes and try again. If you don't want to try again, press **CLEAR** to clear the error message.
- 4. Scroll through the index display item-by-item using **Δ** and **∇**. You can also scroll two items at a time by pressing **SHIFT Δ** or **SHIFT ∇**.
- 5. When the name entry of the data item you are looking for is in the top line of the display, you can press **DISP CHNG** to switch to the full data display.



```

ANDERSON JACK
234-228-8333
  1710 T.D. Street
  Los Angeles CA
  
```

Matching text

- You can switch back to the index display from the data display by pressing **DISP CHNG** again.

## To edit a Telephone Directory data item



1. Enter the Telephone Directory.
  2. Use index search, initial character search, or mode search to find the data item you want to edit.
  3. Move the name entry of the data item you want to edit into the top line of the index display.
- At this point, you may want to switch to the full data display by pressing **DISP CHNG**. The following steps are the same regardless of whether you are continuing from the index display or the data display.



- FUNC** 4. Press **FUNC** once to display the first function menu.

```

1 ITEM EDIT
2 ITEM DELETE
3 ITEM COPY
4 SOUND
  
```

- 1** 5. Press 1 to select ITEM EDIT.
- To clear the function menu without selecting anything, press ESC.
6. Make any changes you want using the procedures described on page 21.
- To cancel the editing operation without making any changes, press ESC or CLEAR.
- SET** 7. After making the changes you want, press SET to store the data item with its new changes.

### To delete a single Telephone Directory data item

- 2** 1. Enter the Telephone Directory.
2. Use index search, initial character search, or mode search to find the data item you want to delete.
- DEL** 3. Move the name entry of the data item you want to delete into the top line of the index display.
- At this point, you may want to switch to the full data display by pressing DISP CHNG. The following steps are the same regardless of whether you are continuing from the index display or the data display.
- FUNC** 4. Press **FUNC** once to display the first function menu.

```

1 ITEM EDIT
2 ITEM DELETE
3 ITEM COPY
4 SOUND
  
```

- 2** 5. Press 2 to select ITEM DELETE.
- To clear the function menu without deleting anything, press ESC.

```

SINGLE
ITEM
SET/ESC
  
```

- SET/ESC** 6. Press SET to clear the data item you selected or ESC to abort the operation without deleting anything.
- Remember that the delete operation cannot be undone. Make sure that you really don't need a data item before you delete it.

### To delete all Telephone Directory data items that are not mark protected


- FUNC** 1. Enter the Telephone Directory.
- FUNC** 2. Press **FUNC** twice to display the second function menu.

```

2 ALL DELETE
3 LABEL EDIT
4 DATA COMM
  
```

**2**

3. Press 2 to select ALL DELETE.
  - To clear the function menu without deleting anything, press ESC.

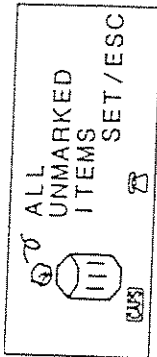
**SET/ESC**

4. Press SET to delete all data items that are not mark protected or ESC to abort the operation without deleting anything.
  - Remember that the delete operation cannot be undone. Make sure that you really don't need the unmarked data before you delete it.

### To change a FREE entry label

**1**

1. Enter the Telephone Directory.
2. Press FUNC twice to display the second function menu.

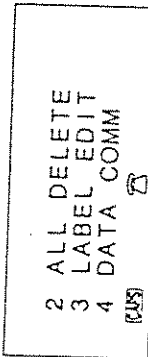**FUNC/FUNC****3**

3. Press 3 to select LABEL EDIT.
  - To clear the function menu without selecting anything, press ESC.

**Δ/▽**

4. Use Δ and ▽ to move the cursor between the FREE labels.
  - To cancel the editing operation without making any changes, press ESC or CLEAR.
5. When the cursor is located at the text you want to change, enter the text you want.
  - Labels can be up to 14 characters long.
  - For full details on how to input letters, numbers, and symbols, see page 21.
  - Here we will change the FREE 1 label to "BIRTHDAY".

BIRTHDAY

**SET**


6. Alter making the changes you want, press SET to store them.
  - The labels you create with the above procedure appear as prompts when you are inputting Telephone Directory data (page 26).

## Using the Memo Mode

The Memo Mode of the SF-5100/SF-5300 is like a pad of electronic memo paper that lets you store information in any format you want. You can input Memo Mode data by adding new memos to end of data already in memory, or you can insert new memo data between two existing Memo Mode data items (page 47). Each Memo Mode data item can contain up to 384 characters (including next and newline symbols).


### To enter the Memo Mode

- Press **MEMO** to enter the Memo Mode. At this time the initial Memo Mode screen appears.

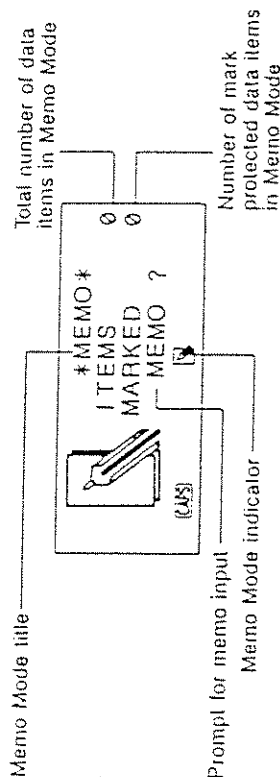

### To input Memo Mode data


- Enter the Memo Mode.
- At this time, you could press **CLEAR** to clear the initial Memo Mode screen and change to the memo input screen.

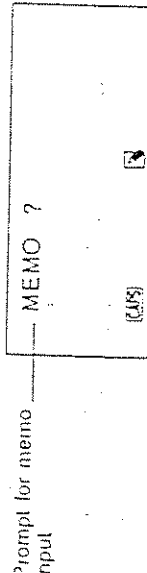

- You can skip step 2 and begin memo input directly from the initial Memo Mode screen.

## SHOPPING LIST

- Input the first line of memo data you want to store.
  - Note that the first line of memo data is treated as the memo's name. Because of this, it is a good idea to use a short descriptive title as the first line.
  - Memo Mode data is not sorted when it is stored in memory. Memo Mode data items are stored in the same order as they are input.
  - For full details on how to input letters, numbers, and symbols, see page 21.
- Input the rest of your data.

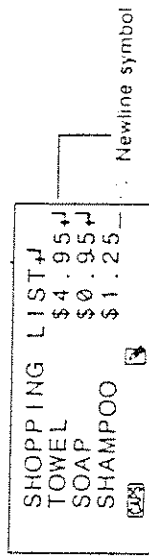

- Press **↵** to change lines.
  - The display scrolls automatically as you input data.
  - Switch between upper-case and lower-case letters using the **CAPS** and **SHIFT** keys.
- After inputting all of the data you want, press **SET** to store it in memory.
    - Remember that nothing is stored in memory until you press **SET**.
    - You can also mark protect a data item as you input it (page 42).
    - You can press **SET** at any point in the above procedure to store the data you have input up to that point.

**SET**

**About mark protection.....**

Once you mark protect a data item, it will not be deleted when you perform the all delete operation described on page 50. This makes it easy to clean up your data quickly and easily, without losing data you would rather keep.

**To mark protect and unprotect a Memo Mode data item****MARK**

Press MARK.

Indicates mark protection. This indicator is cleared when data item is unprotected.

```

- * SHOPPING LIST+J
  TOWEL $4.95+J
  SOAP $0.95+J
  SHAMPOO $1.25-
  (2/5)
  
```

- You can mark protect/unprotect a data item as you are inputting it (page 40) or as you are editing it (page 48).
- Each time you press MARK, the data item you are currently inputting or editing switches between being mark protected and unprotected.

**About Memo Mode displays.....**

There are two display formats used in the Memo Mode. The *data display* format shows all of the data entries contained in a data item. The *data display* is the format that appears when you press SET to store a Memo Mode data item you have just input.

**Data Display**

```

SHOPPING LIST
TOWEL $4.95
SOAP $0.95
SHAMPOO $1.25
(2/5)
  
```

You can scroll through a data display line-by-line using the  $\Delta$  and  $\nabla$  cursor keys. If you press SHIFT before  $\Delta$  and  $\nabla$ , the display scrolls data item-by-data item.

There is also an *index display* format that shows you a list of the first line of each Memo Mode data item stored in memory. This helps you to quickly find the information you need.

**Index Display**

```

SHOPPING LIST
PRICE LIST
CALIFORNIA WINE
CARS
(2/5)
  
```

You can scroll through an index display data item-by-data item using the  $\Delta$  and  $\nabla$  cursor keys. If you press SHIFT before  $\Delta$  and  $\nabla$ , the display scrolls four data items at a time.

You can switch between the data display and the index display formats by pressing DISP CHNG.

**How to find data stored in memory.....**

Versatile search capabilities let you recall the Memo Mode information you need quickly and easily.

 
 
 


With *index search*, you scroll through an index display of the first line of each Memo Mode data item.


With *initial character search*, you specify the data item you are looking for by inputting the letters that begin its first line.


With *mode search*, you specify the data item you are looking for by inputting characters that might occur anywhere in the item.

Each of the above search procedures produces an index display of the found data items. You can then use DISP CHNG to switch to the full data display of the data item you want.

### To locate Memo Mode data using index search

1. Enter the Memo Mode. 
2. Press  $\Delta$  or  $\nabla$  to switch to an index display of existing Memo Mode data items. 
- Pressing  $\nabla$  starts the index display from the first data item, while pressing  $\Delta$  starts from the last data item.
- The index display shows the first line of each data item only. 
3. Scroll through the index display line-by-line using  $\Delta$  and  $\nabla$ . 
4. When the name of the data item you are looking for is in the top line of the display, you can press DISP CHNG to switch to the full data display. 

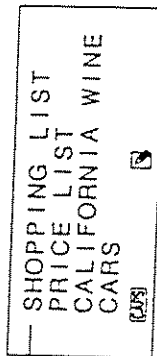




SHIPPING LIST  
PRICE LIST  
CALIFORNIA WINE  
CARS 


Pressing DISP CHNG shows data display for "SHOPPING LIST".


- The data display shows all entries that make up the data item.
- You can switch back to the index display from the data display by pressing DISP CHNG again.

### To locate Memo Mode data using initial character search


1. Enter the Memo Mode. 
2. Enter the initial characters of the first line of the data item you want to look for. 

- You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed. If you input a single letter, you might end up recalling a large number of data items.
- 3. Press SEARCH to start the search. An index display of all the data items that match your input appears on the display. 

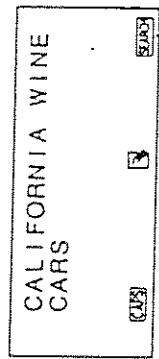

CALIFORNIA WINE  
CARS 

Indicates this index display is result of a search operation.

- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no data item matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.
- When one of the above error messages appears, you can press ESC,  $\leftarrow$ , or  $\rightarrow$  to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- 4. Scroll through the index display item-by-item using  $\Delta$  and  $\nabla$ . 



5. When the name of the data item you are looking for is in the top line of the display, you can press **DISP CHNG** to switch to the full data display.
- You can switch back to the index display from the data display by pressing **DISP CHNG** again.

### To locate Memo Mode data using mode search

- [F3]** SOAP
- Enter the Memo Mode.
  - Enter the characters you want to look for.
    - You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed.
  - Press **SHIFT** followed by **SEARCH** to start the search. An index display of all the data items that contain your input appears on the display.

```

SHIPPING LIST
PRICE LIST
[ESC] [F3] [SEARCH]
  
```

Indicates this index display is result of a search operation.

- In the above display, the characters "SOAP" do not appear, because they occur inside of the data items listed.
- To clear the **SEARCH** indicator from the display (and cancel the current search operation), press either **ESC** or **SEARCH**. The search operation is also canceled when you change modes, or by any data edit or input operation.

- If no data item matches your specification, the message "NOT FOUND!" appears on the display.
- If there is no data stored in memory, the message "NO DATA!" appears on the display.
- When one of the above error messages appear, you can press **ESC**, **◀**, or **▶** to display your original specification. Make any necessary changes and try again. If you don't want to try again, press **CLEAR** to clear the error message.

- [Δ]/[▽]**
- Scroll through the index display item-by-item using **Δ** and **▽**.
  - When the name of the data item you are looking for is in the top line of the display, you can press **DISP CHNG** to switch to the full data display.

```

 


SHIPPING LIST
TOWEL $4.95
SOAP $0.95
SHAMPOO $1.25
[ESC] [F3] [SEARCH]
  
```

Matching text


 

 
- You can switch back to the index display from the data display by pressing **DISP CHNG** again.


### To insert a new Memo Mode data item between two items in memory

- Enter the Memo Mode.
- Use index search, initial character search, or mode search to find the data item you want to come after the new data item you are about to input.

-  3. Move the name of the data item you want to come after the new data item into the top line of the index display.
-  4. Input the new data item using the same procedures described in steps 2 through 4 on page 40.
-  5. Press **SHIFT** followed by **SET** to store the new data item.
- If you press **SET** without pressing **SHIFT**, the new data item is automatically stored at the end of the data already existing in memory. The **SHIFT** key operation tells the SF-5100/SF-5300 to store the new data above the data item you selected in step 3 above.

### To edit a Memo Mode data item

-  1. Enter the Memo Mode.
-  2. Use index search, initial character search, or mode search to find the data item you want to edit.
-  3. Move the name of the data item you want to edit into the top line of the index display.
- At this point, you may want to switch to the full data display by pressing **DISP CHNG**. The following steps are the same regardless of whether you are continuing from the index display or the data display.
-  4. Press **FUNC** once to display the first function menu.

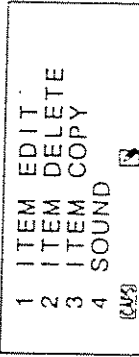
 

 



5. Press 1 to select **ITEM EDIT**.

- To clear the function menu without selecting anything, press **ESC**.
6. Make any changes you want using the procedures described on page 21.
- To cancel the editing operation without making any changes, press **ESC** or **CLEAR**.
7. After making the changes you want, press **SET** to store the data item with its new changes.




### To delete a single Memo Mode data item

-  1. Enter the Memo Mode.
-  2. Use index search, initial character search, or mode search to find the data item you want to delete.
-  3. Move the name of the data item you want to delete into the top line of the index display.
- At this point, you may want to switch to the full data display by pressing **DISP CHNG**. The following steps are the same regardless of whether you are continuing from the index display or the data display.
-  4. Press **FUNC** once to display the first function menu.

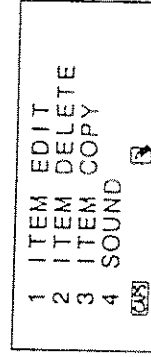

- 2
- Press 2 to select ITEM DELETE.
    - To clear the function menu without deleting anything, press ESC.

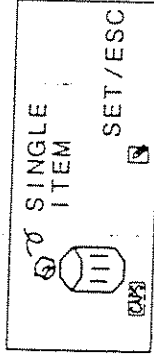


- 3
- Press SET to clear the data item you selected or ESC to abort the operation without deleting anything.
    - Remember that the delete operation cannot be undone. Make sure that you really don't need a data item before you delete it.

SET/ESC


### To delete all Memo Mode data items that are not mark protected

- 3
- Enter the Memo Mode.
  - Press FUNC twice to display the second function menu.

FUNC/FUNC

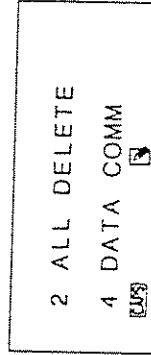

- 2
- Press 2 to select ALL DELETE.
    - To clear the function menu without deleting anything, press ESC.

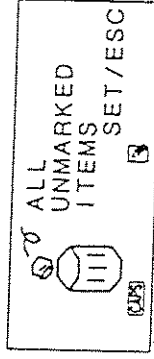

- 4
- Press SET to delete all data items that are not mark protected or ESC to abort the operation without deleting anything.
    - Remember that the delete operation cannot be undone. Make sure that you really don't need the unmarked data before you delete it.

SET/ESC

## Using the Calendar

The calendar of the SF-5100/SF-5300 is pre-programmed to display full-month calendars of any month from January 1901 through December 2099. Helpful markers appear on the calendar display to show you for what days during the month you have appointments scheduled (page 74).

### To display the calendar



Press CALENDAR to display the calendar.

Year	92	1	2	3	4
Month	5	6	7	8	9
	12	13	14	15	16
	19	20	21	22	23
	26	27	28	29	30
					31

- The dates on each calendar are shown starting from Sunday (on the far left) through Saturday (on the far right).
- The above procedure displays the calendar that contains the date currently set in the Home Time display (page 124).
- If you press CALENDAR while the Home Time display is shown, the calendar appears with the current date flashing within the calendar.
- When you press CALENDAR while you are in the Schedule Keeper, the calendar that contains the Schedule Keeper date you were viewing appears (see page 62 for details). In this case, the Schedule Keeper date you were viewing appears flashing within the calendar.

### To scroll through calendars



1. Press CALENDAR to display the calendar.
  2. Use the  $\Delta$  and  $\nabla$  cursor keys to scroll sequentially through the calendars. Holding down either key scrolls at high speed.
- The above procedure works only when the date cursor is not flashing in the calendar. To clear the date cursor from the calendar, press ESC.



### About the date cursor.....

The date cursor flashes at a date in a calendar to indicate that the date is selected.

If a calendar is already shown on the display, press the  $\triangleright$  cursor key to make the date cursor appear at the first date in the calendar, or the  $\triangleleft$  cursor key to make it appear at the last date in the calendar. You can also make the date cursor appear at any specific date within a displayed calendar by entering that date. For example, pressing 1 2 causes the 12th to start flashing in the displayed calendar.

You can move the date cursor around the calendar using the  $\Delta$ ,  $\nabla$ ,  $\triangleleft$ , and  $\triangleright$  cursor keys. If you press the  $\triangleleft$  cursor key while a far left date (Sunday) is selected, the date cursor moves up one line, to the far right date (Saturday). If you press the  $\triangleright$  cursor key while a far right date (Saturday) is selected, the date cursor moves down one line, to the far left date (Sunday).

If you press the  $\Delta$  cursor key while a date in the top line of a calendar is selected, the display changes to the previous month, with the date cursor located in the bottom line. If you press the  $\nabla$  cursor key while a date in the bottom line of a calendar is selected, the display changes to the following month, with the date cursor located in the top line.

Holding down any of the cursor keys moves the date cursor at high speed.

To clear the date cursor from a calendar, press ESC.

### To display a calendar from the Calculator

1. Enter the Calculator mode.
  2. Input the year, press DATE/TIME and then input the month of the calendar you want to display. Finally, press CALENDAR.
- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.

### To specify a month for display in the Calendar mode

1. While a calendar is displayed, press CLEAR.

Prompt for year entry

YEAR ?  
 -

92 DATE/TIME

2. Input the year of the calendar you want to display and press DATE/TIME.

- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.

Prompt for month entry

MONTH ?  
 1992/ -

6 CALENDAR

3. Input the month of the calendar you want to display and press CALENDAR to display the calendar for the month you specified.

### To specify a month and date for display in the Calendar mode

1. While a calendar is displayed, press CLEAR.

Prompt for year

YEAR ?  
 -

92 DATE/TIME

2. Input the year of the calendar you want to display and press DATE/TIME.

- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.
- Here, we will highlight the date June 12, 1992.

Prompt for month entry

MONTH ?  
 1992/ -

6 DATE/TIME

3. Input the month of the calendar you want to display and press DATE/TIME.

Prompt for date entry

DATE ?  
 1992/ 6/ -

12 

4. Input the date and press **CALENDAR** to display the calendar for the month you specified. The date cursor is flashing within the calendar at the date you specified.
  - In this step, you can press **DATE/TIME** in place of **CALENDAR**.

### To highlight and unhighlight specific dates

1. Press **CALENDAR** to display the calendar.
2. Display the calendar that contains the date you want to highlight.
  - You can either scroll through calendars using **Δ** and **∇** (page 53), or you can specify the month (page 54).
3. Use the date cursor to select the date that you want to highlight.
  - For details on how to use the date cursor, see "About the date cursor" on page 53.
4. Press **SET** to highlight the date currently selected by the date cursor.
  - To unhighlight the date, press **SET** again.
5. After you highlight the dates you want, press **ESC** to clear the date cursor from the calendar.

### To highlight days of the week for multiple months

1. Press **CALENDAR** to display the calendar.
2. Display the calendar from where you want highlighting to start.
  - You can either scroll through calendars using **Δ** and **∇** (page 53), or you can specify the month (page 54).
  - Here, we will start from May 1992.



3. Press **FUNC** twice to display the second function menu.

```

2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
  
```



4. Press **3** to select **MULTIPLE HL**.
  - To clear the function menu without highlighting anything, press **ESC**.

```

HIGHLIGHT SET
1992 / 5 ~
TO YEAR ?
  
```

92 

5. Input the year of the calendar where you want the highlighting to end and press **DATE/TIME**.
  - You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.
  - Here, we will specify June 1992 as the ending month.

```

HIGHLIGHT SET
1992 / 5 ~
1992 /
TO MONTH ?
  
```

6 

6. Input the month of the calendar where you want the highlighting to end and press DATE/TIME.

```

HIGHLIGHT SET
— SUN MON TUE WED
  THU FRI SAT
  
```

SUN flashes because it is selected.



7. Use the cursor keys to select the day of the week you want to highlight.

- Here, we will highlight all Sundays in May and June 1992.



8. Press MARK to specify the currently selected day of the week for highlighting.

- When a day of the week is specified for highlighting, its abbreviation appears highlighted (reverse field) on the display.

```

HIGHLIGHT SET
— SUN MON TUE WED
  THU FRI SAT
  
```

SUN specified for highlighting

- To deselect (unhighlight) a day of the week, select it and press MARK.

9. After specifying all of the days of the week you want highlighted during the period you specified in steps 2 through 5 above, press SET to highlight the applicable dates.



## To unhighlight all dates in a specific month

1. Press CALENDAR to display the calendar.
2. Display the calendar for the month whose dates you want to unhighlight.
  - You can either scroll through calendars using  $\Delta$  and  $\nabla$  (page 53), or you can specify the month (page 54).
  - Here, we will unhighlight the dates in June 1992.
3. Press FUNC once to display the first function menu.



```


2 MONTH DELETE
4 SOUND
  
```

2

4. Press 2 to select MONTH DELETE.

- To clear the function menu without deleting anything, press ESC.

```

DATE HIGHLIGHTS

SET/ESC
  
```



5. Press SET to clear all highlights from the month you specified in step 2 above or ESC to abort the operation without deleting anything.

- Remember that the delete operation cannot be undone. Make sure that you really don't need highlighting before you delete it.

**To unhighlight all dates up to a specific month**

1. Press **CALENDAR** to display the calendar.
2. Press **FUNC** twice to display the second function menu.

```

2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
  
```

3. Press 2 to select ALL DELETE.
- To clear the function menu without unhighlighting anything, press **ESC**.

```

HIGHLIGHT DELETE
1901/ 1-
TO YEAR ?
  
```

4. Input the year of the calendar where you want the unhighlighting to end and press **DATE/TIME**.
- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.
  - Here, we will specify June 1992 as the ending month.

```

HIGHLIGHT DELETE
1901/ 1-
1992/
TO MONTH ?
  
```

6 **ENT**

5. Input the month of the calendar where you want the unhighlighting to end and press **DATE/TIME**.

```

ALL DATE
HIGHLIGHTS
SET /ESC
  
```

6 **SET/ESC**

6. Press **SET** to clear all highlights from January 1901 up to the month you specified in steps 4 and 5 above, or **ESC** to abort the operation without deleting anything.
- Remember that the delete operation cannot be undone. Make sure that you really don't need highlighting before you delete it.



## Using the Schedule Keeper

The Schedule Keeper lets you store data about your appointments to keep you on time all the time. It lets you input the time and a description of your appointment. You can even set Schedule Alarms that remind you when it is time to get ready for your appointments. When you input data for a specific date, a marker appears next to that date on the calendar (page 74) to let you keep track of your schedule at a glance. Each Schedule Keeper data can contain up to 384 characters, including newline symbols.

### To enter the Schedule Keeper from outside Calendar display

- ① Press **SCHEDULE** to enter the Schedule Keeper.
- At this time, the Schedule Keeper screen for the current date set on the Home Time display appears.

### To specify a Schedule Keeper date from the Calendar display

- ①
  1. Press **CALENDAR** to display the calendar.
  2. Display the calendar that contains the date whose Schedule Keeper data you want to input or recall.
    - You can either scroll through calendars using  $\Delta$  and  $\nabla$  (page 53), or you can specify the month (page 54).
  3. Use the date cursor to select the date whose Schedule Keeper data you want to input or recall.
    - For details on how to use the date cursor, see "About the date cursor" on page 53.
  4. Press **SCHEDULE** to display the Schedule Keeper data for the date you selected on the calendar with the date cursor.

### About date and time input.....

When working in the Schedule Keeper, there are a number of procedures that require you to input times and dates. Note the following general guidelines for inputting times and dates.

#### Times

- The input format you use for the hours depends on the Home Time setting (page 125). Use 12-hour format if the Home Time is set for 12-hour format or 24-hour format if the Home Time is set for 24-hour format. For details on switching between 12-hour and 24-hour formats, see page 127.
- You do not have to input the minutes if they are "00". The Schedule Keeper automatically assumes "00" as the minutes if you do not input anything.
- If you are using 12-hour time format, press **A** to specify AM or **P** to specify PM.
- All illegal input (26 for the hour, 65 for the minutes) is ignored.

#### Dates

- Years can be input within the range of 1901 through 2099.
- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.
- All illegal input (13 for the month, 35 for the date) is ignored.

### To specify a Schedule Keeper date while in the Schedule Keeper



1. Press **SHIFT** followed by **CLEAR**.

Prompt for year entry

YEAR ? -- <small>(25)</small>
-------------------------------------

92 [F1] [F2]

2. Input the year of the date you want to display and press DATE/TIME.

- Here, we will specify the date June 12, 1992.

Prompt for month entry

MONTH ?  
1992/ [CLR]

6 [F1] [F2]

3. Input the month of the date you want to display and press DATE/TIME.

Prompt for date entry

DATE ?  
1992/ 6/ [CLR]

12 [C] [CLR]

4. Input the date and press SCHEDULE to enter the Schedule Keeper with the display showing the date you specified.

- In this step, you can press DATE/TIME in place of SCHEDULE.

### About Schedule Keeper data and initial displays....

Schedule Keeper information is stored under dates, with each date acting as a unit called a *data item*. Each data item is made up of a number *data entries*.

In the Schedule Keeper, the appearance of the currently displayed date depends on whether or not Schedule Keeper data is already stored under that date.

No data stored

1992 / 7 / 29 WED  
TIME ?  
[CLR]

Data already stored  
(Index Display)

1992 / 7 / 29 WED  
8:00A WORK  
[CLR]

Schedule Keeper  
data entry

In the case of the display on the right (data already stored), you can display the "TIME ?" prompt by pressing CLEAR.

The above are both *index displays*, which are explained in detail on page 73.

### To input Schedule Keeper data

[C] [CLR]

1. Enter the Schedule Keeper and display the date for which you want to input data.

[CLR]

2. Press CLEAR.

- You can skip this step. If the currently displayed Schedule Keeper date does not already contain data, the "TIME ?" prompt is displayed automatically. Even if the Schedule Keeper date already contains data, the display changes to an input screen as soon as you enter numbers or letters.

Prompt for time data input

1992 / 7 / 29 WED  
TIME ?  
[CLR]

10 [SET] 45

3. Input the starting time of the appointment, pressing DATE/TIME between the hour and the minutes.

- To create a Schedule Keeper data entry with a description only (without any start time or end time), press NEXT (to advance directly to step 7 below) without entering a time.
- In the example here, we will input a data entry for a meeting to be held from 10:45 AM to 12:30 PM on July 28, 1992.

[SET] [PIL]

4. Press DATE/TIME again.

Start time (entered above)	1992 / 7 / 29 WED	Indicates AM (displayed in 12-hour format only; "P" dis- played for PM)
Prompt for end time input	10:45A	
	TIME ?	
	[PIL]	

- To create a Schedule Keeper data entry with a start time and description only (without any end time), press NEXT (to advance directly to step 7 below) instead of DATE/TIME.
  - To create a Schedule Keeper data entry with a start time only (without any end time or description), press SET (to complete the input procedure) instead of DATE/TIME.
  - While the above screen is displayed, pressing < returns to the display in step 3 above, and pressing > changes to the display in step 7 below.
5. Input the ending time of the appointment, pressing DATE/TIME between the hour and the minutes.

12 [SET] 30 [P]

- Note that here we are using 12-hour format, so we pressed P to specify PM.

6. Press NEXT.

[NEXT]

Start time	1992 / 7 / 29 WED	
	10:45A	
End time	12:30P	Prompt for description of appointment
	[PIL]	

- To create a Schedule Keeper data entry with a start time and end time only (without any description), press SET (to complete the input procedure) instead of NEXT.
  - While the above screen is displayed, pressing the < cursor key returns to the display in step 5 above.
7. Input a description of the appointment.
- For full details on how to input letters, numbers, and symbols, see page 21.
  - If you want to set a schedule alarm, press NEXT after inputting the description. See "To set a schedule alarm when inputting data" on page 70 for details.
8. After inputting the data, press SET to store it into memory.

MEETING

[SET]

**About Schedule Keeper data.....**

There are four types of data that can be stored in a Schedule Keeper data.

- **Reminder Mode data**

This type of data is created using the Reminder Mode described on page 94.

- **No time data**

This type of data includes a description of the appointment, but no start time or end time.

- **Start time only data**

This type of data includes a start time only, but no end time. It may or may not include a description.

- **Start time ~ end time data**

This type of data includes both a start time and an end time. It may or may not include a description.

When you have more than one entry within the same date in the Schedule Keeper, the data is sorted at shown below.

Sequence	Time Data	Remarks
1	Reminder	Reminder data comes first.
2	None	When there are more than one no time data entries, they are arranged in the order they are input.
3	None	When there are more than one data entries with the same time, they are arranged in the order they are input.
4	10:00	Start time ~ end time data comes last, sorted into chronological order.
5	10:00	
6	10:00 ~ 11:00	
7	10:00 ~ 12:00	
8	10:30 ~ 12:45	

**About mark protection.....**

Once you mark protect a data item, it will not be deleted when you perform the all delete operation described on page 91. This makes it easy to clean up your data quickly and easily, without losing data items you would rather keep.

**To mark protect and unprotect a Schedule Keeper data entry**

**MARK**

Press MARK.

```

1992 / 7 / 29 WED
- 10:45A MEETING -
|
12:30P
(MARK)
  
```

Indicates mark protection. This indicator is cleared when data item is unprotected.

- You can mark protect/unprotect each individual entry under a date as you are inputting it (page 65) or as you are editing it (page 84).
- Each time you press MARK, the data entry you are currently inputting or editing switches between being mark protected and unprotected.

**About schedule alarms.....**

You can set schedule alarms for Schedule Keeper data entries to help you keep on time for important appointments. When a schedule alarm time is reached, an alarm sounds for 20 seconds and the corresponding Schedule Keeper data appears on the display (even if the SF-5100/SF-5300 is switched off). Press any key to stop the alarm and then press ESC to return to the display that was shown before the alarm began to sound.


Note the following important points when you are using a schedule alarm.

- The alarm indicator and time are automatically cleared after the alarm time is reached.
- Schedule alarms can only be set for Schedule Keeper data entries that include time data. If you set a schedule alarm for a Schedule Keeper entry with time data and then later clear the time data, the schedule alarm is also cleared automatically.
- If a schedule alarm time is reached while you are entering or editing the data entry for that schedule alarm, the alarm does not sound until you complete work on the data item (by pressing SET).
- The schedule alarm does not sound if the schedule alarm time is reached during data communications (page 147).
- The alarm may fail to sound if battery power is too low.
- If the message "SECRET DATA !" appears on the display, it means that a schedule alarm time set in the Secret Area (page 115) was reached.

### To set a schedule alarm when inputting data


1. Enter the Schedule Keeper and input data, using the procedures described in steps 1 through 7 under "To input Schedule Keeper data" on page 65.
  - To set a schedule alarm for an existing Schedule Keeper data entry, see page 87.
2. After inputting the description, press NEXT.
  - You can press the NEXT without inputting anything for the description.

[SET]

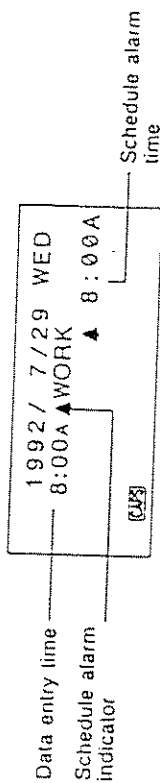

7 [▷] 45

3. Input the schedule alarm time. Use the ▷ and ◁ cursor keys to move between the hour and minutes setting.

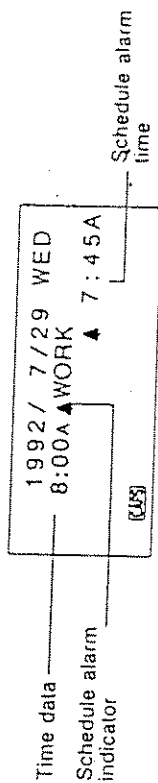

- You can skip this input if you want the schedule alarm time to be the same as that for the schedule data time.
  - Whenever the schedule alarm setting is shown on the display, pressing DEL clears the alarm time and displays the prompt "ALM TIME ?" Input the alarm time using the same procedure described above.
  - In the example here, we input a schedule alarm time of 7:45 AM.
4. After inputting the data, press SET to store it into memory.

[SET]

```

1992 / 7 / 29 WED
8:00A ▲WORK
    
```

[OK]

Schedule alarm indicator

- Note that the schedule alarm setting is cleared from the display when you press SET.
- If you attempt to set a schedule alarm time that is already passed, the message "ALARM TIME ALREADY PASSED I" appears on the display. Then the data is stored without a schedule alarm.
- If you attempt to set a schedule alarm time that is already set for another data entry, the message "ALARM TIME ALREADY USED I" appears on the display. Press ▷ or ◁ to display the schedule alarm to change it.

### To switch schedule alarms on and off

1. Press FUNC once to display the first function menu.
 

```

[4]
    
```
2. Press 4 to select the SOUND menu item.
 

```

[4] / [▽]
    
```
3. Use Δ and ▽ to select SCHED AL (page 19).
 

```

[4] / [▷]
    
```
4. Use ◁ and ▷ to switch Schedule Alarm on and off.
5. Press SET to store your setting and clear the SOUND menu.
 

```

[SET]
    
```

### About Schedule Keeper displays.....

There are three types of displays used with the Schedule Keeper. The *data display* format shows all of the data stored under a specific date.

#### Data Display

```

1992 / 7 / 29 WED
10:45A MEETING
      |
12:30P
    [OK]
    
```

You can scroll through a data display line-by-line using the Δ and ▽ cursor keys. If you press SHIFT before Δ and ▽, the display scrolls data entry by data entry.

The *index display* format that shows you an abbreviated list of Schedule Keeper data stored under a specific date. Data entries are abbreviated to allow one line per entry, showing only the starting time of each appointment (if a starting time is set), and the first 10 characters of the description. This helps you to quickly find the information you need.

#### Index Display


```

1992 / 7 / 29 WED
8:00A ▲WORK
10:45A MEETING
6:00P DINNER
    [OK]
    
```

You can scroll through an index display data entry-by-data entry using the Δ and ▽ cursor keys. If you press SHIFT before Δ and ▽, the display scrolls one screen (three lines) at a time.

You can switch between the data display and the index display formats by pressing DISP CHNG.

The Schedule Keeper also works together with the Calendar display. Whenever you store data in the Schedule Keeper, the corresponding date on the Calendar display (page 52) is marked. This lets you look at a Calendar display and see at a glance what days have appointments.

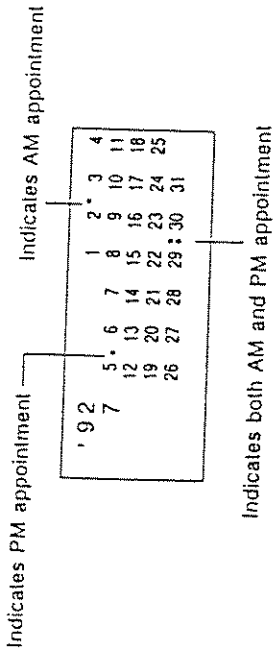

### Note

The initial character search and mode search procedures used in the Schedule Keeper will also display any Reminder Mode data (page 94) that matches the search data you specify.

## To locate Schedule Keeper data using index search

1. Enter the Schedule Keeper.
  - At this time the Schedule Keeper screen for the current date set on the Home Time display appears. See page 64 for details on the two types of initial Schedule Keeper screens.

```
1992/ 7/29 WED
8:00A ▲WORK
10:45A MEETING
3:00P DISCUSSIO
[CRS]
```

2. Note that the data entries that appear on the display are abbreviated to allow one line per entry. This is the index display format, which shows only the starting time of each appointment (if a starting time is set), and the first 10 characters of the description.
  - Press  $\Delta$  or  $\nabla$  to scroll through the data line-by-line.
  - If you at the top of the data stored under a date when you press  $\Delta$ , the date changes to the previous date. If you are at the bottom of the data stored under a date when you press  $\nabla$ , the date changes to the next date. Holding down  $\nabla$  or  $\Delta$  scrolls at high speed.

## How to find data stored in memory.....

In addition to the procedures we already described for locating specific dates in the Schedule Keeper ("To specify a Schedule Keeper date from the Calendar display" on page 62; and "To specify a Schedule Keeper date while in the Schedule Keeper" on page 63), you can also use the following search methods to recall data.

With *index search*, you scroll through an index display of Schedule Keeper data until you find the one you want. With *initial character search*, you specify the data you are looking for by inputting either the time the appointment is scheduled or the letters that begin its description.

With *mode search*, you specify the data you are looking for by inputting either a time or characters that might occur anywhere in the item.

Each of the above search procedures produces an index display of the found data entries. You can then use DISP CHNG to switch the display to show all of the details of the data entry you want.

- You can also scroll one screen (three lines) at a time by pressing SHIFT Δ or SHIFT ∇.
  - See page 68 for details on the sorting sequence of the data.
- When the data entry you are looking for is in the second line of the display, you can press DISP CHNG to switch to a more detailed data display.

DISP CHNG

```

1992 / 7 / 29 WED
10:45A MEETING
3:00P DISCUSSIO
6:00P DINNER
    
```

Pressing DISP CHNG shows detailed data display for "10:45A MEETING."

- The data display shows the start time, and the description.
- You can switch back to the index display from the data display by pressing DISP CHNG again.

### To use initial character search to locate a description

SEARCH

- Enter the Schedule Keeper.
- At this time, you could press CLEAR to display the "TIME ?" prompt.
- You can skip step 2 and begin input directly from the initial Schedule Keeper screen.
- Enter the initial characters of the description for the data entry you want to look for.

- You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed. If you input a single letter, you might end up recalling a large number of data entries.

SEARCH

- Press SEARCH to start the search. An index display of the first date containing data whose initial description characters match your input appears on the display.

```

1992 / 7 / 29 WED
10:45A MEETING
    
```

Indicates this index display is result of a search operation.

- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no data entry matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.
- When one of the above error messages appears, you can press ESC, Δ, or ▷ to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- Scroll through the index display using Δ and ∇.

Δ / ∇

DISP CHNG

- When the data entry you are looking for is in the second line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.



### To use initial character search to locate a time

1. Enter the Schedule Keeper.
2. At this time, you could press CLEAR to display the "TIME ?" prompt.
- You can skip step 2 and begin input directly from the initial Schedule Keeper screen.
3. Input the starting time of the data entry you want to look for, pressing DATE/TIME between the hour and the minutes.
4. Press SEARCH to start the search. An index display of the first date containing data whose time matches your input appears on the display.

10 [DATE/TIME] 45

[SEARCH]

```

1992 / 7 / 29 WED
10:45A MEETING
[DATE/TIME] [SEARCH]
  
```

Indicates this index display is result of a search operation.

- This search operation locates all the start times that match the time you input in step 3.
- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no data entry matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.

- When one of the above error messages appears, you can press ESC, <, or > to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- 5. Scroll through the index display using Δ and ∇.
- 6. When the data entry you are looking for is in the second line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.

[Δ] / [∇]

[DISP CHNG]

### To use mode search to locate a description

1. Enter the Schedule Keeper.
2. At this time, you could press CLEAR to display the "TIME ?" prompt.
- You can skip step 2 and begin input directly from the initial Schedule Keeper screen.
3. Enter the characters of the description for the data entry you want to look for.
- You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed. If you input a single letter, you might end up recalling a large number of data entries.
4. Press SHIFT followed by SEARCH to start the search. An index display of all the data entries that contain your input appears on the display.

[C]

[CLEAR]

JOHN

[SHIFT] [SEARCH]

```

1992 / 7 / 31  FRI
6:00P  MEET  JOHN
[ESC]

```

Indicates this index display is result of a search operation.

- With mode search, all entries are checked for the text you specify.
- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no data entry matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.
- When one of the above error messages appears, you can press ESC, <, or ▷ to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- 5. Scroll through the index display using Δ and ∇.
- 6. When the data entry you are looking for is in the second line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.

Δ/∇  
DISP CHNG

## To use mode search to locate a specific time

1. Enter the Schedule Keeper.
2. At this time, you could press CLEAR to display the "TIME ?" prompt.
- You can skip step 2 and begin input directly from the initial Schedule Keeper screen.
3. Input the time of the data entry you want to look for, pressing DATE/TIME between the hour and the minutes.
4. Press SHIFT followed by SEARCH to start the search. An index display of all the data entries that match your specification appears on the display.

Ⓢ CLEAR

6 [ENT] 00 [P]

SHIFT SEARCH

```

1992 / 7 / 29  WED
6:00P  DINNER
[ESC]

```

Indicates this index display is result of a search operation.

- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no data entry matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.

 
- When one of the above error messages appears, you can press ESC, <, or > to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- Scroll through the index display using Δ and ∇.
- When the data entry you are looking for is in the second line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.



**To use mode search to locate all times within a specific range**



- Enter the Schedule Keeper.
- At this time, you could press CLEAR to display the "TIME ?" prompt.
- You can skip step 2 and begin input directly from the initial Schedule Keeper screen.
- Input the start time of the range you want to look for, pressing DATE/TIME, between the hour and the minutes.




- Press DATE/TIME again.
- Input the end time of the range you want to look for, pressing DATE/TIME between the hour and the minutes.



- Press SHIFT followed by SEARCH to start the search. An index display of all the data entries that match your specification appears on the display.

 - To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no data entry matches your specification, the message "NOT FOUND!" appears on the display.
- If there is no data stored in memory, the message "NO DATA!" appears on the display.
- When one of the above error messages appears, you can press ESC, <, or > to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- Scroll through the index display using Δ and ∇.
- When the data entry you are looking for is in the second line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.



**About mode searches for times.....**

The following illustrates how the mode search looks for data according to time specifications you make.

**Data Stored in Memory:**

- 10:00 AM
- 10:00 AM ~ 11:00 AM
- 10:30 AM
- 10:30 AM ~ 12:00 PM
- 11:00 AM

**Mode Search Specification (specific time): 10:30 AM**

Items found:

10:00 AM ~ 11:00 AM  
 10:30 AM  
 10:30 AM ~ 12:00 PM

**Mode Search Specification (time range):**

10:00 AM ~ 11:00 AM

Items found:

10:00 AM  
 10:00 AM ~ 11:00 AM  
 10:30 AM  
 10:30 AM ~ 12:00 PM

**To edit a Schedule Keeper data entry**

1. Enter the Schedule Keeper.
2. Use index search, initial character search, or mode search to find the data entry you want to edit.

- You cannot use this procedure to edit Reminder Mode data (page 94).



3. Move the data you want to edit into the second line of the index display.

- At this point, you may want to switch to the full data display by pressing **DISP CHNG**. The following steps are the same regardless of whether you are continuing from the index display or the data display.



4. Press **FUNC** once to display the first function menu.

1 ITEM EDIT  
 2 ITEM DELETE  
 3 ITEM COPY  
 4 SOUND  
 (DIS)



5. Press 1 to select ITEM EDIT.

- To clear the function menu without selecting anything, press ESC.
6. Make any changes you want using the procedures described on page 21.
  - To cancel the editing operation without making any changes, press ESC or CLEAR.
  7. After making the changes you want, press SET to store the data entry with its new changes.

**To move a Schedule Keeper data to a different date**

1. Enter the Schedule Keeper.
2. Use index search, initial character search, or mode search to find the data entry that contains the data you want to move.

- You cannot use this procedure to edit Reminder Mode data (page 94).



3. Move the data you want to edit into the second line of the index display.

- At this point, you may want to switch to the full data display by pressing **DISP CHNG**. The following steps are the same regardless of whether you are continuing from the index display or the data display.

**FUNC** **FUNC**

4. Press **FUNC** twice to display the second function menu.

```

1 TO SECRET AREA
2 ALL DELETE
3 DATE CHANGE
4 DATA COMM
    
```

**3**

5. Press 3 to select **DATE CHANGE**.

- To clear the function menu without selecting anything, press **ESC**.

```

DATE CHANGE TO
YEAR ?
    
```

Prompt for year entry

**92** **ENT**

6. Input the year of the date you want to display and press **DATE/TIME**.

- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.
- Here, we will specify the date June 12, 1992.

```

DATE CHANGE TO
MONTH ?
1992/
    
```

Prompt for month entry

**6** **ENT**

7. Input the month of the date you want to display and press **DATE/TIME**.

```

DATE CHANGE TO
DATE ?
1992/ 6/
    
```

Prompt for date entry

**12** **ENT**

8. Input the date and press **DATE/TIME** to move the data and return to the Schedule Keeper, with the display showing the date you specified.

9. After making any changes you want in the data, press **SET** to store the data entry.

**SET**

### To set or change a schedule alarm for an existing data entry

- Enter the Schedule Keeper and recall the data for which you want to set a schedule alarm, using the procedures described in steps 1 through 5 under "To edit Schedule Keeper data entry" on page 84.
  - To set a schedule alarm for a new Schedule Keeper data entry, see page 70.
- Press **NEXT** until the schedule alarm time appears.
  - Remember that a data item must have time data before you can set a schedule alarm time.

```

1992/ 7/29 WED
8:00A WORK ▲ 8:00A
    
```

Time data  
Schedule alarm indicator

Schedule alarm time

7 [D] 45

- 3. Input the schedule alarm time. Use the  $\triangleright$  and  $\triangleleft$  cursor keys to move between the hour and minutes setting.

```

1992 / 7 / 29 WED
8:00A ▲ WORK
[URS]
    
```

Schedule alarm indicator

- Whenever the schedule alarm setting is shown on the display, pressing DEL clears the alarm time and displays the prompt "ALM TIME ?" Input the alarm time using the same procedure described above.
- In the example here, we input a schedule alarm time of 7:45 AM.

[SET]

- 4. After inputting the data, press SET to store it into memory.

```

1992 / 7 / 29 WED
8:00A ▲ WORK
3:00P DISCUSSIO
6:00P DINNER
[URS]
    
```

Schedule alarm indicator

- Note that the schedule alarm setting is cleared from the display when you press SET.
- If you attempt to set a schedule alarm time that is already passed, the message "ALARM TIME ALREADY PASSED !" appears on the display. Then the data is stored without a schedule alarm.

- If you attempt to set a schedule alarm time that is already set for another data entry, the message "ALARM TIME ALREADY USED !" appears on the display. Press  $\triangleright$  or  $\triangleleft$  to display the schedule alarm to change it.

### To view a data entry's current schedule alarm setting

1. Enter the Schedule Keeper and recall the date whose schedule alarm setting you want to view, using the procedures described in steps 1 through 3 under "To edit Schedule Keeper data entry" on page 84.
  - Note that you can use only the index display to view a dates schedule alarm setting.
2. Press NEXT to switch the index display to show the schedule alarm settings for all entries stored under the date you are viewing.
3. Use  $\Delta$  and  $\nabla$  to scroll through the entries and view the alarm times.
4. To clear the schedule alarm times, press NEXT again.

[F1]

[ $\Delta$ ]/[ $\nabla$ ]

[F1]

### To delete a specific schedule alarm

1. Enter the Schedule Keeper and recall the data for which you want to delete the schedule alarm, using the procedures described in steps 1 through 5 under "To edit Schedule Keeper data entry" on page 84.
2. Press NEXT until the schedule alarm time appears.
3. Press DEL to delete the currently set schedule alarm time.

[F1]

[DEL]

```

1992 / 7 / 29 WED
8:00A WORK
ALM TIME ?
[OK]

```

- [SET] 4. After deleting the alarm time, press SET to store the entry into memory.

### To delete a single Schedule Keeper data entry

- [C] 1. Enter the Schedule Keeper.
2. Use index search, initial character search, or mode search to find the data entry you want to delete.
- You cannot use this procedure to delete Reminder Mode data (page 94).
- [Δ]/[▽] 3. Move the data you want to delete into the second line of the index display.
- At this point, you may want to switch to the full data display by pressing DISP CHNG. The following steps are the same regardless of whether you are continuing from the index display or the data display.
- [FUNC] 4. Press FUNC once to display the first function menu.

```

1 ITEM EDIT
2 ITEM DELETE
3 ITEM COPY
4 SOUND
[OK]

```

[2]

5. Press 2 to select ITEM DELETE.

- To clear the function menu without deleting anything, press ESC.

```

SINGLE
ITEM
SET/ESC
[OK]

```

[SET]/[ESC]

6. Press SET to clear the data entry you selected or ESC to abort the operation without deleting anything.
- This operation deletes only the data entry in the second line of the Schedule Keeper display. It does not delete any of the other data stored under that date.
  - Remember that the delete operation cannot be undone. Make sure that you really don't need data before you delete it.

### To delete unmarked Schedule Keeper data entries up to a specific date

[C] [FUNC]/[FUNC]

- Enter the Schedule Keeper.
- Press FUNC twice to display the second function menu.

```

1 TO SECRET AREA
2 ALL DELETE
3 DATE CHANGE
4 DATA COMM
[OK]

```

[2]

## 3. Press 2 to select ALL DELETE.

- To clear the function menu without deleting anything, press ESC.

```

SCHEDULE DELETE
1901/ 1/ 1 TUE-
TO YEAR ?
[ESC]
  
```

- Note that the delete starts from January 1, 1901. This is the starting date of the calendar.
  - You cannot use this procedure to delete Reminder Mode data (page 94).
4. Input the year of the date up to which you want to delete Schedule Keeper data and press DATE/TIME.
- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.
  - Here, we will delete data up to the date June 12, 1992.

92 [ENT]

```

SCHEDULE DELETE
1901/ 1/ 1 TUE-
1992/
TO MONTH ?
[ESC]
  
```

Prompt for month entry

6 [ENT]

## 5. Input the month and press DATE/TIME.

```

SCHEDULE DELETE
1901/ 1/ 1 TUE-
1992/ 6/ -
TO DATE ?
[ESC]
  
```

Prompt for date entry

12 [ENT]

## 6. Input the date and press DATE/TIME.

```

ALL
UNMARKED
ITEMS
SET/ESC
[ESC]
  
```

[SET]/[ESC]

## 7. Press SET to clear all Schedule Keeper data from January 1, 1901 through the date you specified in steps 4 through 5 above, or ESC to abort the operation without deleting anything.

- Remember that the delete operation cannot be undone. Make sure that you really don't need data before you delete it.




## Using the Reminder Mode

The Reminder Mode helps you keep track of events that occur once a year, once a month, or once a day. You can input a reminder message which appears on the display at preset times. Each reminder can contain up to 384 characters, including newline symbols.

### To enter the Reminder Mode

Press **REMINDER** to enter the Reminder Mode. At this time the initial Reminder screen appears.

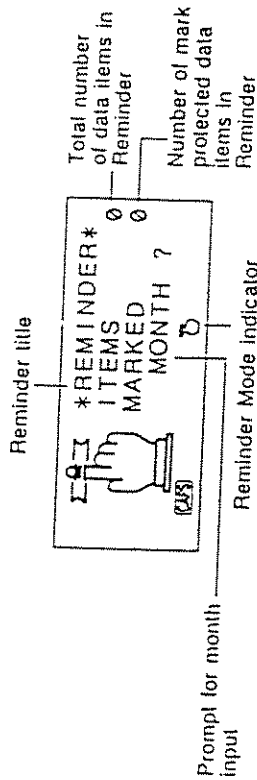

### About date and time input....

When working in the Reminder Mode, there are a number of procedures that require you to input times and dates. Note the following general guidelines for inputting times and dates.

#### Times

- The input format you use for the hours depends on the Home Time setting (page 125). Use 12-hour format if the Home Time is set for 12-hour format or 24-hour format if the Home Time is set for 24-hour format. For details on switching between 12-hour and 24-hour formats, see page 127.
- You do not have to input the minutes if they are "00". The Reminder Mode automatically assumes "00" as the minutes if you do not input anything.


- If you are using 12-hour time format, press **A** to specify AM or **P** to specify PM.
- All illegal input (26 for the hour, 65 for the minutes) is ignored.

#### Dates


- All illegal input (13 for the month, 35 for the date) is ignored.

### To input annual reminder data

1. Enter the Reminder Mode.
2. At this time, you could press **CLEAR** to clear the initial Reminder Mode screen and change to the month input screen.

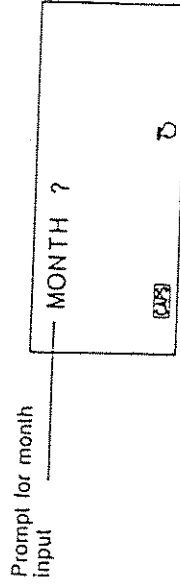


- You can skip this step and input the month directly from the initial Reminder Mode screen.
- 3. Input the month for which you want to set the annual reminder.
- In the example here, we will input a reminder for John's birthday on August 10.
- 4. Press **DATE/TIME**.

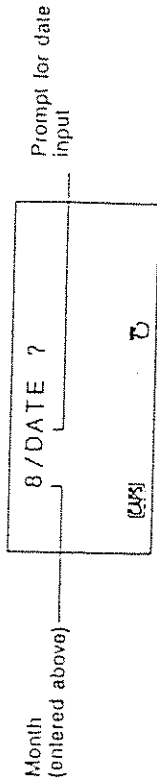

- While the above screen is displayed, pressing the  $\triangleleft$  cursor key returns to the display in step 3 above.
- 5. Input the date of the reminder.
- 6. Press NEXT.

10

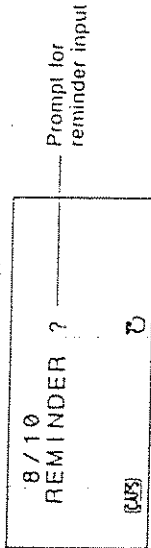

- If you want to set a reminder alarm, press DATE/TIME after inputting the date. See "To set a reminder alarm when inputting data" on page 102 for details.
- While the above screen is displayed, pressing the  $\triangle$  cursor key returns to the display in step 5 above.
- 7. Input a reminder message.
- For full details on how to input letters, numbers, and symbols, see page 21.
- 8. After inputting the data, press SET to store it into memory.

JOHN'S BIRTHDAY




**About Reminder Mode data.....**

Once you set a reminder, the text that you register along with it appears on the corresponding date in the Schedule Keeper. You can also set reminder alarms that sound at specific times on the corresponding dates to make doubly sure that you don't forget.

There are three types of reminders.

• **Annual reminder**


This type of reminder appears in the Schedule Keeper on the same date every year.

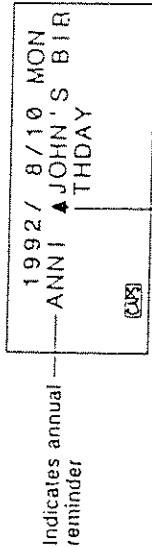

Indicates reminder alarm

• **Monthly reminder**

This type of reminder appears in the Schedule Keeper on the same date each month.

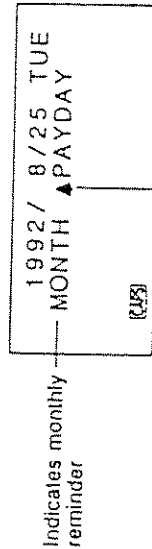

Indicates reminder alarm

• **Daily reminder**

This type of reminder does not appear in the Schedule Keeper, but sounds an alarm and displays its messages daily.

The following shows how Reminder Mode data is sorted when it is stored in memory.

Sequence	Reminder Data	Remarks
1	Annual	When there are more than
2	Annual	one no time data entries,
		they are arranged in the
		order they are input.
3	Monthly	
4	Daily	

### To input monthly reminder data

1. Enter the Reminder Mode.
2. At this time, you could press CLEAR to clear the initial Reminder Mode screen and change to the month input screen.
- You can skip this step and input the month directly from the initial Reminder Mode screen.
3. Input a dash for the month.
4. Press DATE/TIME.

-- / DATE ?

Prompt for date  
input

[CLR] [ ]

- While the above screen is displayed, pressing the  $\triangleleft$  cursor key returns to the display in step 3 above.
5. Input the date of the reminder.

25

- In the example here, we will input a reminder for Payday on the 25th of each month.
- 6. Press NEXT.

-- / 25

REMINDER ?

Prompt for  
reminder input

[CLR] [ ]

- If you want to set a reminder alarm, press DATE/TIME after inputting the date. See "To set a reminder alarm when inputting data" on page 102 for details.
- While the above screen is displayed, pressing the  $\triangleleft$  cursor key returns to the display in step 5 above.
- 7. Input a reminder message.
- For full details on how to input letters, numbers, and symbols, see page 21.
- 8. After inputting the data, press SET to store it into memory.

PAYDAY

[SET]

### To input daily reminder data

1. Enter the Reminder Mode.
2. At this time, you could press CLEAR to clear the initial Reminder Mode screen and change to the month input screen.
- You can skip this step and input the month directly from the initial Reminder Mode screen.
3. Input a dash for the month.
4. Press DATE/TIME.

[ ] [SET]



5. Input a dash for the date.
6. Press NEXT.

-- / --  
 REMINDER ?  
 (CPS)

Prompt for  
reminder input

- If you want to set a reminder alarm, press DATE/TIME after inputting the date. See "To set a reminder alarm when inputting data" on page 102 for details.
  - While the above screen is displayed, pressing the  $\Delta$  cursor key returns to the display in step 5 above.
7. Input a reminder message.
  - In the example here, we will input a reminder for Exercise Time daily.
  - For full details on how to input letters, numbers, and symbols, see page 21.
  8. After inputting the data, press SET to store it into memory.



#### About mark protection.....

Once you mark protect a reminder, it will not be deleted when you perform the all delete operation described on page 114. This makes it easy to clean up your data quickly and easily, without losing reminders you would rather keep.

#### To mark protect and unprotect a reminder

Press MARK.



8/10  
 JOHN'S BIRTHDAY  
 (CPS)

Indicates mark protection. This indicator is cleared when data item is unprotected.

- You can mark protect/unprotect each individual entry under a date as you are inputting it (page 95) or as you are editing it (page 112).
- Each time you press MARK, the reminder you are currently inputting or editing switches between being mark protected and unprotected.

#### About reminder alarms.....


You can set reminder alarms that sound at preset times on the dates you specify in a reminder. When a reminder alarm time is reached, an alarm sounds for 20 seconds and the corresponding Reminder Mode data appears on the display (even if the SF-5100/SF-5300 is switched off). Press any key to stop the alarm and then press ESC to return to the display that was shown before the alarm began to sound.

Note the following important points when you are using a reminder alarm.


- If a reminder alarm time is reached while you are entering or editing the reminder containing that reminder alarm, the alarm does not sound until you complete work (by pressing SET).
- The reminder alarm does not sound if the reminder alarm time is reached during data communications (page 147).
- The alarm may fail to sound if battery power is too low.
- If the message "SECRET DATA!" appears on the display, it means that a reminder alarm time set in the Secret Area (page 115) was reached.

## To set a reminder alarm when inputting data

1. Enter the Reminder Mode and input the month and date data you want.
  - To set a reminder alarm for an existing reminder, see page 112.
2. After inputting the date, press DATE/TIME.

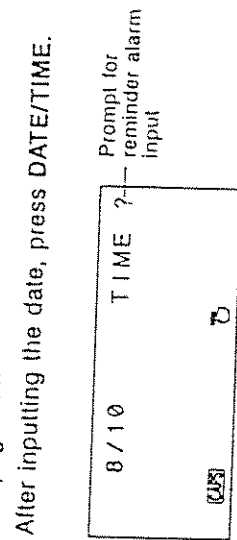

3. Input the reminder alarm time. Input the hour, press DATE/TIME, and then input the minutes. Use the  $\triangleright$  and  $\triangleleft$  cursor keys to move between the hour and minutes setting.

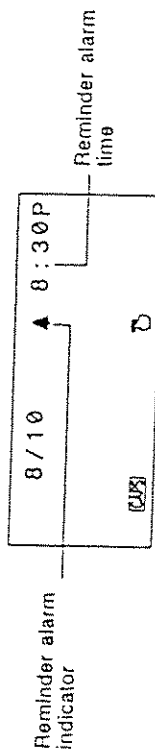

4. Press NEXT and then input a reminder message.
5. After inputting the data, press SET to store it into memory.

## To switch reminder alarms on and off

1. Press FUNC once to display the first function menu.
2. Press 4 to select the SOUND menu item.
3. Use  $\Delta$  and  $\nabla$  to select REMINDER (page 19).
4. Use  $\triangleleft$  and  $\triangleright$  to switch the reminder alarms on and off.
5. Press SET to store your setting and clear the SOUND menu.

FUNC

4


 $\Delta$ / $\nabla$  $\triangleleft$ / $\triangleright$ 

SET

## About Reminder Mode displays.....

The data display format shows all of the data stored under a specific reminder.

### Data Display

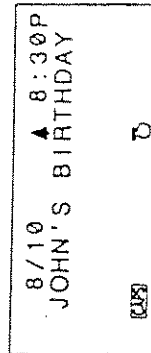

You can scroll through a data display line-by-line using the  $\Delta$  and  $\nabla$  cursor keys. If you press SHIFT before  $\Delta$  and  $\nabla$ , the display scrolls reminder-by-reminder.

The index display format that shows you an abbreviated list of Reminder Mode data. Reminders are abbreviated to two lines each, showing the month/date setting, the reminder alarm time (if set), and the first line of the reminder message.

## Index Display

```

8 / 10
JOHN'S BIRTHDAY
-- / 25
PAYDAY

```

You can scroll through an index display reminder-by-reminder using the  $\Delta$  and  $\nabla$  cursor keys. If you press SHIFT before  $\Delta$  and  $\nabla$ , the display scrolls 2 reminders at a time.

You can switch between the data display and the index display formats by pressing DISP CHNG.

In addition to the above, reminder messages also appear on each date for which they are set. If you set an annual reminder for August 10 for example, the corresponding reminder message appears within the Schedule Keeper on August 10 each year.

```

1992 / 8 / 10 MON
ANNI ← JOHN'S BIR
10:00A DISCUSSION

```

Indicates annual  
reminder

Indicates reminder alarm

## How to find data stored in memory.....

The following search capabilities let you recall Reminder Mode information quickly and easily.

With *index search*, you scroll through an index display of Reminder Mode data until you find the one you want.

With *initial character search*, you specify the data you are looking for by inputting either the date or the letters that begin its message.

With *mode search*, you specify the data you are looking for by inputting either a time or characters that might occur anywhere in the reminder.

Each of the above search procedures produces an index display of the found reminders. You can then use DISP CHNG to switch the display to show all of the details of the reminder you want.

## Note

Initial character search and mode search procedures can be used in the Schedule Keeper to search for Reminder Mode data.

## To locate a reminder using index search

1. Enter the Reminder Mode.  $\Delta/\nabla$
2. Press  $\Delta$  or  $\nabla$  to switch to an index display of existing reminders.  $\Delta/\nabla$ 
  - Pressing  $\nabla$  starts the index display from the first reminder (see page 98 for storage sequence), while pressing  $\Delta$  starts from the last reminder.
  - The index display shows the month, date, reminder alarm time (if set) and the first line of the reminder message only.  $\Delta/\nabla$
3. Scroll through the index display reminder-by-reminder using  $\Delta$  and  $\nabla$ . You can also scroll two reminders at a time by pressing SHIFT  $\Delta$  or SHIFT  $\nabla$ .  $\Delta/\nabla$
4. When the reminder you are looking for is in the top line of the display, you can press DISP CHNG to switch to the full data display.  $\Delta/\nabla$

Pressing DISP  
CHNG shows data  
display for this  
reminder

```

8 / 10   ▲ 8 : 30P
JOHN'S  BIRTHDAY
- - / 25
PAYDAY
(CURS)  ▸
  
```

- You can switch back to the index display from the data display by pressing DISP CHNG again.

### To use initial character search to locate a reminder message

- Enter the Reminder Mode.
- At this time, you could press CLEAR to display the "MONTH ?" prompt.
- You can skip step 2 and begin input directly from the initial Reminder Mode screen.
  - You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed. If you input a single letter, you might end up recalling a large number of data entries.

BIRTH

- Press SEARCH to start the search. An index display of the reminders whose messages start with characters that match your input appears on the display.

```

8 / 10
BIRTHDAY - JOHN
12 / 20
BIRTHDAY - MIKE
(CURS)  ▸
  
```

Indicates this index display  
is result of a search operation.

- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no reminder matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.
- When one of the above error messages appears, you can press ESC,  $\triangleleft$ , or  $\triangleright$  to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- Scroll through the index display using  $\triangle$  and  $\nabla$ .
- When the reminder you are looking for is in the top line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.

### To use initial character search to locate a date

- Enter the Reminder Mode.
- At this time, you could press CLEAR to display the "MONTH ?" prompt.
- You can skip step 2 and begin input directly from the initial Reminder Mode screen.
- Input the date of the reminder you want to look for, pressing DATE/TIME between the month and the date.

8  10

- Here, we will search for all annual reminders for 8/10. If the reminder you are looking for is a monthly reminder, input a dash for the month. If you want to find daily reminders, input dashes for the month and date.
  - After inputting the date, you could press **NEXT** and then enter a reminder message also as part of the search specification.
4. Press **SEARCH** to start the search. An index display of the reminders containing data whose date matches your input appears on the display.

```

8/10      ▲ 8:30P
JOHN'S BIRTHDAY
8/10
ANNIVERSARY
[ESC]
  
```

Indicates this index display  
is result of a search operation.

- To clear the **SEARCH** indicator from the display (and cancel the current search operation), press either **ESC** or **SEARCH**. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no reminder matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.
- When one of the above error messages appears, you can press **ESC**, **◀**, or **▶** to display your original specification. Make any necessary changes and try again. If you don't want to try again, press **CLEAR** to clear the error message.

 /   


5. Scroll through the index display using **▲** and **▼**.
  6. When the reminder you are looking for is in the top line of the display, you can press **DISP CHNG** to switch to the full data display.
- You can switch back to the index display from the data display by pressing **DISP CHNG** again.

### To use mode search to locate a reminder message


1. Enter the Reminder Mode.
2. At this time, you could press **CLEAR** to display the "MONTH ?" prompt.
- You can skip step 2 and begin input directly from the initial Reminder Mode screen.
3. Enter the characters of the reminder message for the reminder you want to look for.

JOHN

- You can input one or more characters. Remember that the more characters you input here, the more exact the search that will be performed. If you input a single letter, you might end up recalling a large number of data entries.

4. Press **SHIFT** followed by **SEARCH** to start the search. An index display of all the data entries that contain your input appears on the display.

```

8/10      ▲ 8:30P
JOHN'S BIRTHDAY
9/ 3
MEET JOHN
[ESC]
  
```

Indicates this index display  
is result of a search operation.



- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no reminder matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.
- When one of the above error messages appears, you can press ESC, ◀, or ▶ to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- 5. Scroll through the index display using Δ and ∇.
- 6. When the reminder you are looking for is in the top line of the display, you can press DISP CHNG to switch to the full data display.
- You can switch back to the index display from the data display by pressing DISP CHNG again.




### To use mode search to locate a date



1. Enter the Reminder Mode.
2. At this time, you could press CLEAR to display the "MONTH ?" prompt.
- You can skip step 2 and begin input directly from the initial Reminder Mode screen.
3. Input the date of the reminder you want to look for, pressing DATE/TIME between the month and the date.
- Here, we will search for all reminders for the 10th of any month. You could also input the month here.



- You cannot input a date specification such as "8/.". A date input is always required.
- After inputting the date, you could press NEXT and then enter a reminder message also as part of the search specification.
- 4. Press SHIFT followed by SEARCH to start the search. An index display of the reminders containing data whose date matches your input appears on the display.

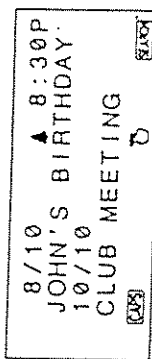

Indicates this index display is result of a search operation.


- To clear the SEARCH indicator from the display (and cancel the current search operation), press either ESC or SEARCH. The search operation is also canceled when you change modes, or by any data edit or input operation.
- If no reminder matches your specification, the message "NOT FOUND !" appears on the display.
- If there is no data stored in memory, the message "NO DATA !" appears on the display.
- When one of the above error messages appears, you can press ESC, ◀, or ▶ to display your original specification. Make any necessary changes and try again. If you don't want to try again, press CLEAR to clear the error message.
- 5. Scroll through the index display using Δ and ∇.



6. When the reminder you are looking for is in the top line of the display, you can press **DISP CHNG** to switch to the full data display.
- You can switch back to the index display from the data display by pressing **DISP CHNG** again.

### To edit a reminder

- Enter the Reminder Mode.
- Use index search, initial character search, or mode search to find the reminder you want to edit.
- Move the reminder you want to edit into the first line of the index display.
  - At this point, you may want to switch to the full data display by pressing **DISP CHNG**. The following steps are the same regardless of whether you are continuing from the index display or the data display.
- Press **FUNC** once to display the first function menu.

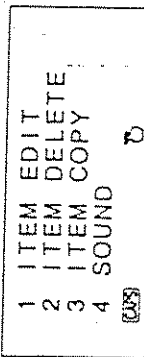


- Press 1 to select **ITEM EDIT**.
  - To clear the function menu without selecting anything, press **ESC**.
- Make any changes you want using the procedures described on page 21.
  - To cancel the editing operation without making any changes, press **ESC** or **CLEAR**.


- After making the changes you want, press **SET** to store the reminder with its new changes.

### To delete a single reminder

- Enter the Reminder Mode.
- Use index search, initial character search, or mode search to find the reminder you want to delete.
- Move the reminder you want to delete into the first line of the index display.
  - At this point, you may want to switch to the full data display by pressing **DISP CHNG**. The following steps are the same regardless of whether you are continuing from the index display or the data display.
- Press **FUNC** once to display the first function menu.

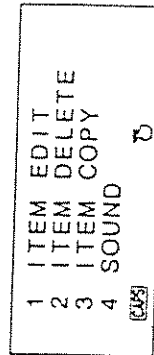

- Press 2 to select **ITEM DELETE**.
  - To clear the function menu without deleting anything, press **ESC**.

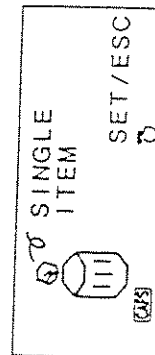

- Press SET to clear the reminder you selected or ESC to abort the operation without deleting anything.
- Remember that the delete operation cannot be undone. Make sure that you really don't need data before you delete it.

### To delete all reminders that are not mark protected

- Enter the Reminder Mode.
- Press FUNC twice to display the second function menu.

2 ALL DELETE  
4 DATA COMM

- Press 2 to select ALL DELETE.
- To clear the function menu without deleting anything, press ESC.

ALL UNMARKED ITEMS  
SET/ESC

- Press SET to delete all reminders that are not mark protected or ESC to abort the operation without deleting anything.
- Remember that the delete operation cannot be undone. Make sure that you really don't need unmarked data before you delete it.

## Using the Secret function

The Secret Function ensures that your personal data is kept private, but providing you with the means to restrict access to those who know your secret password. You can store Telephone Directory, Memo Mode, Schedule Keeper, and Reminder Mode data in the secret memory area.

### To create a secret memory area

- Enter the Telephone Directory, Memo Mode, Schedule Keeper, or Reminder Mode.
- Press to display the password input screen.


PASSWORD ?  
 - NEW ENTRY -

CASIO

- Enter the word you want to use as you secret password.
  - Here, we will input the password "CASIO".
  - You can use up to 40 letters, numbers and symbols in a password.
- For full details on how to input letters, numbers, and symbols, see page 21.
- Press again to store the password.

OK   
PASSWORD REGISTERED


- The above message remains on the display for about one second. Then the an initial secret memory area screen appears for the mode you selected in step 1 above. The following shows an example display for the Telephone Directory.

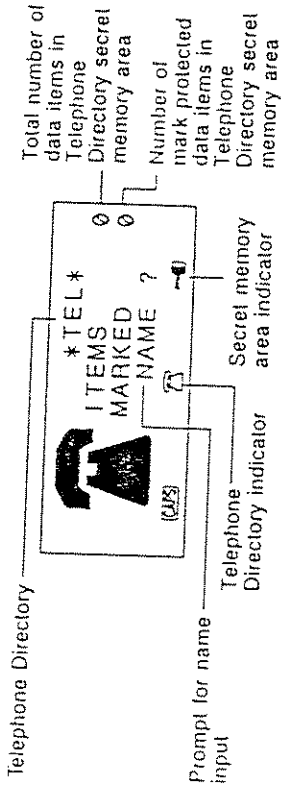

- While in the secret memory area, you can change modes, input data, edit data, recall data, and delete data using the procedures explained under each mode in this manual.
- To exit the secret memory area (and return to the open memory area), press **FUNC**.
  - At this time, the "key" indicator disappears from the display.

### To enter an existing secret memory area

- Enter the Telephone Directory, Memo Mode, Schedule Keeper, or Reminder Mode.
- Press **FUNC** to display the password input screen.

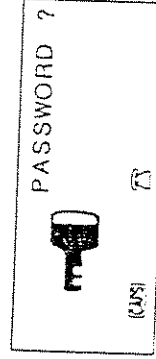

CASIO




- Enter the password.

- Press **FUNC** again to enter the secret memory area for the mode you selected in step 1 above.
  - If the password you enter in step 3 does not match the one that is registered, the message "PASSWORD MISMATCH!" appears.


### To edit an existing password



- While in the secret memory area, press **CLEAR**, followed by **FUNC** to display the currently registered password.

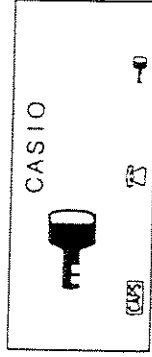

- Press **FUNC** once to display the first function menu.

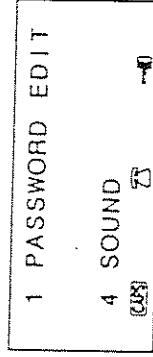


- Press 1 to select **PASSWORD EDIT**.

- The password reappears on the display with the cursor. Use the procedures described on page 21 to make any changes in the password you want.
- After editing the password, press **FUNC** to store it.




### To transfer data from the open memory area to the secret memory area

1. While not in the secret memory area, enter the Telephone Directory, Memo Mode, Schedule Keeper, or Reminder Mode.
2. Search for and display the data you want to move.
3. Press **FUNC** twice to display the second function menu.

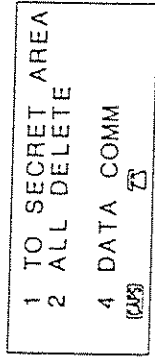

4. Press 1 to select TO SECRET AREA.
  - At this time, a prompt appears on the display asking you for the password registered for the secret memory area.
5. Enter the password.
6. Press **→**.

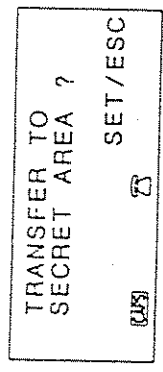


7. If the password you enter in step 5 does not match the one that is registered, the message "PASSWORD MISMATCH!" appears.
7. Press **SET** to transfer the selected data from the open memory area to the secret memory area, or **ESC** to abort the operation without transferring anything.


- When you transfer data to the secret memory area, it is automatically deleted from the open memory area.

### To transfer data from the secret memory area to the open memory area

1. Enter the Telephone Directory, Memo Mode, Schedule Keeper, or Reminder Mode.
2. Enter the secret memory area.
3. Search for and display the data you want to move.
4. Press **FUNC** twice to display the second function menu.

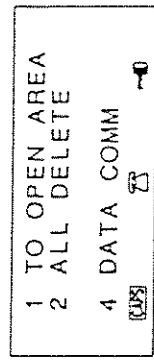

5. Press 1 to select TO OPEN AREA.

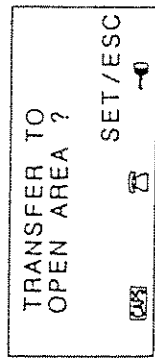

6. Press **SET** to transfer the selected data from the secret memory area to the open memory area, or **ESC** to abort the operation without transferring anything.
- When you transfer data to the open memory area, it is automatically deleted from the secret memory area.



## Using the Copy function

The Copy Function lets you duplicate selected data. This function helps to cut down input time when you have multiple data items with similar data. You simply copy the original and then make any necessary changes to create a new data item. You can use the Copy Function to copy Telephone Directory, Memo Mode, Schedule Keeper, and Reminder Mode data.

### To copy a data item

1. Enter the Telephone Directory, Memo Mode, Schedule Keeper, or Reminder Mode.
2. Search for and display the data you want to copy.
3. Press **FUNC** once to display the first function menu.

**FUNC**

```

1 ITEM EDIT
2 ITEM DELETE
3 ITEM COPY
4 SOUND
  
```

**3**

4. Press 3 to select ITEM COPY.

- At this time, the copy of the data you selected in step 2 above appears, along with the cursor.
- If you are copying Schedule Keeper data, the following screen appears at this point to ask you to specify the date where the data should be copied to.

```

ITEM COPY TO
YEAR ?
  
```

**DATE**

- Input the year, month, and date, following each entry by pressing **DATE/TIME**.
5. Use the editing procedures described on page 21 to make any changes you want in the copied data.
  6. After you are finished making changes, press **SET** to store the new data in memory.

**SET**

## PART 4 Timekeeping Functions

Your SF-5100/SF-5300 includes powerful timekeeping functions that help to keep you on time all time. The Home Time function lets you set the current time for your home, specifying 12-hour or 24-hour format, standard time or summer time, even your hometown name. The World Time function gives you instant access to the current time in any one of 29 time zones around the globe.


### Using the Home Time function

The Home Time function shows you the current time and date in the time zone you preset as your Home Time zone. You also can set a daily alarm that sounds at the same time each day.

#### About Home Time displays.....


There are three types of Home Time displays.

##### Home Time Display

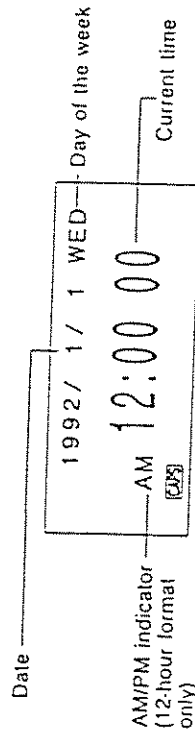


- Use **DISP CHNG** to switch between the Home Time display and the World Map display.
- Use **HOME TIME** to switch between the Home Time display and the Alarm display.

##### World Map Display

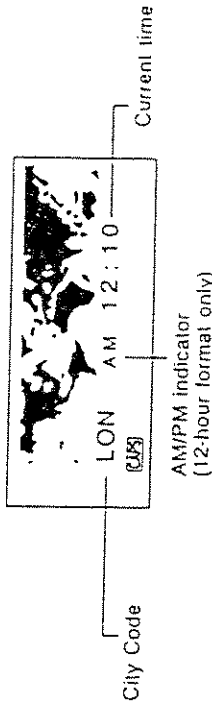

- Use **DISP CHNG** to switch between the Home Time display and the World Map display.
- Use **HOME TIME** to switch between the Home Time or World Map display and the Alarm display.

##### Alarm Display

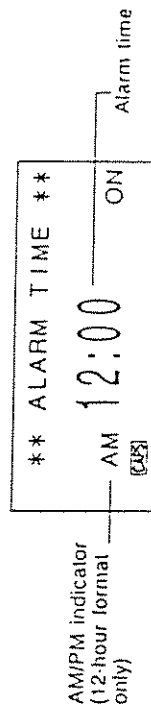

### To display the Home Time



Press **HOME TIME** to display the current Home Time.

- Use **DISP CHNG** to switch between the Home Time display and the World Map display.

## To set the Home Time zone

1. Display the current Home Time.
  - You can set the Home Time zone starting either from the Home Time display or the World Map display.
2. Display the function menu for the ZONE CHANGE operation.
  - If you are starting from the Home Time display, press **FUNC** twice to display the second function menu.

```

1 ZONE CHANGE
2 ZONENAME EDIT
3 DATE FORMAT
  
```

- If you are starting from the World Map display, press **FUNC** once to display the first function menu.

```

1 ZONE CHANGE
2 12/24 HOURS
3 DST ON/OFF
4 SOUND
  
```

3. Press 1 to select ZONE CHANGE.



- The current zone flashes on the World Map display. Its city code is also shown.
  - See page 139 for a complete list of available city codes.
4. Use the  $\triangleleft$  and  $\triangleright$  cursor keys to move the flashing time zone on the World Map. Note that the city code changes as you do.
  5. When the time zone that you want for the Home Time is flashing (and the city code you want is shown on the display), press **SET** register the new zone.

## To set the Home Time

1. Display the current Home Time.
  - Pressing **DISP CHNG** switches between the Home Time display and the World Map display.
2. Display the function menu for the HOME TIME SET operation.
  - If you are starting from the Home Time display, press **FUNC** once to display the first function menu.

```

1 HOME TIME SET
2 12/24 HOURS
3 DST ON/OFF
4 SOUND
  
```

- If you are starting from the World Map display, press **FUNC** twice to display the second function menu.



```

1 HOME TIME SET
2 ZONENAME EDIT
3 DATE FORMAT
  
```

[OK]

- 1 Press 1 to select HOME TIME SET.

```

1992 / 1 / 1
  
```

```

12:15
  
```

AM [OK]

- The current hour setting on the display flashes because it is selected.

[Left]/[Right]/[Enter]

- Use the [Left] and [Right] cursor keys or DATE/TIME to move the flashing selection around the Home Time display. When any number is selected (flashing), you can change it by entering a new value.
- Use 12-hour format if the Home Time is set for 12-hour format or 24-hour format if the Home Time is set for 24-hour format. For details on switching between 12-hour and 24-hour formats, see page 127.
- If you are using 12-hour time format, press A to specify AM or P to specify PM.
- All illegal input (26 for the hour, 65 for the minutes) is ignored.
- Years can be input within the range of 1901 through 2099.

- You can enter 20th century years using only two digits (92 → 1992). 21st century years must be entered in four digits.

[SET]

- After you set the time and date, press SET to store them.
- The seconds count of the timepiece resets to "00" when you press SET.

### To switch the Home Time between 12-hour and 24-hour format

[OK]

- Display the current Home Time.
  - Pressing DISP CHNG switches between the Home Time display and the World Map display.
- From either the Home Time display or the World Map display, press FUNC once to display the first function menu.

[FUNC]

```

1 HOME TIME SET
2 12/24 HOURS
3 DST ON/OFF
4 SOUND
  
```

[OK]

- 2 Press 2 to select 12/24 HOURS.

- The 12-hour/24-hour setting is set up as a toggle setting. This means that each time you select the 12/24 HOURS item in the function menu, the Home Time display switches from its present setting to the opposite one.
- The 12-hour/24-hour setting you make is applied for the time displays in the Schedule Keeper, the Reminder Mode, and the Home Time display.

## To switch the Home Time between standard and daylight saving time

1. Display the current Home Time.
  - Pressing **DISP CHNG** switches between the Home Time display and the World Map display.
2. From either the Home Time display or the World Map display, press **FUNC** once to display the first function menu.

```

1 HOME TIME SET
2 12/24 HOURS
3 DST ON/OFF
4 SOUND
  
```

3. Press 3 to select DST ON/OFF.

- The standard/DST setting is set up as a *toggle* setting. This means that each time you select the DST ON/OFF item in the function menu, the Home Time display switches from its present setting to the opposite one.
- The following shows an example display with the DST indicator (which indicates that DST is on).

```

1992, 1 / 1 WED
AM
1:16 23 DST
  
```

## To set the Daily Alarm

1. Display the current Home Time.
2. Press **HOME TIME** again to display the current daily alarm setting.
3. Press **FUNC** once to display the first function menu.

```

1 ALARM TIME SET
4 SOUND
  
```

4. Press 1 to select ALARM TIME SET.

```

** ALARM TIME **
AM
12:00 ON
  
```

- The alarm's hour setting on the display flashes because it is *selected*.
- 5. Use the **◀** and **▶** cursor keys or **DATE/TIME** to move the flashing selection between the hour and the minutes setting. When either value is selected (flashing), you can change it by entering a new value.
  - Use 12-hour format if the Home Time is set for 12-hour format or 24-hour format if the Home Time is set for 24-hour format. For details on switching between 12-hour and 24-hour formats, see page 127.

- If you are using 12-hour time format, press **A** to specify AM or P to specify PM.
- All illegal input (26 for the hour, 65 for the minutes) is ignored.
- 6. After you set the alarm time, press **SET** to store the it.

**SET**

### To switch the daily alarm on and off

1. Press **FUNC** once to display the first function menu.
2. Press **4** to select the **SOUND** menu item.
3. Use **Δ** and **∇** to select **DAILY AL** (page 19).
4. Use **◀** and **▶** to switch the daily alarm on and off.
5. Press **SET** to store your setting and clear the **SOUND** menu.

**FUNC**

**4**

**Δ/∇**

**◀/▶**

**SET**

### About the daily alarm.....

Once you set the daily alarm, it sounds at the same time every day (as long as the **DAILY AL** setting is ON). When the daily alarm time is reached, the alarm sounds for 20 seconds and the daily alarm display appears (even if the SF-5100/SF-5300 is switched off). Press any key to stop the alarm and then press **ESC** to return to the display that was shown before the alarm began to sound.

Note the following important points when you are using the daily alarm.

- The daily alarm does not sound if the daily alarm time is reached during data communications (page 147).
- The alarm may fail to sound if battery power is too low.

### To edit a city code name

**□**

1. Display the current Home Time.
- Pressing **DISP CHNG** switches between the Home Time display and the World Map display.
2. Press **FUNC** twice to display the second function menu.


**FUNC**  
**FUNC**

1 ZONE CHANGE  
2 ZONENAME EDIT  
3 DATE FORMAT  
**□**

- The above is the second function menu which appears when you press **FUNC** twice in the Home Time display. A somewhat different function menu appears when you start from the World Map display.

**2**

3. Press **2** to select **ZONE NAME EDIT**.

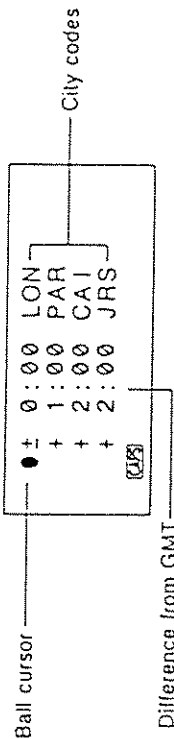

- See page 139 for a complete list of available city codes.
- 4. Use the **Δ** and **∇** cursor keys to move the ball cursor up and down until it is located to the left of the time zone whose city code you want to edit.

**Δ/∇**

- Holding down either key moves the ball cursor at high speed.
  - The display starts to scroll automatically whenever the ball cursor reaches the top or the bottom of the display.
5. Press the  $\blacktriangleright$  cursor key, and a cursor appears in the city code of the time zone at which the ball cursor is located.

```

● - 5:00 NYC
  - 4:00 CCS
  - 3:00 RIO
  - 2:00 -2H
  [CAPS]
  
```

Cursor

6. Make any changes you want in the city code where the cursor is located, using the procedures detailed on page 21.

```

● - 5:00 WDC
  - 4:00 CCS
  - 3:00 RIO
  - 2:00 -2H
  [CAPS]
  
```

- In the above display, we changed the city code NYC to WDC (Washington D.C.).
7. After editing a city code, press SET to store it in memory.

[SET]

## To select the date format

[2]

1. Display the current Home Time.
- Pressing DISP CHNG switches between the Home Time display and the World Map display.
2. Press FUNC twice to display the second function menu.

[FUNC] [FUNC]

```

1 ZONE CHANGE
2 ZONENAME EDIT
3 DATE FORMAT
  [CAPS]
  
```

- The above is the second function menu which appears when you press FUNC twice in the Home Time display. A somewhat different function menu appears when you start from the World Map display.

[3]

3. Press 3 to select DATE FORMAT.

```

1 Y/M/D
2 M/D/Y
3 D/M/Y
  [CAPS]
  
```

4. Select a format by entering its number.
- The following shows an example of each format

```

Y/M/D : 1992/1/1 WED
M/D/Y : JAN/1/1992 WED
D/M/Y : 1/JAN/1992 WED
  
```


## Using the World Time function

With the World Time function, you can view the current time in any one of 29 time zones around the world. The times and dates that appear in the World Time displays are based on the current Home Time setting.

### About World Time displays.....


There are two types of World Time displays.

#### World Time Display

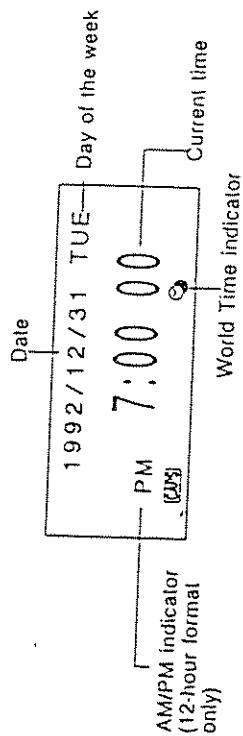

- Use DISP CHNG to switch between the World Time display and the World Map display.

#### World Map Display

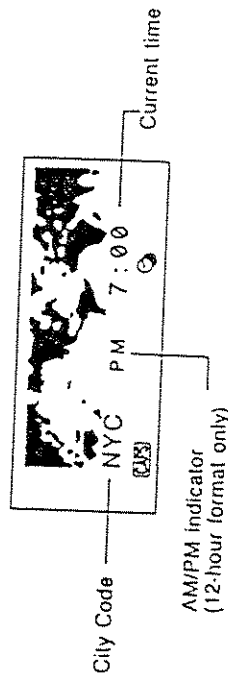

### To display the World Time




- Press **WORLD TIME** to display the World Time.
- The time zone that you last selected when displaying the World Time appears on the display.
- Use **DISP CHNG** to switch between the World Time display and the World Map display.


### To set the World Time zone



1. Display the World Time.
2. Press **FUNC** once to display the first function menu.

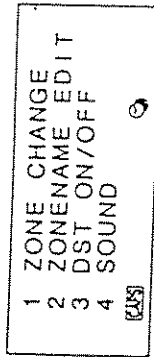

3. Press 1 to select **ZONE CHANGE**.

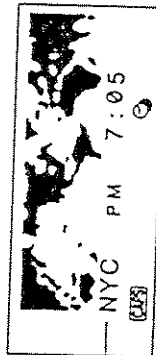

- The current zone flashes on the World Map display. Its city code is also shown.

4. Use the  $\triangleleft$  and  $\triangleright$  cursor keys to move the flashing time zone on the World Map. Note that the city code changes as you do.
5. When the time zone that you want for the World time is flashing (and the city code you want is shown on the display), press SET register the new zone.

$\triangleleft$ / $\triangleright$

SET

### To switch a World Time zone between standard and daylight saving time

1. Display the World Time.
  - Pressing DISP CHNG switches between the World Time display and the World Map display.
2. Use the procedure described on page 135 to display the World Time zone that you want to switch between standard time and daylight saving time.
3. From either the World Time display or the World Map display, press FUNC once to display the first function menu.

FUNC

FUNC


```

1 ZONE CHANGE
2 ZONENAME EDIT
3 DST ON/OFF
4 SOUND
  
```

4. Press 3 to select DST ON/OFF.
  - The standard/DST setting is set up as a toggle setting. This means that each time you select the DST ON/OFF item in the function menu, the currently displayed World Time zone switches from its present setting to the opposite one.

3

- The following shows an example display with the DST indicator (which indicates that DST is on).

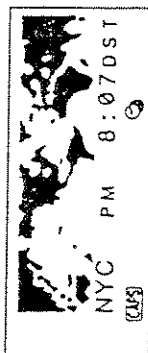

### To edit a city code name

1. Display the World Time.
  - Pressing DISP CHNG switches between the World Time display and the World Map display.
2. Press FUNC once to display the first function menu.

FUNC


FUNC

```

1 ZONE CHANGE
2 ZONENAME EDIT
3 DST ON/OFF
4 SOUND
  
```

- The above is the function menu which appears when you press FUNC in the World Map display. A somewhat different function menu appears when you start from the World Time display.

2

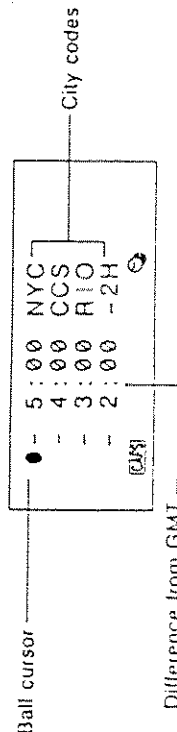

Ball cursor

Difference from GMT

- See page 139 for a complete list of available city codes.
4. Use the  $\Delta/\nabla$  cursor keys to move the ball cursor up and down until it is located to the left of the time zone whose city code you want to edit.
    - Holding down either key moves the ball cursor at high speed.
    - The display starts to scroll automatically whenever the ball cursor reaches the top or the bottom of the display.
  5. Press the  $\triangleright$  cursor key, and a cursor appears in the city code of the time zone at which the ball cursor is located.

```

● - 5:00 NYC
  - 4:00 CCS
  - 3:00 RIO
  - 2:00 -2H
  [SET]
  Cursor
  
```

6. Make any changes you want in the city code where the cursor is located, using the procedures detailed on page 21.

```

● - 5:00 NEW
  - 4:00 CCS
  - 3:00 RIO
  - 2:00 -2H
  [SET]
  
```

- In the above display, we changed the city code NYC to NEW.
7. After editing a city code, press SET to store it in memory.

## City Code List

City Code	City Name	Time Difference	Other Cities in Zone
-11	(GMT -11)	- 11:00	Midway
HNL	Honolulu	- 10:00	
ANC	Anchorage	- 9:00	
LAX	Los Angeles	- 8:00	San Francisco, Seattle, Las Vegas
DEN	Denver	- 7:00	El Paso
CHI	Chicago	- 6:00	Dallas, Mexico City, Houston
NYC	New York	- 5:00	Washington D.C., Boston, Montreal
CCS	Caracas	- 4:00	Santiago, Puerto Rico
RIO	Rio de Janeiro	- 3:00	Sao Paulo, Buenos Aires
-2H	(GMT -2)	- 2:00	Fernando de Noronha
-1H	(GMT -1)	- 1:00	Azores
LON	London	+ 0:00	Greenwich Mean Time, Lisbon
PAR	Paris	+ 1:00	Rome, Madrid, Amsterdam
CAI	Cairo	+ 2:00	Alhens, Helsinki, Beirut
JRS	Jerusalem	+ 2:00	Moscow
JED	Jeddah	+ 3:00	Kuwait, Baghdad, Nairobi
THR	Tehran	+ 3:30	Abadan, Shiraz
DXB	Dubai	+ 4:00	Abu Dhabi
KBL	Kabul	+ 4:30	
KHI	Karachi	+ 5:00	
DEL	Delhi	+ 5:30	Bombay, Calcutta, Colombo
DAC	Dhaka	+ 6:00	
RGN	Yangon	+ 6:30	Cocos
BKK	Bangkok	+ 7:00	Jakarta, Hanoi
HKG	Hong Kong	+ 8:00	Beijing, Taipei, Singapore, Manila
TYO	Tokyo	+ 9:00	Darwin
ADL	Adelaide	+ 9:30	
SYD	Sydney	+ 10:00	Guam
NOU	Noumea	+ 11:00	Port Vila
WLG	Wellington	+ 12:00	Auckland


## PART 5 Calculator Functions

The SF-5100/5300 also gives you the capability to perform all of the mathematical operations available on today's calculators. In addition, you also get an innovative date calculation function that makes it possible to perform addition and subtraction operations that involve dates.

### Using the Calculator


Whenever you enter the Calculator Mode, some of the keys on the SF-5100/5300 keyboard take on calculator functions.

### To enter the Calculator Mode

 Press **CAL** to enter the Calculator Mode.

### About the Calculator Mode keys....

The illustration shows the SF-5100/5300 keys that are used in the Calculator Mode.

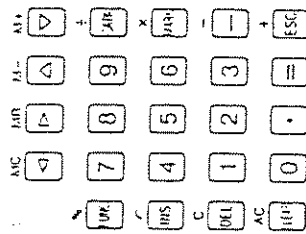

- **CLEAR** — clears the calculator
- Use the number keys ( 0 through 9 ) to enter values. Press **.** to input a decimal point.
- Use **MC**, **MR**, **M-**, and **M+** for calculator memory operations.
- MC** — clears the calculator memory.
- MR** — recalls the current calculator memory contents.

**M-** — subtracts the currently displayed value from the current memory contents. You can also press **M-** to execute a calculation, with the result being subtracted from the memory contents.

**M+** — adds the currently displayed value to the current memory contents. You can also press **M+** to execute a calculation, with the result being added to the memory contents.

- Use **+**, **-**, **x** and **÷** to specify the arithmetic operation that is marked above each key.
- **=** — executes a calculation and displays its result.
- Use **%** for percentage calculations.
- Use **√** for square root calculations.



## To perform calculations

$53 + 123 - 63 =$	$53 \text{ [ + ] } 123 \text{ [ = ] } 63 \text{ [ = ]}$	0.
$963 \times (23 - 56) =$	$23 \text{ [ - ] } 56 \text{ [ = ] } 963 \text{ [ = ]}$	113
$(56 \times 3 - 89) \div 5.2 + 63 =$	$56 \text{ [ x ] } 3 \text{ [ - ] } 89 \text{ [ = ] } 5.2 \text{ [ + ] } 63 \text{ [ = ]}$	- 31779.
$123456 \times 741852 =$	$123456 \text{ [ x ] } 741852 \text{ [ = ]}$	78.19230769
$\sqrt{3} \times 5 =$	$3 \text{ [ \sqrt{ } ] } 5 \text{ [ = ]}$	E 9.158608051
$12 \div 23 =$	$23 \text{ [ + ] } 12 \text{ [ = ]}$	9.158608051
$45 \div 23 =$	$45 \text{ [ = ] } 78 \text{ [ = ]}$	8.660254035
$78 \div 23 =$		K+ 35.
$7 - 5.6 =$	$56 \text{ [ - ] } 7 \text{ [ = ]}$	K+ 68.
$2 - 5.6 =$	$2 \text{ [ = ]}$	K+ 101.
$2.3 \times 12 =$	$12 \text{ [ x ] } 23 \text{ [ = ]}$	K- 1.4
$4.5 \times 12 =$	$4.5 \text{ [ = ]}$	K- -3.6
$45 \div 9.6 =$	$9.6 \text{ [ + ] } 45 \text{ [ = ]}$	K* 27.6
$78 \div 9.6 =$	$78 \text{ [ = ]}$	K* 54.
12% of 1500	$1500 \text{ [ x ] } 12 \text{ [ = ]}$	K+ 4.6875
Percentage of 660 against 880	$660 \text{ [ + ] } 880 \text{ [ = ]}$	K+ 8.125
15% add-on of 2500	$2500 \text{ [ x ] } 15 \text{ [ = ] } 2500 \text{ [ + ]}$	180.
25% discount of 3500	$3500 \text{ [ x ] } 25 \text{ [ = ] } 3500 \text{ [ - ]}$	75.
What will the selling price and profit be when the purchasing price of an item is \$480 and the profit rate to the selling price is 25%?	$480 \text{ [ + ] } 25 \text{ [ = ]}$	2875.
If you made \$80 last week and \$100 this week, what is the percent increase?	$100 \text{ [ - ] } 80 \text{ [ = ]}$	2625.
$80 \times 9 = 720$	$80 \text{ [ x ] } 9 \text{ [ = ]}$	640.
$-) 50 \times 6 = 300$	$50 \text{ [ x ] } 6 \text{ [ = ]}$	160.
$20 \times 3 = 60$	$20 \text{ [ x ] } 3 \text{ [ = ]}$	25.
$\frac{60}{400}$	$60 \text{ [ = ] } 400 \text{ [ = ]}$	M 720.
		M 300.
		M 60.
		M 480.

## To perform constant calculations

[C]

1. Enter the Calculator Mode.

3 [ + ] [ + ] 2

2. Enter the calculation, pressing the arithmetic operator key twice. This will cause the "K" indicator to appear on the display to indicate a constant calculation.

• You can use this constant calculation technique for addition, subtraction, multiplication, and division.

3. Press = to display the initial result (in this case, 5).

[ = ]

4. Press = again to add 3 to the result (in this case,  $5 + 3 = 8$ ).

[ = ]

• You can repeat the above operation as many times as you like. Each time you press =, the previous result obtained is added to, subtracted from, multiplied by, or divided by the value to the left of the arithmetic operator.

• To clear a constant calculation, press AC.

## To correct errors in calculations

[C]

If you enter a wrong value, press C and then enter the correct value.

If you press the wrong arithmetic operator key ( +, -, x,  $\div$  ), simply press the correct key before entering anything else.

**About calculation errors....**

Whenever an error occurs, the indicator "E" appears on the display.

E  
0.

The following conditions all result in errors.

- When the number of digits in the mantissa of an intermediate or a final result exceeds 10 digits.
- When the number of digits in the mantissa of a value stored in memory exceeds 10 digits. In this case, the SF-5100/SF-5300 automatically retains the last value stored that did not exceed 10 digits.
- Division by zero.

**To clear errors**

**[C]/[AC]**

Press C to continue with the same calculation. If you want to clear the calculation and start again, press AC.

**Performing date calculations**

The SF-5100/SF-5300 lets you perform calculations involving dates within the range of January 1, 1901 through December 31, 2099. If you try to use dates outside this range, the "E" indicator appears on the display to indicate an error. Note that you can use constant calculation techniques and calculation memory when performing date calculations.

**To calculate the number of days between two dates**

**[E]** 1. Enter the Calculator Mode.

1992 **[DATE]** 7 **[DATE]** 2. Enter the later date, pressing DATE/TIME after the year and month entries.

3

- Here, we will calculate the number of days between December 5, 1991 and July 3, 1992.

1992 / 7 / 3

**[=]**


1991 **[DATE]** 12

**[DATE]** 5 **[DATE]**

3. Press **[=]** for the subtraction operation.




4. Enter the earlier date, pressing DATE/TIME after the year, month, and date entries.

- THU  
1991 / 12 / 5

-  5. Press = to display the result.

211.

**To calculate the date that is a specific number of days after another date**

-  1. Enter the Calculator Mode.
- 2010  12
-  20
- Here, we will calculate the date that comes 300 days from December 20, 2010.
3. Press + for the addition operation.
4. Enter the number of days.
- 300
5. Press = to display the result.

2011/10/16  
SUN

- Use subtraction instead of addition to calculate a date that is a specific number of days before a date.


## PART 6 Data Communications


The data communications capabilities of the SF-5100/SF-5300 let you transfer data between two SF Units, or between the SF-5100/SF-5300 and a personal computer.

### Setting Up for Data Communications

The following procedures describe what you should do to set up for data communications between two SF Units or between an SF Unit and a personal computer. In addition to hardware connections, it details how to set up the communications parameters and how to set up the SF-5100/SF-5300 to receive data. By following these instructions carefully, you can be ensured of successful communications every time.

#### To connect two SF Units

- 
1. Check to make sure that the power of the two SF Units is switched off.
  2. Remove the covers from the connectors on the two SF Units.
  3. Connect the two SF Units using the optional SB-60 cable. You can also connect them using an SB-61 cable.

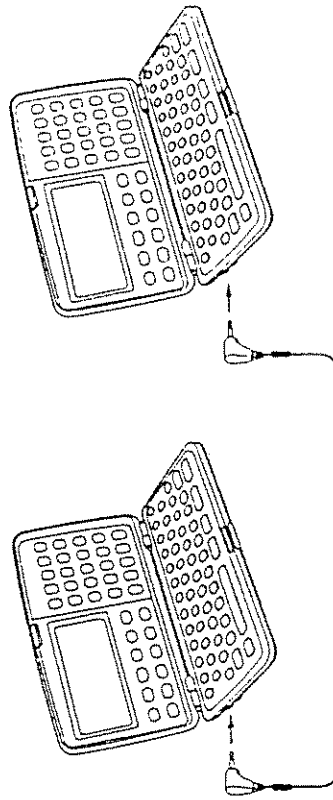


#### Important

Be sure to replace the connector covers on the SF Units when you are not performing data communications.

## To connect the SF-5100/SF-5300 with a personal computer

1. Check to make sure that the power of the SF-5100/SF-5300 and the personal computer is switched off.
2. Connect the personal computer to the FA-100 Interface Unit using an RS-232C cross cable.
  - If you are connecting to an IBM PC/AT, use a 9-pin cable. For an IBM PC, PC/XT or PS/2, use a 25-pin cable.
3. Remove the covers from the connector on the SF-5100/SF-5300.
  - Be careful not to lose the connector cover. You should use it to cover the connector whenever you are not performing data communications.
4. Connect the SF-5100/SF-5300 to the FA-100 Interface Unit using the SB-60 cable. You can also connect them using an SB-61 cable.

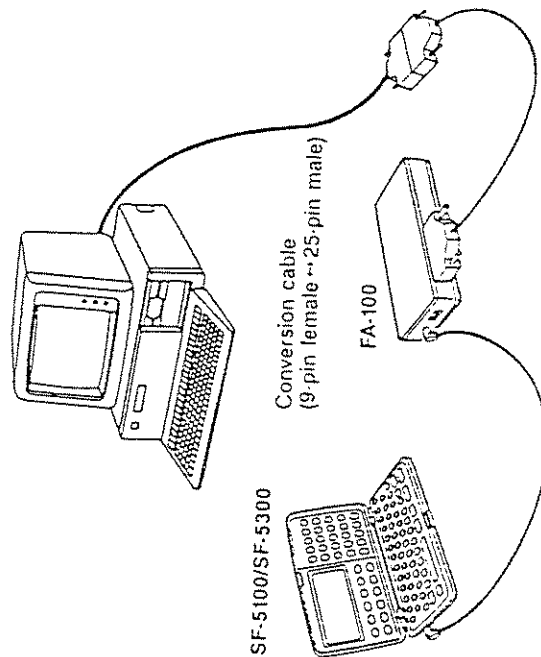

OH

5. Switch on the power of the personal computer.
6. Switch on the power of the FA-100 Interface Unit.
7. Switch on the power of the SF-5100/SF-5300.
  - After you complete data transfer operations, switch power off in the following sequence: SF-5100/SF-5300, FA-100 Interface Unit, personal computer. Switch all power off before disconnecting the units.

OH

## About personal computer connections....

You can perform data communications between your SF-5100/SF-5300 and an IBM PC/AT or PS/2 personal computer after connecting them via the optional FA-100 Interface Unit. The FA-100 comes with the necessary communications software on both 3.5-inch and 5-inch floppy disks.

For data communications between the SF-5100/SF-5300 and an IBM PC or PC/XT, you must purchase separately available software, such as the SFD TOOL-C software. Read the documentation that comes with the software for details on how to use it.

### Important

SFD TOOL-C software is not available in certain geographic areas. Consult with your CASIO Dealer about the software you should use for data communications.

### Requirements for connection with a personal computer

You require the following software and hardware to perform data communications between the SF-5100/SF-5300 and a personal computer.

## Personal Computer with SFD TOOL software

Model:

### Software SFD TOOL

IBM PC/AT with display type EGA monitor + EGA board  
Personal System 2 (PS/2) with display type VGA monitor  
+ VGA board

### Software SFD TOOL-C

IBM PC, PC/XT or PC/AT — with one of video display  
adaptors:

CGA, EGA, HGC, HGC + or  
PGC (PGA)

IBM PS/2 — model 30-286, 50, 50Z, 60, 70-386 or 80-386  
with a video display adaptor VGA or 8514/A

### Personal Computer — General

- RAM: at least 512 kbytes
- Graphic Memory Capacity: at least 256 kbytes (not necessary  
with SFD TOOL-C)
- Data Communications: RS-232C interface

### RS-232C Cable

- IBM PC/AT: 25 pins ↔ 9 pins
  - IBM PC, PC/XT, PS/2: 25 pins ↔ 25 pins
- To use a 25-pin ↔ 25-pin cable with the PC/AT, you need a  
9-pin female ↔ 25-pin male conversion cable.

CASIO brand 25-pin ↔ 25-pin (SB-80) and 9-pin female ↔  
25-pin male (SB-81) cables are optionally available.

## To set the SF-5100/SF-5300 hardware parameters

**Func**

1. While an initial screen is displayed, press **FUNC** twice to display the second function menu.

2 ALL DELETE  
3 LABEL EDIT  
4 DATA COMM

- You can perform the above operation while the initial screen of the Telephone Directory, Memo Mode, Schedule Keeper, Calendar, Reminder is displayed.

**4**

2. Press 4 to select DATA COMM.

1 SEND  
2 RECEIVE  
3 SET UP  
4 FDD


**3**

3. Press 3 to select SET UP.

SET UP  
PARITY E  
BIT LENGTH 7  
BPS 2400

- The highlighted items on the display are the parameters that are currently set.

- This message indicates that the receive unit is standing by for data. Perform the required procedures to start sending data from another SF Unit (see owner's manual for details) or a personal computer (see the FA-100 Interface Unit manual for details).
  - To abort the receive operation at any time, press ESC.
  - This procedure is the same regardless of whether the data is received from another SF Unit or from a personal computer.
4. The display changes to the following once the SF-5100/SF-5300 starts receiving data.

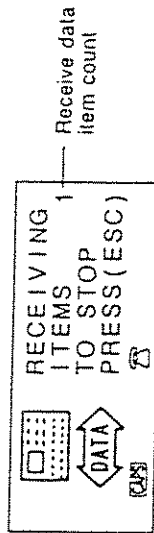

- The number of data items received is counted on the display.
- If an error occurs during the receive operation, the message "RECEIVE ERROR !" appears on the display. Press ESC to clear the error message. Received data is added to the data already stored in memory. If the memory becomes full during the receive operation, the message "MEMORY FULL!" appears and data transfer stops. Press ESC to clear the error message.
- Some SF Units also have a Business Card Library function. The SF-5100/SF-5300 cannot receive data from a Business Card Library.

- The SF-5100/SF-5300 cannot receive Business Card Library data from a personal computer running SFD TOOL, SFD TOOL-B or SFD TOOL-C software.
- The Schedule Keeper of some SF Units is capable of storing multiple-date data items. Whenever you transfer such a data item to the SF-5100/SF-5300, it is automatically converted to a single-date data item. The date used is the one that starts the original multiple-date data item.

- The PARITY parameter is flashing because it is selected.
4. Use the  $\Delta$  and  $\nabla$  cursor keys to change the selected parameter on the display.
  5. Use the  $\triangleleft$  and  $\triangleright$  cursor keys to change the highlighted setting of the currently selected parameter.
  6. When the parameters are set the way you want them, press SET to store them in memory.

$\Delta$ / $\nabla$

$\triangleleft$ / $\triangleright$

SET

#### About communications parameters....

Communications parameters make it possible for two communicating units to understand each other. The following explanations are provided for your information only. The only thing you need to remember is that the parameters of the send unit and the receive unit must be identical. Otherwise you will not be able to transfer data successfully.

#### Parity

Parity is used for error detection during data exchanges. You can set the SF-5100/SF-5300 parity as even (E), odd (O), or none (N).

#### Bit Length

The bit length parameter states how many bits are to be used for each character. You can set the SF-5100/SF-5300 bit length as 7 bits or 8 bits.

#### BPS

The letters "BPS" stand for "bits per second," and this setting represents the speed at which data is sent. The SF-5100/SF-5300 lets you set a speed of either 2400 or 4800. Whenever you are exchanging data between the SF-5100/SF-5300 and a personal computer, you should always set the BPS value to 2400.

### To set up the SF-5100/SF-5300 to receive data

$\text{FUNC}$   $\text{FUNC}$

1. While an initial screen is displayed, press FUNC twice to display the second function menu.

2 ALL DELETE  
3 LABEL EDIT  
4 DATA COMM  
 $\text{CDS}$   $\text{DS}$

- You can perform the above operation while the initial screen of the Telephone Directory, Memo Mode, Schedule Keeper, Calendar, Reminder is displayed.
- If you want the received data to be stored in the secret area, you should also enter the secret area at this point. If you are in the open area on the receiving unit, received data is stored into the open area.

4

2. Press 4 to select DATA COMM.

1 SEND  
2 RECEIVE  
3 SET UP  
4 FDD  
 $\text{CDS}$   $\text{DS}$

2

3. Press 2 to select RECEIVE.

RECEIVE OK  
TO STOP  
PRESS (ESC)  
 $\text{CDS}$   $\text{DS}$

## Sending Data

This section tells you how to operate the SF-5100/SF-5300 to send data to another SF Unit or to a personal computer. There are a number of possible procedures you can use, depending on the mode and how many data items you want to send. Note that the following information is for the SF-5100/SF-5300 only. Consult with your owner's manuals for the correct operation of your other SF Unit or personal computer.

### About data transfer types....

There are a number of different ways you can transfer data.

- **One Data Item**

This transfer method lets you send a single Telephone Directory, Memo Mode, Reminder Mode or Schedule Keeper item from the SF-5100/SF-5300.

- **Mode Data Items**

This method is used to send all data items stored in the Telephone Directory, Memo Mode, or Reminder Mode from the SF-5100/SF-5300.

With the Schedule Keeper, this procedure can be used to send all the data stored in a specific period (from one date to another). For the Calendar Mode, this procedure makes it possible to send all the highlight data in a specific period (from one month to another).

- **Month Data**

This method lets you send the highlight data for a specific month.

- **All Data Items**

With this method, you can send all data items stored in the Telephone Directory, Memo Mode, Reminder Mode, Schedule Keeper, and the Calendar from the SF-5100/SF-5300.

### To send all data items

1. While an initial screen in displayed, press **FUNC** twice to display the second function menu.

2 ALL DELETE  
3 LABEL EDIT  
4 DATA COMM

- You can perform the above operation while the initial screen of the Telephone Directory, Memo Mode, Schedule Keeper, Calendar, Reminder is displayed.

- Note that this operation sends all open memory area data or all secret memory area data. Make sure you are in the memory area you want (open or secret) before proceeding.

2. Press 4 to select DATA COMM.

1 SEND  
2 RECEIVE  
3 SET UP  
4 FDD

3. Press 1 to select SEND.

1 ONE ITEM  
2 MODE DATA  
3 ALL DATA  
- SEND -



3

4. Press 3 to select ALL DATA.

```

SEND ALL DATA ?
                [ ]
                SET/ESC
  
```

SET/ESC

5. Press SET to start the send operation or ESC to abort the operation without sending anything.

```

SENDING
[ ]
TO STOP
[DATA]
PRESS(ESC)
  
```

- Data is send in the sequence: Telephone Directory, Memo Mode, Reminder Mode, Schedule Keeper, Calendar.
- To abort the send operation at any time, press ESC.
- If an error occurs during the send operation, the message "SEND ERROR!" appears on the display. Press ESC to clear the error message.
- Note that you cannot send Reminder Mode data from the SF-5100/SF-5300 to an SF Unit that does not have a Reminder Mode, or to a personal computer running SFD TOOL, SFD TOOL-B or SFD TOOL-C software.
- 6. After the send operation is complete, the display returns to the initial screen of the mode you were in when you started this procedure.

158

## To send one Telephone Directory, Memo Mode, or Reminder Mode item

FUNC/FUNC

1. In the Telephone Directory, Memo Mode, or Reminder Mode, press FUNC twice to display the second function menu.
  - You can perform the following operation while in the open memory area or the secret memory area.
2. Press 4 to select DATA COMM.
3. Press 1 to select SEND.

4

1

```

1 ONE ITEM
2 MODE DATA
3 ALL DATA
                [ ]
                -SEND-
  
```

1

4. Press 1 to select ONE ITEM.

```

SEARCH FOR ?
                [ ]
                -SEND-
  
```

Δ/▽

- This screen prompts you to select the data item you want to send.
- 5. Press Δ or ▽ to show an index display of items stored in memory.
  - Pressing ▽ starts the index display from the top of the data items, while pressing Δ starts from the bottom.

159

- You could also use initial character search or mode search to locate the data you want to send.
- Use  $\Delta$  and  $\nabla$  to scroll through the index display until the item you want to send is located in the top line.
- Press DISP CHNG to switch to the data display of the selected item.



```

CASIO
123-456-7890
SEND ? SET/ESC
  
```



- Press SET to start the send operation or ESC to abort the operation without sending anything.

```

SENDING
TO STOP
PRESS(ESC)
  
```

- To abort the send operation at any time, press ESC.
- If an error occurs during the send operation, the message "SEND ERROR !" appears on the display. Press ESC to clear the error message.
- Note that you cannot send Reminder Mode data from the SF-5100/SF-5300 to an SF Unit that does not have a Reminder Mode, or to a personal computer.
- After the send operation is complete, the display returns to the initial screen of the mode you were in when you started this procedure.

## To send one Schedule Keeper entry



- While the initial Schedule Keeper screen is displayed, press FUNC twice to display the second function menu.
- You can perform the following operation while in the open memory area or the secret memory area.
  - Press 4 to select DATA COMM.
  - Press 1 to select SEND.



```

1 ONE ITEM
2 MODE DATA
3 ALL DATA
--SEND-
  
```



- Press 1 to select ONE ITEM.

```

1992/ 2/13 THU
SEARCH FOR ?
--SEND-
  
```

- This screen prompts you to select the data you want to send.
- Use index search, initial character search, or mode search to find the Schedule Keeper item you want to send.

6. Use  $\Delta$  and  $\nabla$  to move the entry you want to send into the second line of the display.
- You cannot send Reminder Mode data listed under a Schedule Keeper date. Use the procedure on page 159 to send a single Reminder Mode data item.
7. Press **DISP CHNG** to switch to the data display of the selected entry.

```

1992/ 8/10
10:00A MEETING
SEND ? SET/ESC
(CAPS)

```

8. Press **SET** to start the send operation or **ESC** to abort the operation without sending anything.

```

SENDING
TO STOP
PRESS (ESC)
(CAPS)

```

- To abort the send operation at any time, press **ESC**.
- If an error occurs during the send operation, the message "SEND ERROR!" appears on the display. Press **ESC** to clear the error message.
- After the send operation is complete, the display returns to the initial Schedule Keeper screen.

### To send one month of Calendar data (highlights)

- FUNC** **FUNC**
- In the Calendar Mode, press **FUNC** twice to display the second function menu.
  - Press 4 to select **DATA COMM**.
  - Press 1 to select **SEND**.

```

1 MONTH
2 MODE DATA
3 ALL DATA
--SEND--

```

4. Press 1 to select **MONTH**.

```


'92      1 2 3 4
  4      5 6 7 8 9 10 11
        12 13 14 15 16 17 18
        19 20 21 22 23 24 25
SEND ? SET/ESC

```

- The calendar for the month that contains the current Home Time date appears on the screen.
- Display the calendar whose highlights you want to send.
- You can use any of the procedures described on "To specify a month for display in the Calendar mode" (page 54) and "To specify a month and date for display in the Calendar mode" (page 55) to display the calendar you want.

[SET]/[ESC]

6. Press SET to start the send operation or ESC to abort the operation without sending anything.

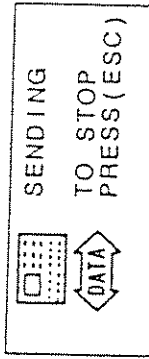

- If the corresponding calendar in the receiving unit already contains highlighted dates, the received data is ignored. You have to clear the corresponding data in the receiving unit before it can receive highlight data.
- To abort the send operation at any time, press ESC.
- If an error occurs during the send operation, the message "SEND ERROR !" appears on the display. Press ESC to clear the error message.
- 7. After the send operation is complete, the display returns to the calendar display.

### To send all Telephone Directory, Memo Mode, or Reminder Mode data

[FUNC]/[F10]

1. In the Telephone Directory, Memo Mode, or Reminder Mode, press FUNC twice to display the second function menu.
  - You can perform the following operation while in the open memory area or the secret memory area.
2. Press 4 to select DATA COMM.
3. Press 1 to select SEND.


[4]

[1]




[2]

4. Press 2 to select MODE DATA.

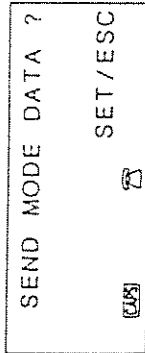

[SET]/[ESC]

5. Press SET to start the send operation or ESC to abort the operation without sending anything.

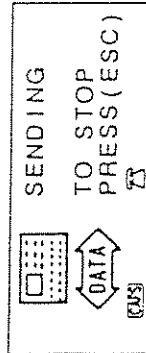

- To abort the send operation at any time, press ESC.
- If an error occurs during the send operation, the message "SEND ERROR !" appears on the display. Press ESC to clear the error message.
- Note that you cannot send Reminder Mode data from the SF-5100/SF-5300 to an SF Unit that does not have a Reminder Mode, or to a personal computer.

6. After the send operation is complete, the display returns to the initial screen of the mode you were in when you started this procedure.

### To send all Schedule Keeper data in a specific period

1. Select the Schedule Keeper date that starts the period you want to send.
  - See page 74 for details on recalling Schedule Keeper data.
  - Here we will send the Schedule Keeper data from January 1, 1992 through December 31, 1992.
2. Press **FUNC** twice to display the second function menu.
  - You can perform the following operation while in the open memory area or the secret memory area.
3. Press **4** to select **DATA COMM.**
4. Press **1** to select **SEND.**

```

1 ONE DATA
2 MODE DATA
3 ALL DATA  --SEND-
  
```

5. Press **2** to select **MODE DATA.**

```

MODE SEND
1992/ 1/ 1 WED -
TO YEAR ?
  
```

Date selected  
in sept1, above

1992 **SET**

6. Enter the year of the date that ends the period of data you want to send and press **DATE/TIME.**

```

MODE SEND
1992/ 1/ 1 WED -
1992/
TO MONTH ?
  
```

12 **DATE**

7. Enter the month and press **DATE/TIME.**

```

MODE SEND
1992/ 1/ 1 WED -
1992/12/ -
TO DATE ?
  
```

31 **DATE**

8. Enter the date and press **DATE/TIME.**

```

MODE SEND
1992/ 1/ 1 WED -
1992/12/31 THU
SET/ESC
  
```

**SET/ESC**

9. Press **SET** to start the send operation or **ESC** to abort the operation without sending anything.

```

SENDING
TO STOP
PRESS(ESC)
  
```

- To abort the send operation at any time, press ESC.
  - This operation does not send Reminder Mode data listed under a Schedule Keeper date. Use the procedure on page 159 to send a single Reminder Mode data item.
  - If an error occurs during the send operation, the message "SEND ERROR !" appears on the display. Press ESC to clear the error message.
10. After the send operation is complete, the display returns to the initial Schedule Keeper screen.

### To send all Calendar data in a specific period

1. Select the calendar month that starts the period you want to send.
- See page 52 for details on displaying a specific calendar.
- Here we will send the Schedule Keeper data from January 1992 through December 1992.
2. Press **FUNC** twice to display the second function menu.
3. Press 4 to select DATA COMM.
4. Press 1 to select SEND.

```

1 MONTH
2 MODE DATA
3 ALL DATA
-SEND-

```

2

5. Press 2 to select MODE DATA.

```

MODE SEND
1992 / 1 -
TO YEAR ?

```

Month selected in step 1, above

1992 **FUNC**

6. Enter the year that ends the period of data you want to send and press DATE/TIME.

```

MODE SEND
1992 / 1 -
1992 /
TO MONTH ?

```

12 **FUNC**

7. Enter the month and press DATE/TIME.

```


MODE SEND
1992 / 1 -
1992 / 12
SET / ESC

```

- If the month/year you enter comes before the month/year of the calendar you selected in step 1, the starting and ending calendars are switched automatically.



8. Press SET to start the send operation or ESC to abort the operation without sending anything.

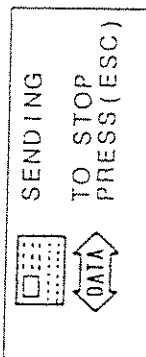

- To abort the send operation at any time, press ESC.
  - If an error occurs during the send operation, the message "SEND ERROR !" appears on the display. Press ESC to clear the error message.
9. After the send operation is complete, the display returns to the calendar selected in step 1 above.

## PART 7 Floppy Disk Storage

Besides being able to transfer data to a personal computer for long-term storage (page 147), the SF-5100/SF-5300 can also store data directly to an optional floppy disk drive. For complete details on connection to the SF-5100/SF-5300 and operation, see the owner's manual that comes with the floppy disk drive.

### Setting Up for Floppy Disk Operations

To perform floppy disk operations, you have to set up the SF-5100/SF-5300 and the floppy disk drive with the following parameters.

Parity: None (N)  
 Bit Length: 7 bits (7)  
 Baud Rate: 4800

See page 151 for full details on how to set the parameters of the SF-5100/SF-5300. You should also refer to the owner's manual of the floppy disk drive for details on how to set the parameters of the drive. Remember that the parameters of the floppy disk drive and the SF-5100/SF-5300 must be identical or else you will not be able to save and load data successfully.

### Performing Floppy Disk Operations

Before getting into an actual explanation about the type of data you can store on a floppy disk, we would first like to mention a very important rule about using floppy disks: *You cannot use a floppy disk to store data unless the disk is first formatted.*

Since a floppy disk can possibly be used in any one of a number of different drive types, you must first format it to suit the drive you are using. Before you use a floppy disk for the first time, be sure to format it first. Otherwise, you will not be able to store data on it.

**Warning!**

Besides preparing a new disk for data storage, the format procedure also deletes any data that might already be stored on a disk. Make sure that the disk is a new one or that you do not need the data stored on the disk before you start to format it.

**About disk data types....**

There are two different types of operations you can perform with the floppy disk drive.

- **Mode Data Items**

Mode data item operations affect only the data stored under the mode that you are in when you start them.

- **All Data Items**

All data item operations affect all data stored in the memory of the SF-5100/SF-5300. Note however that open memory area data and secret memory area data (page 115) are treated separately. This means that if you are in the open memory area when you perform an all data item operation, the operation affects all data in the open memory area only. If you are in the secret memory area, only secret memory area data is affected.

**Warning!**

If during the save operation the power of the floppy disk drive is switched off, if the connection between the SF-5100/SF-5300 and the floppy disk drive is broken during the save operation, or if you run out of storage space on the disk, the file being created on the floppy disk is lost.

**To format a floppy disk**

1. While the initial screen in any mode is displayed, press **FUNC** twice to display the second function menu.

```

2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
  
```

- The above is the second function menu produced in the Calendar Mode. Function menus produced by other modes may differ somewhat.

2. Press **4** to select DATA COMM.

```

1 SEND
2 RECEIVE
3 SET UP
4 FDD
  
```

3. Press **4** to select FDD (floppy disk drive).

```

1 SAVE 5 COMPARE
2 LOAD 6 RENAME
3 DEL 7 FORMAT
4 DIR -FDD-
  
```



7

4. Press 7 to select FORMAT.

```

FORMAT DELETES
ALL DISK DATA.
OK ?          SET / ESC
  
```

SET / ESC

5. Press SET to proceed with the format operation or ESC to abort the operation without formatting anything. The display changes to the following when you press SET.

```

PRESS (SET) KEY
TO START
OK ?          SET / ESC
  
```

**Warning!**

The next step deletes any data that might already be stored on a disk. Make sure that the disk is a new one or that you do not need the data stored on the disk before you perform the next step.

SET / ESC

6. Press SET to start the format operation or ESC to abort the operation without formatting anything. When you press SET or ESC, the display returns to the FDD menu.

## To save SF-5100/SF-5300 data to a floppy disk

FUNC/FUNC

1. While the initial screen in any mode is displayed, press FUNC twice to display the second function menu.

```

2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
  
```

- The above is the second function menu produced in the Calendar Mode. Function menus produced by other modes may differ somewhat.
  - If you are accessing the open memory area when you perform the above operation, you will be able to save open memory area data only. If you are accessing the secret memory area, you will be able to save secret memory area data only.
2. Press 4 to select DATA COMM.

4

```

1 SEND
2 RECEIVE
3 SET UP
4 FDD
  
```

4

3. Press 4 to select FDD (floppy disk drive).

```

1 SAVE 5 COMPARE
2 LOAD 6 RENAME
3 DEL 7 FORMAT
4 DIR - FDD -
  
```

1

4. Press 1 to select SAVE.

```

2 MODE DATA
3 ALL DATA
  --SAVE--
  
```

2)/(3

5. Press 2 to specify save of only the data in the mode you were in when you performed step 1, or 3 to specify save of all data in SF-5100/SF-5300 memory.
- Here we will specify ALL DATA.

```

FILENAME ?
  --SAVE (ALL) --
  
```

DATAFILE SET

6. Enter the name you want to assign to the file where the data is to be saved on the floppy disk, and then press SET.
- Here we will name the file "DATAFILE":

```

DATAFILE
PASSWORD ?
  --SAVE (ALL) --
  
```

PASS SET

7. Enter a password for the file if you want and then press SET.

- Here we will register the password "PASS":

```

DATAFILE
PASS
REPLACE ?    Y/N
  --SAVE (ALL) --
  
```

- This step can be skipped if you do not want to use a password.
8. Press Y to instruct the SF-5100/SF-5300 to overwrite any file with the same name as the one you specified in step 6.
- If you press N here, an error will occur when you try to save the current file if another file with the same name is already stored on the disk.
  - Note that no message appears to tell you if a file with the same name is already stored on the disk.

Y)/(N

```

DATAFILE
PASS
SAVE ?      SET/ESC
  
```


SET/ESC

9. Press SET to start the file save operation or ESC to abort the operation without saving anything.

```

FDD PREPARATION
READY ?
PRESS      SET/ESC
  
```

- The above message confirms whether or not the floppy disk drive is connected and ready for operation.
10. Press SET to start the file save operation or ESC to abort the operation without saving anything.

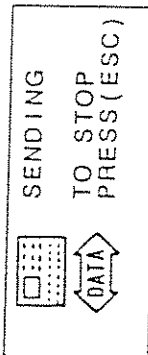

- If you selected ALL DATA in step 5 above, all of the data stored in the SF-5100/SF-5300's memory (either open or secret memory area) is saved to the floppy disk under the password you specified. If you selected MODE DATA in step 5, only the data for the mode you were in when you performed step 1 is saved.
11. After the save operation is complete, the display returns to the initial screen of the mode you were in when you started this procedure.

#### About filenames and passwords...

Filenames can be up to 8 characters long, while passwords can be up to 16 characters long. You can use any characters within a filename or password, except periods, spaces, double quotation marks, slashes, square brackets, colons, vertical bars, pointed brackets, plus symbol, equals symbol, semicolons, and commas (see page 200).

As the data is stored to the floppy disk, each mode's data is stored in separate files. The filename you specify is assigned to each file, along with the following extensions.

Telephone Directory data: J00  
Memo Mode data: K00  
Schedule Keeper data: L00  
Calendar Mode data: I00  
Reminder Mode data: J10

#### To load data from a floppy disk to the SF-5100/SF-5300

**FUNC** **FUNC**

- While the initial screen in any mode is displayed, press FUNC twice to display the second function menu.

2 ALL DELETE  
3 MULTIPLE HL  
4 DATA COMM

- The above is the second function menu produced in the Calendar Mode. Function menus produced by other modes may differ somewhat.
- If you are accessing the open memory area when you perform the above operation, you will be able to load data to the open memory area only. If you are accessing the secret memory area, you will be able to load data to the secret memory area only.

**4**

- Press 4 to select DATA COMM.

1 SEND  
2 RECEIVE  
3 SET UP  
4 FDD



- 4 Press 4 to select FDD (floppy disk drive).

```

1 SAVE 5 COMPARE
2 LOAD 6 RENAME
3 DEL 7 FORMAT
4 DIR -FDD-
  
```

- 2 Press 2 to select LOAD.

```

2 MODE DATA
3 ALL DATA -LOAD-
  
```

- 2/3 Press 2 to specify load of only the data in the mode you were in when you performed step 1, or 3 to specify load of all data stored under the filename you will specify in the next step.
- Here we will specify MODE DATA.

```

FILENAME ?
-LOAD (MODE) -
  
```

- DATAFILE SET Press SET to start the file load operation or ESC to abort the operation without loading anything. The display changes to the following once the SF-5100/SF-5300 starts receiving data.
6. Enter the name of the file that holds the data you want to load, and then press SET.
- Here we will load the file "DATAFILE".

```


DATAFILE
PASSWORD ?
-LOAD (MODE) -
  
```

- PASS SET Press SET to start the file load operation or ESC to abort the operation without loading anything. The display changes to the following once the SF-5100/SF-5300 starts receiving data.
7. Enter a password if the file you want to load has one, and then press SET.
- Here we will register the password "PASS".
  - If there is a file with the filename you specify on the disk, but with a different password, an error occurs on the floppy disk drive.
  - Skip this step if the file you want to load does not have a password.

```

DATAFILE
PASS
LOAD ? SET/ESC
  
```

- SET/ESC Press SET to start the file load operation or ESC to abort the operation without loading anything. The display changes to the following once the SF-5100/SF-5300 starts receiving data.
8. Press SET to start the file load operation or ESC to abort the operation without loading anything. The display changes to the following once the SF-5100/SF-5300 starts receiving data.

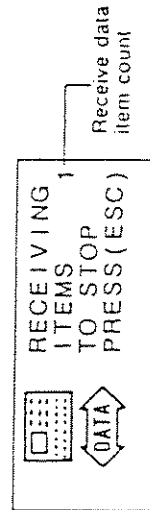

- The number of data items received is counted on the display.
  - At this time you should also watch the error indicator on the floppy disk drive to make sure that the drive is operating correctly.
  - If you selected ALL DATA in step 5 above, all of the data stored on the floppy disk under the filename you specified is loaded into SF-5100/SF-5300 memory. If you selected MODE DATA in step 5, only the data for the mode you were in when you performed step 1 is loaded.
  - To interrupt the load operation at any time, press ESC.
9. After the load operation is complete, the display returns to the initial screen of the mode you were in when you started this procedure.

### To delete a file from a floppy disk

**FUNC** **FUNC**

1. While the initial screen in any mode is displayed, press **FUNC** twice to display the second function menu.

```

2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
  
```

- The above is the second function menu produced in the Calendar Mode. Function menus produced by other modes may differ somewhat.

**4**

2. Press 4 to select DATA COMM.

```

1 SEND
2 RECEIVE
3 SET UP
4 FDD
  
```

**4**

3. Press 4 to select FDD (floppy disk drive).

```

1 SAVE 5 COMPARE
2 LOAD 6 RENAME
3 DEL 7 FORMAT
4 DIR -FDD-
  
```

**3**

4. Press 3 to select DEL.

```

2 MODE DATA
3 ALL DATA -DEL-
  
```

**2**/**3**

5. Press 2 to specify deletion of only the data in the mode you were in when you performed step 1, or 3 to specify deletion of all data stored under the filename you will specify in the next step.
  - Here we will specify ALL DATA.

```
FILENAME ?
```

```
-DEL (ALL) -
```

- DATAFILE **SET**
6. Enter the name of the file that holds the data you want to delete, and then press **SET**.
  - Here we will delete the file "DATAFILE":

```
DATAFILE
```

```
DEL ? SET /ESC
```

- Note that you do not have to input a file's password in order to delete it.
- 7. Press **SET** to start the file delete operation or **ESC** to abort the operation without deleting anything.
- At this time you should also watch the error indicator on the floppy disk drive to make sure that the drive is operating correctly.
- If you selected **ALL DATA** in step 5 above, all of the data stored on the floppy disk under the filename you specified is deleted. If you selected **MODE DATA** in step 5, only the data for the mode you were in when you performed step 1 is deleted.
- 8. After the delete operation is complete, the display returns to the **FDD** menu.

**SET** / **ESC**



## To create a directory of files on a floppy disk

1. While the initial screen in any mode is displayed, press **FUNC** twice to display the second function menu.

```
2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
```

- The above is the second function menu produced in the Calendar Mode. Function menus produced by other modes may differ somewhat.

**4**

2. Press **4** to select **DATA COMM**.

```
1 SEND
2 RECEIVE
3 SET UP
4 FDD
```

**4**

3. Press **4** to select **FDD** (floppy disk drive).

```
1 SAVE 5 COMPARE
2 LOAD 6 RENAME
3 DEL 7 FORMAT
4 DIR -FDD -
```

4

4. Press 4 to select DIR.

```

2 MODE DATA
3 ALL DATA
  -DIR-

```

2/3

5. Press 2 to specify a directory of only the data in the mode you were in when you performed step 1, or 3 to specify a directory of all data.

- Here we will specify ALL DATA.

```

ALL FILE
DIRECTORY OK ?
SET/ESC

```

SET/ESC

6. Press SET to load a directory of all filenames stored on the floppy disk into the Memo Mode of the SF-5100/SF-5300. To abort the operation without loading anything, press ESC. The display changes to the following once the SF-5100/SF-5300 starts receiving data.

```

RECEIVING
ITEMS      1
TO STOP
PRESS(ESC)

```

Receive data item count

- The number of data items received is counted on the display.
  - At this time you should also watch the error indicator on the floppy disk drive to make sure that the drive is operating correctly.
  - If you selected ALL DATA in step 5 above, the filenames of all files stored on the floppy disk is loaded into SF-5100/SF-5300 memory. If you selected MODE DATA in step 5, only the names of the files for the mode you were in when you performed step 1 are loaded.
  - To interrupt the load operation at any time, press ESC.
7. After the load operation is complete, the display changes to the initial screen of the Memo Mode. The file data that was just loaded is stored in a Memo Mode item named "\*\*\*FILES\*\*\*".
8. Press  $\nabla$  to display an index display of Memo Mode item names.
9. Use  $\Delta$  and  $\nabla$  to move the "\*\*\*FILES\*\*\*" Memo Mode item into the top line of the index display.
10. Press DISP CHNG to switch to the data display of the "\*\*\*FILES\*\*\*" item.

$\nabla$

$\Delta$ / $\nabla$

DISP CHNG

```

***FILES***
CAPACITY
1123456Bytes
DATAFILE

```

Remaining capacity of disk



11. Use  $\Delta$  and  $\nabla$  to scroll through the data display.

```

CAPACITY
1234567Bytes
DATAFILE
1234Bytes
-- Size of file named
DATAFILE
  
```

### To compare the contents of two files



1. While the initial screen in any mode is displayed, press **FUNC** twice to display the second function menu.

```

2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
  
```

- The above is the second function menu produced in the Calendar Mode. Function menus produced by other modes may differ somewhat.
- If you are accessing the open memory area when you perform the above operation, you will be able to compare a file in the open memory area only. If you are accessing the secret memory area, you will be able to compare a file in the secret memory area only.



2. Press 4 to select DATA COMM.

```

1 SEND
2 RECEIVE
3 SET UP
4 FDD
  
```



3. Press 4 to select FDD (floppy disk drive).

```

1 SAVE 5 COMPARE
2 LOAD 6 RENAME
3 DEL 7 FORMAT
4 DIR -FDD-
  
```



4. Press 5 to select COMPARE.

```

2 MODE DATA
3 ALL DATA
  -COMPARE-
  
```



5. Press 2 to compare SF-5100/SF-5300 data in the mode you were in when you performed step 1 with the corresponding mode data on the floppy disk. Press 3 to compare all data stored in the SF-5100/SF-5300's memory with the corresponding data on the floppy disk.

```

FILENAME ?
  
```

```

-COMPARE (ALL) -
  
```



DATAFILE **SET** 6. Enter the name of the floppy disk file that holds the data you want to compare, and then press SET.

- Here we will compare the SF-5100/SF-5300 memory data with the contents of file "DATAFILE".
- Note that you do not have to input a file's password in order to compare it with SF-5100/SF-5300 data.

```
DATAFILE
COMPARE? SET/ESC
```

**SET/ESC** 7. Press SET to continue with the compare operation or ESC to abort the operation without comparing anything. The display changes to the following once the SF-5100/SF-5300 starts comparing data.

```
FDD PREPARATION
READY ?
PRESS SET/ESC
```

- The above message confirms whether or not the floppy disk drive is connected and ready for operation.
- 8. Press **SET** to start the file compare operation or **ESC** to abort the operation without comparing anything.

**SET/ESC**

```
SENDING
TO STOP
PRESS(ESC)
```

- At this time you should also watch the error indicator on the floppy disk drive to make sure that it is operating correctly.
- To interrupt the compare operation at any time, press ESC.
- 9. If the compare operation finds out that the contents of the SF-5100/SF-5300's memory are identical to those of the file specified by the filename, the display returns to the initial screen of the mode you were in when you started this procedure. If a difference is detected, an error occurs on the disk drive.

### To change the name of a floppy disk file

1. While the initial screen in any mode is displayed, press **FUNC** twice to display the second function menu.

```
2 ALL DELETE
3 MULTIPLE HL
4 DATA COMM
```

- The above is the second function menu produced in the Calendar Mode. Function menus produced by other modes may differ somewhat.

- 4 Press 4 to select DATA COMM.

```
1 SEND
2 RECEIVE
3 SET UP
4 FDD
```

- 4 Press 4 to select FDD (floppy disk drive).

```
1 SAVE 5 COMPARE
2 LOAD 6 RENAME
3 DEL 7 FORMAT
4 DIR - FDD -
```

- 6 Press 6 to select RENAME.

```
2 MODE DATA
3 ALL DATA
- RENAME -
```

- 2/3 Press 2 to rename a file that contains data for the mode you were in when you performed step 1, or 3 to rename all data stored under the filename you will specify in the next step.
- Here we will specify MODE DATA.

```
FILENAME ? (OLD)
- RENAME (MODE) -
```

DATAFILE SET

6. Enter the current filename and then press SET.
- Here we will rename the file "DATAFILE".

```
DATAFILE
FILENAME ? (NEW)
- RENAME (MODE) -
```

- Note that you do not have to input the file's password.
7. Enter the filename you want to change to and press SET.

DATA1 SET

- Here we will change the filename to "DATA1".

```
DATAFILE
DATA1
RENAME ? SET/ESC
```

SET/ESC



 
 


 


 
 
 
8. Press SET to start the rename operation or ESC to abort the operation without renaming anything. The display changes to the following while the SF-5100/SF-5300 is renaming the file.
- At this time you should also watch the error indicator on the floppy disk drive to make sure that it is operating correctly.
9. After the operation is complete, the display returns to the FDD menu.



 
 
 
 


 
 

 
 



## PART 8 Technical Reference







Keys

This part of the manual provide technical information on troubleshooting, user maintenance, specifications, etc.

### Keys

Key Cap	Name	Function
	Calendar key	Press this key to enter the Calendar Mode.
	Calculator Mode key	Press this key to enter the Calculator Mode.
	Capacity key	Press this key to display the current status of the memory.
	Caps key	Press this key shift-lock the keyboard between upper-case and lower-case characters.
	Date/Time key	Press this key to enter values that represent hours, minutes, years, months, or dates.
	Delete key	Press this key to delete the character at the current cursor position. Holding down this key deletes characters at high speed.
	Display Change key	Press this key to switch between the index display format and the data display format.
	Escape key	Press this key to interrupt any operation.
	Function key	Press this key to display function menus.
	Home Time key	Press this key to display the current Home Time.
	Insert key	Press this key to open a space at the current cursor position. Holding down this key inserts spaces at high speed.
	Mark key	Press this key to mark/unmark protect data.

Key Cap	Name	Function
	Secret Key	Use this key to register a password, to access the secret memory area, and to exit the secret memory area.
	Memo Mode key	Press this key to enter the Memo Mode.
	Next key	Press this key to complete entry of data for an entry and to advance to the next entry for input.
	Off key	Press this key to switch power off.
	Power On key	Press the key to switch power on.
	Clear key	Press this key to clear the display.
	Reminder Mode key	Press this key to enter the Reminder Mode.
	Schedule Mode key	Press this key to enter the Schedule Keeper.
	Search key	Press this key to start a search for data stored in memory.
	Set key	Press this key to store input data into memory.
	Shift key	Press this key to temporarily shift the keyboard for one character.
	Space key	Press this key to input a space.
	Code key	Press this key to enter characters marked in blue on the keyboard.
	Telephone Directory key	Press this key to enter the Telephone Directory.
	World Time key	Press this key to display the World Time.
	Cursor Right key	Press this key to move the cursor to the right.

Key Cap	Name	Function
	Cursor Left key	Press this key to move the cursor to the left.
	Cursor Up key	Press this key to move the cursor up, or to scroll the display.
	Cursor Down key	Press this key to move the cursor down, or to scroll the display.
	Newline key	Press this key to create a new line within a data entry.
	Letter keys	Press these keys to enter the corresponding letter. Use the CAPS and SHIFT keys to switch between upper-case and lower-case letters. You can also use the CODE key (alone and in combination with SHIFT) to input letters with tildes, umlauts, and accents.
	Numeric keys	Press these keys to enter the corresponding number. Following SHIFT, these keys are also used for input of certain symbols and punctuation marks.

## Storage Capacity

The 64K byte memory capacity (32K bytes for SF-5100) includes a 61622-byte user area (28854 bytes for SF-5100). The following shows examples of what this means for the storage of data in each mode.

## Telephone Directory

Approximately 2930 (1370 for SF-5100), under the following conditions:

- 8-character name
- 10-character telephone number

Approximately 1460 (680 for SF-5100), under the following conditions:

- 8-character name
- 10-character telephone number
- 20-character address

## Memo

Approximately 2800 (1310 for SF-5100), 20-character memos.

## Schedule Keeper

Approximately 1920 (900 for SF-5100), under the following conditions:

- 1 item per day, 20 characters per item
- 30 days per month
- Starting time specified, alarm time set

Approximately 2200 (1030 for SF-5100), under the following conditions:

- 1 item per day, 20 characters per item
- 30 days per month
- Starting time specified, no alarm time

**Reminder**

Approximately 3620 (1690 for SF-5100), under the following conditions:

- 1 item per year, 10 characters per item
- 30 days per month, alarm time set

Approximately 4100 (1920 for SF-5100), under the following conditions:

- 1 item per year, 10 characters per item
- 30 days per month, no alarm time

**Auto Sort Sequence**

Telephone Directory data items are automatically sorted in alphabetical order according to the first letter in the NAME entry. The following table shows the sequence used for data sorts.

1	\$	31		91	l	61		121	á	151	ij
2	(space)	32	>	92	\	62	^	122	â	152	æ
3	!	33	7	93	]	63	^	123	ã	153	ç
4	"	34	@	94	^	64	a	124	ä	154	à
5	#	35	A	95	a	65	b	125	å	155	å
6	\$	36	B	96	b	66	c	126	ä	156	ä
7	%	37	C	97	c	67	d	127	Ä	157	ÿ
8	&	38	D	98	d	68	e	128	É	158	Ë
9	.	39	E	99	e	69	f	129	È	159	Ï
10	(	40	F	100	f	70	g	130	Ë	160	Ö
11	)	41	G	101	g	71	h	131	Ü	161	Û
12	*	42	H	102	h	72	i	132	Ä	162	ä
13	+	43	I	103	i	73	j	133	Å	163	Ö
14	,	44	J	104	j	74	k	134	Ñ	164	Ñ
15	-	45	K	105	k	75	l	135	Ï	165	Ï
16	.	46	L	106	l	76	m	136	Æ	166	Æ
17	/	47	M	107	m	77	n	137	Ç	167	Ç
18	0	48	N	108	n	78	o	138	À	168	À
19	1	49	O	109	o	79	p	139	Å	169	Å
20	2	50	P	110	p	80	q	140	Φ	170	Φ
21	3	51	Q	111	q	81	r	141	β	171	β
22	4	52	R	112	r	82	s	142	φ	172	φ
23	5	53	S	113	s	83	t	143	ç	173	ç
24	6	54	T	114	t	84	u	144	ä	174	ä
25	7	55	U	115	u	85	v	145	ë	175	ë
26	8	56	V	116	v	86	w	146	ï	176	ï
27	9	57	W	117	w	87	x	147	ö		
28	:	58	X	118	x	88	y	148	ü		
29	;	59	Y	119	y	89	z	149	ä		
30	<	60	Z	120	z	90		150	ñ		

### Filename and password characters

The following table shows the characters that can be used in filenames and passwords. Characters that are shaded in the table cannot be used.

1	\$	31	=	61	91	121	151
2	(space)	32	>	62	92	122	152
3	!	33	?	63	93	123	153
4	..	34	@	64	94	124	154
5	#	35	A	65	95	125	155
6	\$	36	B	66	96	126	156
7	%	37	C	67	97	127	157
8	&	38	D	68	98	128	158
9	.	39	E	69	99	129	159
10	(	40	F	70	100	130	160
11	)	41	G	71	101	131	161
12	*	42	H	72	102	132	162
13	+	43	I	73	103	133	163
14	,	44	J	74	104	134	164
15	-	45	K	75	105	135	165
16	.	46	L	76	106	136	166
17	/	47	M	77	107	137	167
18	0	48	N	78	108	138	168
19	1	49	O	79	109	139	169
20	2	50	P	80	110	140	170
21	3	51	Q	81	111	141	171
22	4	52	R	82	112	142	172
23	5	53	S	83	113	143	173
24	6	54	T	84	114	144	174
25	7	55	U	85	115	145	175
26	8	56	V	86	116	146	176
27	9	57	W	87	117	147	
28	:	58	X	88	118	148	
29	;	59	Y	89	119	149	
30	<	60	Z	90	120	150	


### Resetting the SF-5100/SF-5300's Memory

#### Warning !


The following procedure erases all data stored in the memory of the SF-5100/SF-5300, including mark protected data. Perform the following operation only when you want to delete all data and initialize the settings of the SF-5100/SF-5300.

Remember — you should always keep copies of important data by writing it down, by transferring it to a personal computer or other SF Unit, or by saving it to a floppy disk using an optional floppy disk drive.

To reset the SF-5100/SF-5300's memory

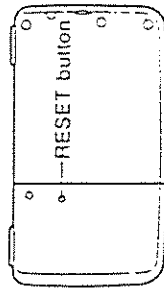

1. Press the RESET button.

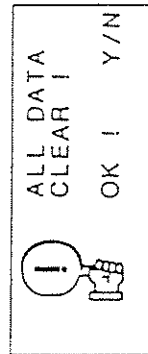

#### Warning !

The next step deletes all data stored in the SF-5100/SF-5300's memory. Make sure that you really want to delete the data before you continue!

2. Press Y to reset the memory and delete all data or N to abort the reset operation without deleting anything.

Y/N

Following the reset operation described above, the Home Time display appears and the SF-5100/SF-5300 settings are initialized as noted below.

## Home Time:

London (LON)  
1992/1/1 WED  
12:00 AM  
12-hour format  
New York (NYC)

## World Time:

Daily Alarm: 12:00 PM  
Sound: Schedule alarm → ON  
Reminder alarm → ON  
Daily alarm → OFF  
Key → ON

## Character input:

CAPS

## Error Table

Message	Meaning	Action
NO DATA!	Search operation attempted when no data is stored in memory.	Current search operation cannot be performed.
NOT FOUND!	Data specified in search operation does not exist in memory.	Change specification or cancel search.
MEMORY FULL!	No more room in memory for storage of data.	Delete unnecessary data items from memory.
ALARM TIME ALREADY USED!	Attempt to set a Schedule Keeper alarm time that is already used for another entry.	Set a different alarm time or change the existing alarm time to another one.
ALARM TIME ALREADY PASSEDI	Attempt to set a Schedule Keeper alarm time for a time/date that is already passed.	Set a different alarm time (for a future time/date).
SECRET DATA!	Alarm for a secret memory area data item is sounding.	Enter the secret memory area to view details of the alarm.
PASSWORD MISMATCH!	Attempt to enter the secret memory area using a password that does not match the one preset for the secret area.	Use the correct password.
SEND ERROR! STOPPED!	Error during data communications.	Cancel the data communications operation and try again.
RECEIVE ERROR!	Battery replacement can cause timekeeping errors.	Check the Home Time setting and correct it if necessary.
CHECK TIME SETTING!	Data corrupted by strong impact, electrostatic charge, etc.	See page 12 of this manual.
DATA ERROR! CONSULT THE OWNER'S MANUAL!		