



PD153

TOUCH SCREEN PDA WITH PC LINK

INSTRUCTION MANUAL

TOUCH SCREEN DATABANK WITH PC LINK

USING THE PDA FOR THE FIRST TIME

Be sure to perform the following operations before using the PDA for the first time.

To initialize and activate the PDA, remove the insulation tabs from the back of the PDA. Follow the steps below to reset the databank.

OPERATION	DISPLAY
Insert the pointed end of a paper clip into the small round hole located directly below the word RESET on the rear of the databank. Push gently.	RESET?
Press [ENT] button to confirm and Display will return to the Home Time Display.	#NYC TUE 1 - 1 - 2002 12:00 00 A

NOTE: Press the RESET switch with a ball-point pen or similar objects.
Do not use an object with a breakable or sharp tip.

Important!

Please keep this User's Guide and all information handy for future reference.

Note

The screen shots shown in this User's Guide may differ slightly from the displays actually produced by your organizer.

Important Precautions

- Never expose the PDA to fire.
- Avoid temperature extremes. Do not locate the PDA in direct sunlight, near a window, near a heater, etc.
- In very low temperatures display response may slow down or fail entirely. This condition is temporary and operation may resume under normal temperatures.
- Avoid areas subject to excessive moisture, dirt, and dust.
- Avoid dropping the PDA and otherwise subjecting it to strong impact.
- Never bend or twist the PDA.
- Never try to take the PDA apart.
- Do not use a pen, pencil, or other sharp object to press or press the display.
- To clean the exterior of the PDA, wipe it with a soft cloth dampened in a weak solution of a mild neutral detergent and water. Be sure to wring out any excess moisture from the cloth before wiping off the PDA. Never use benzene, thinner, or any other volatile agent to clean the PDA. Doing so can remove the figures printed on the case or otherwise damage the case finish.

The contents of this manual are subject to change without notice.

MEMORY MAINTENANCE

Reset the PDA if it fails to respond

- Memory is kept in FLASH memory that does not require battery to backup.
- After RESET or replacement of batteries, the PDA will ask "RESET?".
- Press [ENT] to procedure.
- Home Time and Alarm setting will be reset whenever RESET key is pressed. Phone, Schedule and Memo records will be kept.

Delete All Records

- Perform reset procedure.
- When the PDA asks "RESET?", press any key except [ENT] to skip.
- The PDA will then ask "DELETE ALL?".
- Press any other keys to skip and return to Home Time Mode. Phone, Schedule and Memo records will be kept.
- Press [ENT] to confirm and all records stored will be deleted.

POWER UP / AUTO POWER OFF

Press ON/OFF once to turn the PDA on and again to turn it off. When the PDA is on, Home Time will be displayed. If no key has been pressed for 3 consecutive minutes, the PDA will automatically turn off.

REPLACING OLD BATTERIES

The PDA operates on two CR2025 lithium batteries = Eveready Energizer DL2025

Be sure to read the following precautions before replacing batteries.

- Turn off the PDA before replacing batteries.
- Unscrew the battery cover screw and replace two CR2025 lithium batteries.
Important : Be sure that the batteries are installed correctly. Wrong polarity may damage the PDA.
- For better performance and longer operating time, we recommend the use of good quality CR2025 lithium batteries. Do not mix old and new batteries.

Battery Precautions



Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the PDA. Note the following precautions.

- Be sure that the positive (+) side of each battery is facing in the correct directions.
- Never mix batteries of different types.
- Never mix old batteries and new ones.
- Do not expose batteries to direct heat, let them become shorted, or try to take them apart.
- Never leave dead batteries in the battery compartment.
- To avoid damage caused by leakage of the battery fluid, replace batteries once every two years regardless of how much the PDA has been used during that time.
- Never try to recharge the batteries that come with the PDA.
- Should a battery leak, clean out the battery compartment of the PDA immediately, taking care to avoid letting battery fluid come into direct contact with your skin.

Keep batteries out of reach of small children. If swallowed, consult with physician immediately.



- Frequent synchronizing with PC will shorten battery life.
- The batteries that come with this PDA discharge slightly during shipment and storage. Because of this, they may require replacement sooner than normal expected battery life.


TURNING THE KEY TOUCH TONE ON AND OFF

The key tone is turned on and off by touching the  located on the last line of the screen. When the key tone is turned on, the key tone indicator  will be displayed.

QUICK REFERENCE OF KEY FUNCTIONS

All letters, numbers and symbol characters are valid entries unless noted.

ON/OFF	Turn the PDA ON or OFF. The PDA automatically shuts off after 3 minutes of idleness.
◀ ▶	Move the cursor left, right, up or down. View the contents of a record line by line.
▲ ▼	Use these keys to search for records.
ENT	Confirm data entries Confirm currency rate entries
CAP	Toggle between capital and small letters.
A to Z	Alphabetic entries.
0 to 9	Numeric entries.
SYM	Press to select the following symbols .,- @ : ; \ ! ? ' () % & * + ~ [] { } < > = ' # ^ £ ¥
CODE	Input accent character.
SPC	Insert a space between characters during alpha entry.
EDIT	Update or changes existing data. Press this key to enter the edit mode.
DEL	Delete a character at the position of the cursor. Delete a record being viewed.
INS	Toggle between insert and overwrite mode.
12/24	Select 12-hour or 24-hour time mode in Home Time or World Time mode.
AM/PM	Select AM or PM indication in 12-hour mode.
	Toggle key tone output ON/OFF in Home Time mode. In Daily Alarm Display mode, press to select activate/deactivate the daily alarm output. In Scheduler mode, press to activate/deactivate the schedule alarm output.
MD/DM	Toggle between the DD/MM/YYYY and MM/DD/YYYY date formats. (The default is DD/MM/YYYY format)
	Press to activate /deactivate the password protection feature. Prevent unauthorized viewing of confidential information in PHONE, SCHEDULE and MEMO.
+ × ÷ %, ± =	Perform standard calculations in Calculator mode
MRC, M-, M+	Perform memory operations in Calculator mode.
C/CE	Clear entries in Calculator mode.
LANG.	Select the prompt message language as English, Dutch, Italian, German, French and Spanish in Home Time mode by pressing ▲ ▼.
[C1-C5]	Press to choose to the desired 2 nd currency.
★	To set daylight saving time in Home or World Time. One hour is added to the current time and ★ will appear in the display.

E-MAIL	Display the e-mail address field in the telephone directory.
WWW	Display the web site address field in the telephone directory.
	To activate the PC-Synchronization function in Local Time mode

SELECT LANGUAGE OF PROMPT

OPERATION	DISPLAY
Press [ON/OFF] button to turn the PDA on. Home Time is displayed.	#NYC TUE 1 - 1-2002 12:00 00 A
Touch [LANG] .	ENGLISH
Press [▲ ▼] button to select language.	FRANÇAIS
Touch [ENT] to confirm and return to Home Time Mode.	#NYC MAR 1 - 1-2002 12:00 00 A

SETTING THE HOME TIME

Follow these steps to select and set your Home City, Date and Time:
 Default: TUE NEW YORK 1- 1-2002 in MM/DD/YYYY format)
 12:00:00 AM (H)
 ALARM OFF

Example: To set 8 :30PM April 1st 2004 New York

OPERATION	DISPLAY
Press [ON/OFF] button to turn the PDA on. Home Time is displayed.	#NYC TUE 1 - 01-2002 12:00 00 A
Touch and hold [EDIT] for 2 seconds.	#NYC TUE 01 - 01-2002 12:00 00 A
The first character of home city name will flash. Press [▲ ▼] button to find the city in your time zone. You can edit Home City Name by inputting up to 3 characters.	#NYC TUE 01 - 01-2002 12:00 00 A
Touch [ENT] , the date will flash. Input the date and time by touching the relevant numerals on the screen gently. Touch [AM/PM] to toggle between AM and PM for 12-hour format. Touch [ENT] to return to Home Time.	#NYC THU 04 - 01-2004 08:30 00 P
Touch [MD/DM] to toggle between MD and DM.	#NYC THU 01 - 04-2004 08:30 00 P

Switching Between 12/24 Hour Display Format

OPERATION	DISPLAY
Touch [12/24] in Home Time or World Time display mode The time is adjusted to show the new format.	#NYC THU 04 - 01-2004 20:30 00

VIEWING TIME AROUND THE WORLD

Viewing Time

Follow these steps to view the time of cities in 29 different time zones around the world:

OPERATION	DISPLAY
In Home Time display mode, Press [TIME] button.	NYC THU 04 - 01-2004 08:30 00 P
Press [▲ ▼] button to scroll through the 29-cities/time zones.	CCS THU 04 - 01-2004 09:30 00 P
Press [TIME] button twice to return to Home Time.	NYC THU 04 - 01-2004 08:30 00 P

WORLD TIME TABLE

City Code	Time Difference	City Code	Time Difference
NEW YORK (NYC)	-5	YANGON (RGN)	+6.5
CARACAS (CCS)	-4	BANGKOK (BKK)	+7
RIO DE JANEIRO (RIO)	-3	HONG KONG (HKG)	+8
ATLANTIC (ATL)	-2	TOKYO (TYO)	+8.5
AZORES (AZO)	-1	ADELAIDE (ADL)	+9
LONDON (LON)	0	SYDNEY (SYD)	+10
PARIS (PAR)	+1	GUAM (GUM)	+11
CAIRO (CAI)	+2	AUCKLAND (AKL)	+12
MOSCOW (MOW)	+3	MIDWAY (MID)	-11
TEHRAN (THR)	+3.5	HAWAII (HNL)	-10
DUBAI (DXB)	+4	ANCHORAGE (ANC)	-9
KHABUL (KBL)	+4.5	L.A. (LAX)	-8
KARACHI (KHI)	+5	DENVER (DEN)	-7
DELHI (DEL)	+5.5	CHICAGO (CHI)	-6
DHAKA (DAC)	+6		

SETTING ALARMS

- Daily Alarm The PDA beeps at the time set. (See SETTING DAILY ALARMS)
Schedule Alarm The PDA beeps at times set for schedules. (See SCHEDULE)

Setting Daily Alarms

Examples 3:30PM in Alarm

OPERATION	DISPLAY
In Home Time Mode Press [TIME] button twice	ALARM 12:00 A
Touch the [EDIT] icon. The alarm hour digits will start to flash.	ALARM SET 12:00 A
Input alarm time 03:30 by touching the corresponding numbers on the screen. Touch [AM/PM] icon to change to PM	ALARM SET 03:30 P
Touch the [ENT] icon to confirm setting.	ALARM 3:30 P

NOTES:

- After confirming the setting, the alarm is automatically turned on and the will appear on the display.
- When Home Time reaches the alarm setting, an alarm will sound for 1 minute. The ADDEXDB3128 PDA will automatically power on if it was off. Press any key to turn off the alarm.
- To set the Alarm Off, touch the once. The will disappear in the Display.

USING THE TELEPHONE DIRECTORY

ADDING A NEW TELEPHONE RECORD

Follow these steps to store name, street addresses, home phone, work phone, fax, cell, pager, e-mail addresses, and company name. To make future searching easier, it's recommend to ENT the last name or surname first.
NOTE: The Name field must have data to store a record.

OPERATION	DISPLAY
Press [PHONE] button once.	NAME? SPC% 100
Touch the [NEW] icon once, the cursor will flash prompting for input.	-- NAME
Input the name (up to 48 characters) by touching the corresponding alphabets in the screen. Touch [ENT] to complete the name field and go to the address field.	ALEX GREEN NAME

Input the street ADDRESS (up to 128 characters). Touch [ENT] to confirm and the cursor will move to the 2 nd line.	CHICAGO 60634 ADDR
Input the HOME phone number (up to 48 digits). Touch [ENT] to confirm and the cursor will move to the 3 rd line.	CHICAGO 60634 1234-5555 HOME 1234-6666 WORK
Input the WORK phone number (up to 48 digits). Touch [ENT] to confirm.	CHICAGO 60634 1234-5555 1234-6666 FAX 1234-8888
Input the FAX number (up to 48 digits). Touch [ENT] to confirm.	CHICAGO 60634 1234-5555 1234-9999 CELL
Input the CELL number (up to 48 digits). Touch [ENT] to confirm.	CHICAGO 60634 1234-5555 1234-7777 PAGER
Input the PAGER number (up to 48 digits). Touch [ENT] to confirm and the cursor will move to the 1 st line.	CHICAGO 60634 1234-5555 1234-7777 EMAIL
Input the E-MAIL address (up to 48 characters). Touch [SYM] to enter symbols. Touch [ENT] to confirm.	ALEXGW@UNMAN 1234-5555 1234-7777 WEB
Input the WEB Site address (up to 48 characters). Touch [SYM] to ENT symbols. Touch [ENT] to confirm.	WWW.UNMAN.CO 1234-5555 1234-7777 COMPANY?
Input the COMPANY name (up to 48 characters). Touch [ENT] to confirm.	1234-5555 1234-7777
The record will be stored.	STORED!
The display returns to original screen and the free memory space in % will be shown.	NAME ? SPC% 99

NOTES:

- If there is no key press within 3 minutes, the PDA will automatically turn off.
- No new records will be saved until all valid data is being input and [ENT] is touched at the last field.
- Records are stored and sorted automatically in alphabetical order by name.
- A valid record must at least have data in the Name field. Only Phone number will not be accepted.
- Numbers, "-" are valid entries for Phone information.
- Input of SPACE as first character in Name field is a valid input.

SEARCHING FOR TELEPHONE RECORDS

OPERATION	DISPLAY
Press [PHONE] to display the phone directory.	NAME ? SPC% 99
Press [▲ ▼] button to display entries starting with the first record. Use [ENT] icon to view the complete record.	→ ALEX GREEN 1234-5555 1234-6666 NAME
Touch the [ENT] to view the ADDRESS.	→ CHICAGO 60634 1234-5555 1234-6666 ADDR
Touch the [ENT] to view the HOME.	→ ALEX GREEN → 1234-5555 1234-6666 HOME
Touch the [ENT] to view the WORK.	→ ALEX GREEN 1234-5555 → 1234-6666 WORK
Touch the [ENT] to view the FAX.	→ ALEX GREEN 1234-5555 → 1234-8888 FAX
Touch the [ENT] to view the CELL.	→ ALEX GREEN 1234-5555 → 1234-9999 CELL
Touch the [ENT] to view the PAGER.	→ ALEX GREEN 1234-5555 → 1234-7777 PAGER
Touch the [ENT] to view the EMAIL or touch [EMAIL] at any time.	→ ALEXGW@UNMAN 1234-5555 1234-7777 EMAIL
Touch the [ENT] to view the WEB or touch [WWW] at any time.	→ WWW.UNMAN.CO 1234-5555 1234-7777 WEB
Touch the [ENT] to view the COMPANY.	→ UNMAN 1234-5555 1234-7777
Press [▼] button to view the next record in alphabetical sequence sorted by name. Press the [▲] button to view the previous record.	→ BOB LEE 1234-5555 1234-6666 NAME

USING THE SCHEDULE FUNCTION

ADDING A NEW SCHEDULE RECORD

- Upper Line : Schedule information (up to 64 characters).
Middle Line : Year, month and day of schedule.
Lower Line : Time of scheduled appointment.
- Example: Office Lunch at Santa Café on Oct 14, 2004 at 12:30PM (set the schedule alarm).

OPERATION	DISPLAY
In Home Time Mode, Press [PHONE] button twice.	SCHED? SPC% 99
Touch any key to display the keyboard. Touch [NEW] icon in the Display, the first digit will flash to prompt for data input. ENT the desired Date and Time by touching the relevant numerals and alphabets in the screen. Touch [AM/PM] to select AM or PM in 12 hours mode. Touch [ENT] icon to confirm.	- DATE / TIME? - 10-14-2004 12-30 P
Input schedule event. e.g. : OFFICE LUNCH AT SANTA CAFÉ. Use [CODE] [E] to enter character "É". Touch [ENT] to confirm. The display returns to original screen and the free memory space in % will be shown.	OFFICE LUNCH 10-14-2004 12-30 P

NOTES:

- After confirming the setting, the alarm is automatically turned on and the **[***]** icon will appear on the display.
- The schedule alarm will sound for 1 minute and the schedule file will be shown when the home time reaches the preset scheduled alarm time. Press any key to stop the alarm.
- If the databank is off, the schedule alarm will automatically turn the PDA on and display the schedule. If you have set a password, you must input the password before viewing the schedule.
- The date format used follows the format selected in Time mode.
- Event field can accept maximum 64 characters and it doesn't accept any empty schedule details.

VIEWING SCHEDULE RECORDS

Schedule records are sorted chronologically. Follow these steps to review scheduled events:

OPERATION	DISPLAY
In Home Time Mode, Press [PHONE] button twice.	SCHED? SPC% 99
Press [▲ ▼] button to locate the record and press [◀ ▶] to view the complete record.	OFFICE LUNCH 10-14-2004 12-30 P

USING MEMO FUNCTION

ADD A NEW MEMO RECORD

Follow these steps to store a memo record.

OPERATION	DISPLAY
Press [MEMO] button.	MEMO ? SPC% 99
Touch [NEW] icon to enter input status. The cursor in the 1 st row flashes to prompt for input. Enter the corresponding alphabets shown in the display.	PICK UP SAMP
Touch [ENT] icon to confirm. Records are sorted in alphabetical order. The display will return to initial memo display.	MEMO ? SPC% 99

RECALLING MEMO RECORDS

OPERATION	DISPLAY
Press [MEMO] button to ENT MEMO mode.	MEMO ? SPC% 99
Press [▲ ▼] button to view the complete record.	PICK UP SAMP
Touch cursor icon [◀ ▶] to view the other memo information in longer than 12 characters.	SAMPLES AT

DELETING RECORDS (PHONE, SCHEDULE and MEMO modes)

To delete a record:

OPERATION	DISPLAY
Recall the record to be deleted.	→ ALEX GREEN 1234-5555 1234-6666 NAME:
Touch [DEL] icon DELETE Message is displayed on bottom line.	→ DELETE? 1234-5555 1234-6666 NAME:
Touch [ENT] icon to confirm. Touch any other key will cancel the operation.	DELETE !
The display with DELETE! for 2 seconds and return to initial display.	NAME ? SPC% 99

EDITING RECORDS (PHONE, SCHEDULE and MEMO modes)

To edit a record:

Recall the record to be edited by following the search procedures for that function.
Touch the [EDIT] icon to ENT in edit mode.
Enter corrections to the desired field and touch [ENT] icon to advance and make corrections to the other fields, if applicable.

NOTE:

Pressing any function key, such as [ON/OFF], other mode keys or auto off while in edit mode will cause the databank to exit from edit mode without saving any changes.

Touch [DEL] to delete individual blinking character.

Touch [INS] to toggle between insert and overwrite mode.

PASSWORD MODE

The Password Mode allows you to protect phone, schedule and memo records from unauthorized access.

Entering Password

OPERATION	DISPLAY
In Home Time mode, touch [P]. Type a password (maximum of 8 characters, including numbers or symbols). Touch [ENT] to confirm input.	PASSWORD? 123456
Press [ON/OFF] button twice. Icon [P] will be displayed.	#NYC TUE [P] 1-1-2002 12:00 00 A
When pressing, [PHONE] or [MEMO] button, you are prompted to enter password.	PASSWORD? [P]
Enter the password and touch [ENT]. If the password is correct, the key icon disappears, and all function modes can be accessed. The correct password entry will only be required again the next time you turn the PDA on. If the password is incorrect, the PDA will show "PASS ERROR!" and clear the incorrect password and prompt you again.	123456

NOTE:

- Pressing any function mode change keys while changing the password will not save any changes.
- System will not save the newly changed password till valid setting is being input and ENTERED.
- After clearing the current password, the system will not lock again after PDA is off.

Changing Password

OPERATION	DISPLAY
Press [ON/OFF] button twice to return to home time mode. Touch [P] to enter password.	PASSWORD? [P]
Enter the old password and touch [ENT]. The key icon disappears.	#NYC TUE 1-1-2002 12:00 00 A
Touch [P] again. Enter the new password and touch [ENT] to confirm. Press [ON/OFF] button twice to activate new password.	#NYC TUE [P] 1-1-2002 12:00 00 A

Clearing Password

OPERATION	DISPLAY
Press [ON/OFF] button twice to return to home time mode. Touch [P] to enter password.	PASSWORD? P
Enter the old password and touch [ENT] . The key icon disappears.	#NYC TUE 1-1-2002 12:00 00 A
Touch [P] again. Touch [ENT] without entering any character will clear the password.	#NYC TUE 1-1-2002 12:00 00 A

USING THE CALCULATOR

You can use the databank to do standard arithmetic calculations. The calculator displays up to 10 digits.

Standard Calculations

Touch the icons **[+]**, **[-]**, **[×]**, **[÷]**, **[.]**, **[±]**, **[=]** in the order they appear in the arithmetic operation. For percent calculation, touch the **[%]**.

Memory Calculation

The memory calculation feature lets you easily do multi-step calculations. Use the following keys for memory calculations:

- Touch **[M+]** to total a calculation and add the total to memory.
- Touch **[M-]** to total a calculation and subtract the total from the value in memory
- Touch **[MRC]** once to recall (display) the value in memory, touch again to clear the memory

METRIC CONVERSION

The conversion mode allows you to make conversions in distance, weight, volume and temperature.

Possible conversion pairs:

INCH	↔	CENTIMETERS (CM)
YARD	↔	METERS (M)
MILE	↔	KILOMETER (KM)
CELSIUS (C)	↔	FAHRENHEIT (F)
FEET (FT)	↔	METERS (M)
OUNCE (OZ)	↔	GRAM
POUND (LB)	↔	KILOGRAM (KG)
US GALLON (US G)	↔	LITER (L)
UK GALLON (UK G)	↔	LITER (L)

Example: How many meters are in 20 feet?

OPERATION	DISPLAY
Press [CALC] key twice, one of the metric conversions will be displayed.	INCH > CM 2.54 0.
Press [↕] button for the desired conversion pair e.g. Feet < > Meters	FT > M 0.3048 0.
Input the known amount: 20 e.g. 20 feet	FT > M 0.3048 20.
Touch [↗]	FT > M 0.3048 6.096
Touch [↖] for reverse conversion. Touch [C/CE] to clear answer	FT < M 3.280839895 19.99999999

CURRENCY CONVERSION

The conversion mode allows you to make conversion between 5 defaulted currency rate selections.

The conversion result will be displayed in 2 or no decimal places and the answer is rounded up. The 5 default rates are listed below:-

C1	USD ↔ DEM	rate=1.95583
C2	USD ↔ FRF	rate=6.55957
C3	USD ↔ BEF	rate=40.3399
C4	USD ↔ ITL	rate=1936.27
C5	USD ↔ ESP	rate=166.386

Example: Currency exchange USD to FRF.

OPERATION	DISPLAY
Press [CALC] key until currency conversion function displays.	USD > DEM 0. 0.
Select the correct currency exchange group by touching [C2] ~ [C6] . e.g. Touch [C2] for USD > FRENCH FRANCS	USD > FRF 0. 0.
Input the exchange amount USD 100 to get the result in FRF (the lower line).	USD > FRF 100 655.96
Touch [↕] (French Francs group), input the exchange amount FRF 100 to get the result in USD (the upper line).	USD < FRF 15.24 100.

Example: Set Currency C1 to JPY with rate USD1=JPY100

OPERATION	DISPLAY
Touch [C1] to select the first currency. Touch [C/CE] to clear.	USD > DEM 0. 0.
Touch [EDIT] to enter edit mode. The first U of USD flashes to prompt for entry, and the value of 1.95583 is shown.	_SD > DEM 1.95583
Touch [ENT] to move cursor to the 1 st character of DEM.	USD > _EM 1.95583
Type up to 3 characters to represent the first PDA, e.g. JPY, touch [ENT]. The current rate flashes to prompt for new input. Input the correct exchange rate of the new group. E.g. 100, touch [ENT] to confirm.	USD > JPY 100.
Touch the [4 ▸] to choose Floating decimal point, 2 decimal point OR no decimal point. Touch [ENT] to confirm.	FLOATING F-2-0 ◀ ▶
e.g. No decimal point is selected. Exchange amount of USD 12 to get the result in JPY (the lower line).	USD > JPY 12. 1200.

Instruction Manual of Friendly Sync v6

 
This version of Friendly sync is capable to synchronize the data between the PDA and MS Outlook.

Warning!


Don't connect the cable to PC unless finish reading this manual.

Installation


1. Insert the CD to the CD drive. Choose Install Software from the autorun menu.
2. If your CD does not have autorun, go to the setup directory and double click Setup.exe to start.

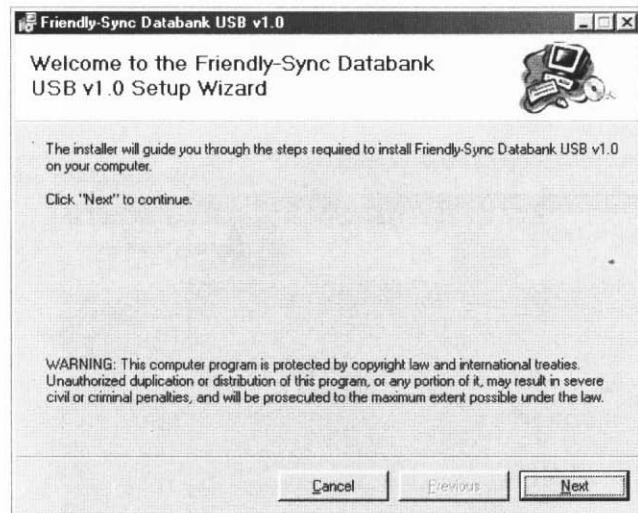

 
3. Click Next to start the installation.

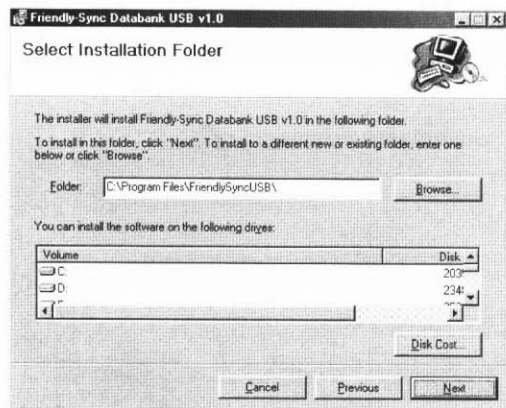

 
4. Click Next to accept the default Program Folder.

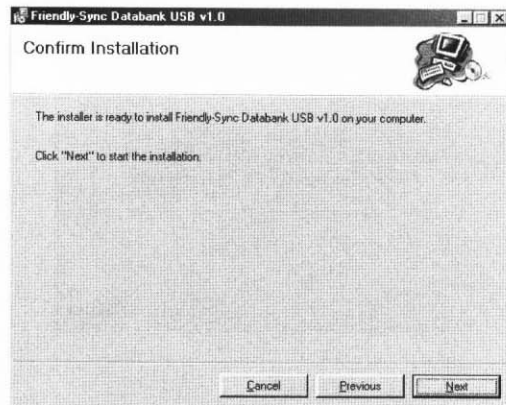

 5. Click Next to start.

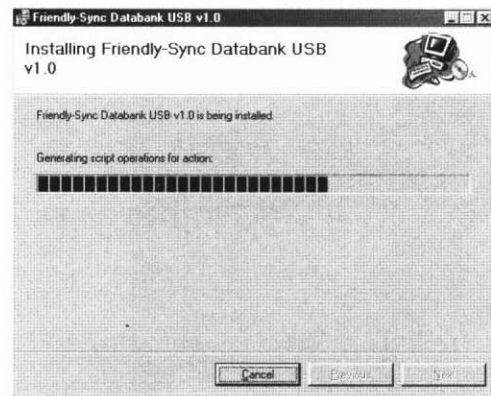

 6. Click Close to finish.

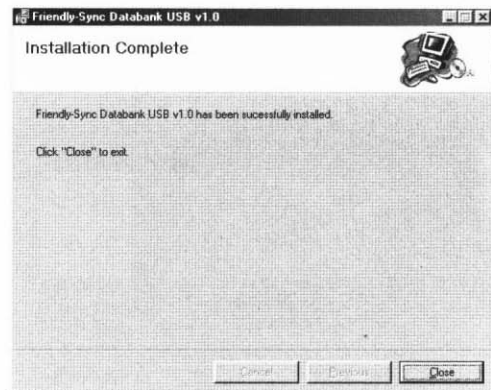


Driver Setup

1. Connect the PDA to the USB of the PC. The PC automatically detects a new device.



 2. When ask for driver files, browse to the setup CD and select the Driver subdirectory.

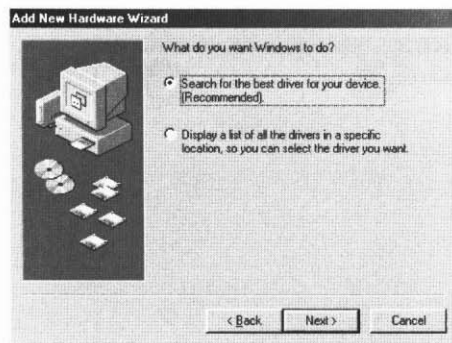


3. Sometimes Windows will ask for its setup disk, insert the Windows setup CD to the drive when asked.

Uninstall


1. You can uninstall the program by clicking on the Add/Remove Programs icon on the Control Panel.



 
2. Choose Friendly Sync Databank using the mouse and click on Add/Remove

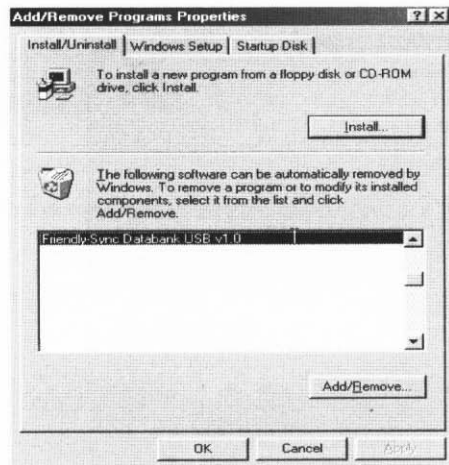

 3. Check Remove Friendly-Sync Databank USB v1.0.

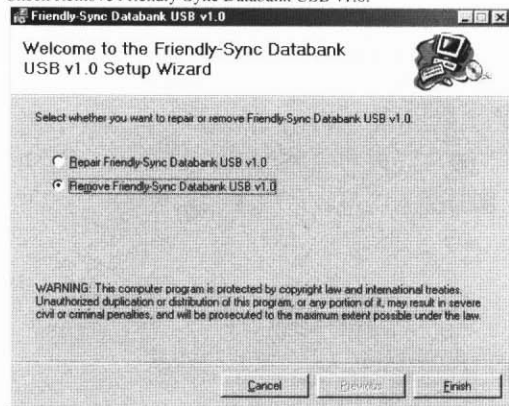

 
4. Click Finish to remove Friendly-sync from Windows.

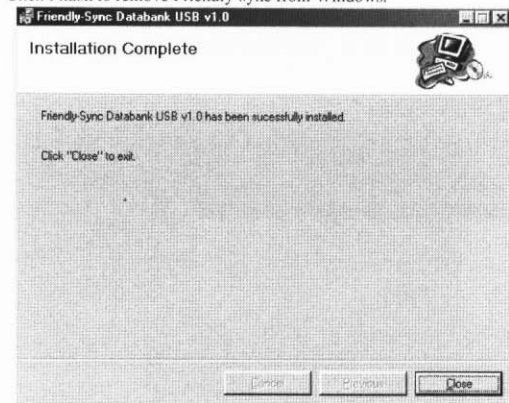


5. Click Close to finish.


Synchronize with Outlook

 1. Run Friendly-Sync Databank v6.0 from Start Menu of Windows.

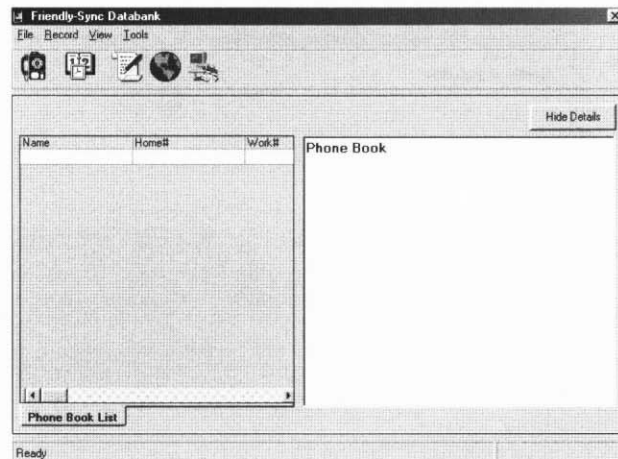


  2. Connect the PDA to the Computer with the cable provided.
Plug the connector at the end of the cable into your computer's USB port.
3. Click the Synchronization Now button.

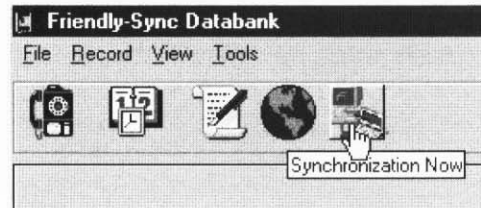

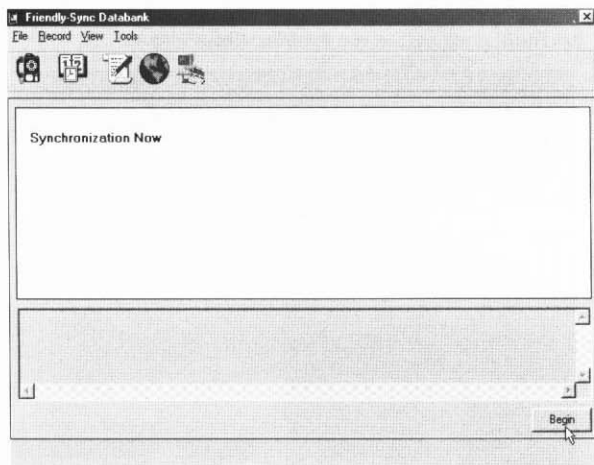


 4. Click the Begin button.

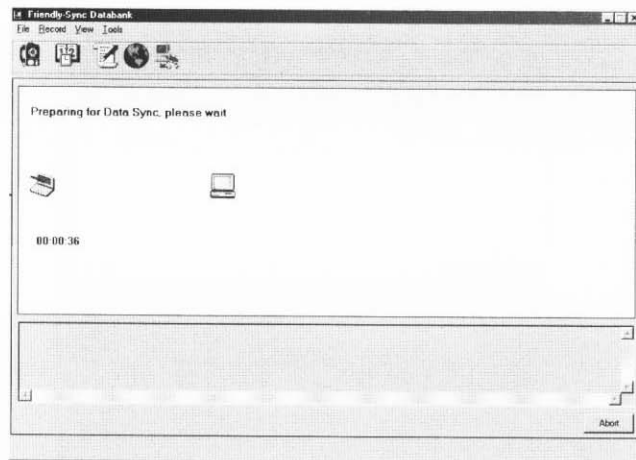


 5. On the PDA, tap  in Time mode and tap ENT to start.



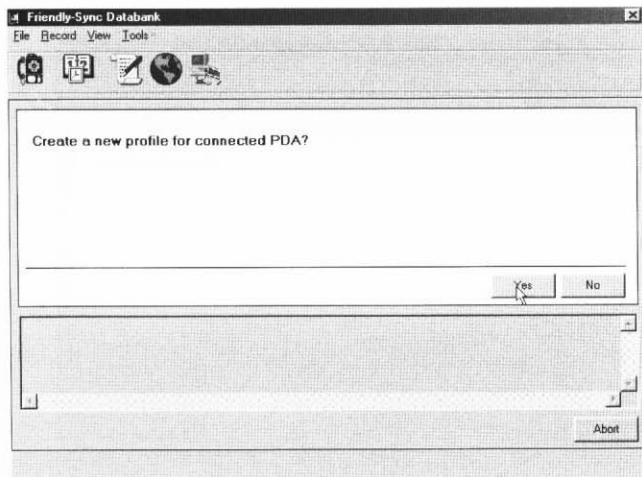


 6. Click Yes to Create a new profile.

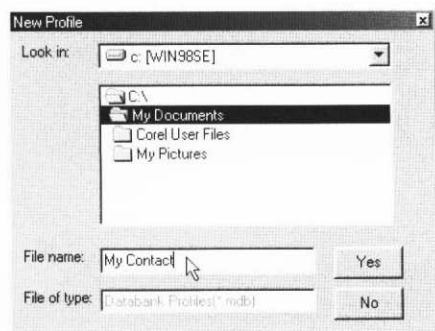


7. Browse for a location and type in the profile name.

 
8. Choose whether it is synchronized with Outlook or not.

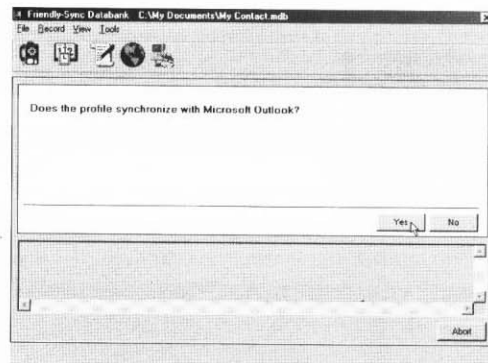

 
9. Click Yes if you have MS Outlook on your computer.
10. The program will ask which way to synchronize the data.
11. Choose one of three and click Next.

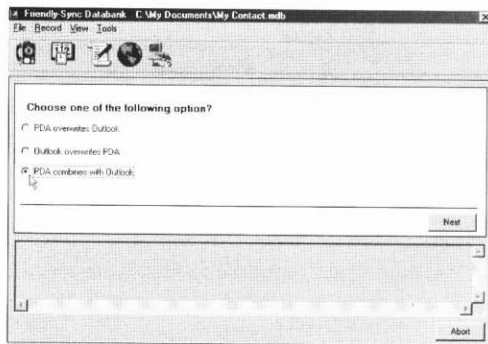

 12. When the synchronization is finished, click Ok.

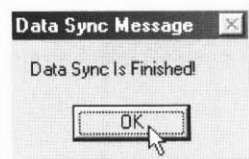

 13. The data from Outlook and the PDA can be view inside this program.

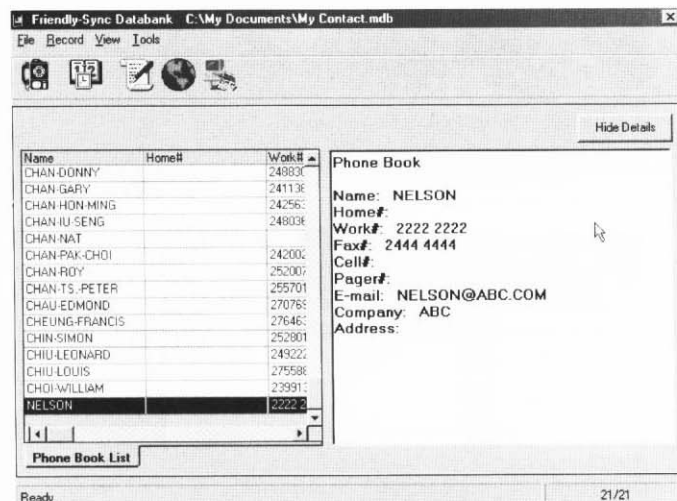


File Commands

New Profile

Create a new blank profile in the computer to save all the data in the databank during synchronization.

 A dialog box will display and ask for name and location of the new profile.

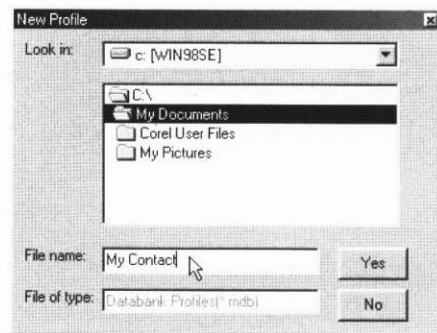


Type in the new profile name and click Yes to save.

Open Profile


Read the existing data from the computer.

 Point to any existing profile file (*.mdb) in the browser to open it.

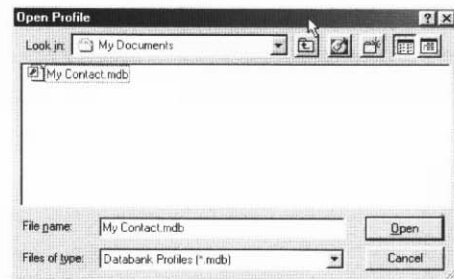

Delete Profile

 Complete remove all the data in an existing profile.

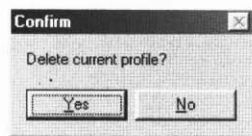


Important: Deleted data can't be restored.

Close Profile


Close the opened profile without opening a new.

Save Profile As

 Save the open profile to another profile name. This is a useful way to create backup for data and avoid lose if problem happen during synchronization.

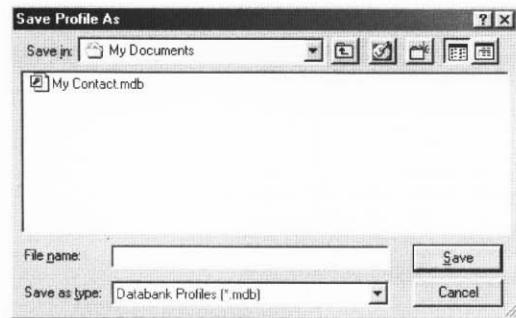


 Type in a new name or overwrite a existing profile to save.

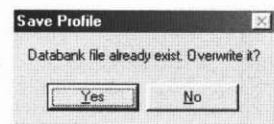

Recent

 Recent means a shortcut list for all profiles that have been accessed or created. The Recent list will display when the program start.

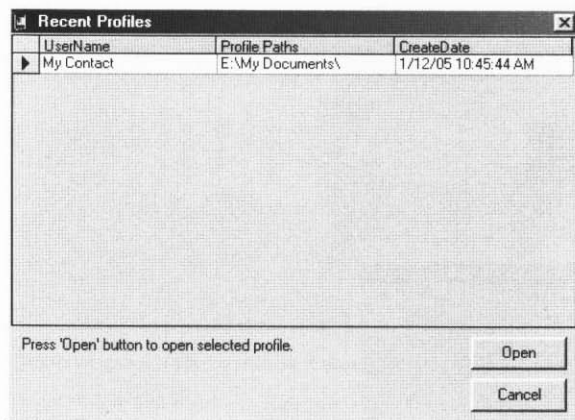

Exit

Exit the program.

All data is save immediately after create or edit. No data will be lost.

View Command

 
 
Phone Book

Switch to Phone Book Mode.

The phone records will be sorted by any column.

Click once on the column will sort it in ascending order.

Click again to sort in descending order.

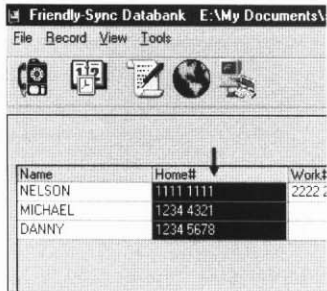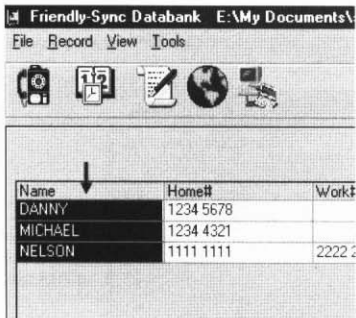

Click on the record to display the content in the Details windows.

Schedule

Switch to Schedule Mode.

 
Records can be sorted by any column same as Phone Book Mode.

Click on the record date field to display the schedule description.

In Schedule mode, all records before the set date are hidden.

To display more previous record, change the set date backward and click Refresh to display.

Click New Record to create a new schedule.

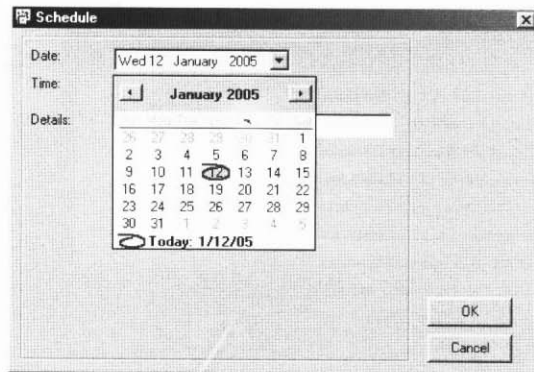

Click on the up or down button on the right side of the date to display the calendar.

Choose a date by double click on it. Enter note in the Details field. Click OK to save.

Memo

Switch to Memo Mode.

Memos will be sorted by the title (first line of the memo).

Click on the record title to display the content.

World Time

Switch to World Time Mode.


The time is using the system's clock, no synchronization for this mode.

Record Command

New Record


Create a new record in the corresponding mode that is display.

Phone Book Record

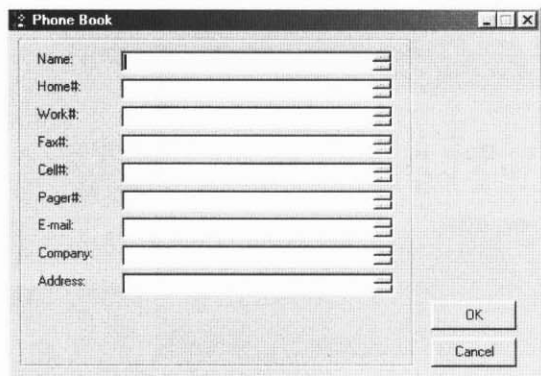


A dialog box titled "Phone Book" with a standard Windows window border. It contains a list of labels on the left, each followed by a text input field: Name, Home#, Work#, Fax#, Cell#, Pager#, E-mail, Company, and Address. At the bottom right, there are two buttons: "OK" and "Cancel".

Schedule Record

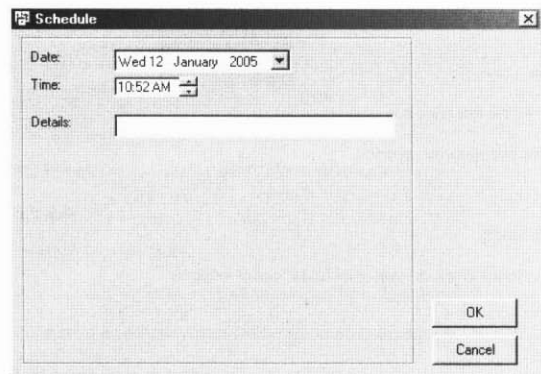

A dialog box titled "Schedule" with a standard Windows window border. It contains a "Date:" label followed by a date picker showing "Wed 12 January 2005". Below that is a "Time:" label followed by a time spinner showing "10:52 AM". At the bottom left is a "Details:" label followed by a large text area. At the bottom right, there are two buttons: "OK" and "Cancel".

Memo

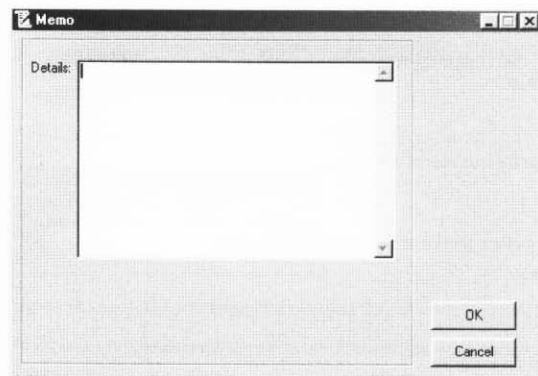

A dialog box titled "Memo" with a standard Windows window border. It contains a "Details:" label followed by a large text area. At the bottom right, there are two buttons: "OK" and "Cancel".

Edit Record

Edit a existing record.

Highlight the record to be edited and choose Edit Record from the Record menu or press ENTER on the keyboard.

Delete Record

Delete the displaying record.

Highlight the record to be deleted and choose Delete Record from the Record menu or press DELETE on the keyboard.

Refresh

In Schedule mode, all records before the set date are hidden.

To display more previous record, change the set date backward and click Refresh to display.

Select All

Select all records in one time.

Unselect

Release all selected records.

Hide Details

Hide Details windows on the right side of the screen.

 
Show Details

Show Details windows on the right side of the screen.

Tools Command

Profiles Properties

Display the Name and Path of the profile, number of record in each mode and size of the profile.

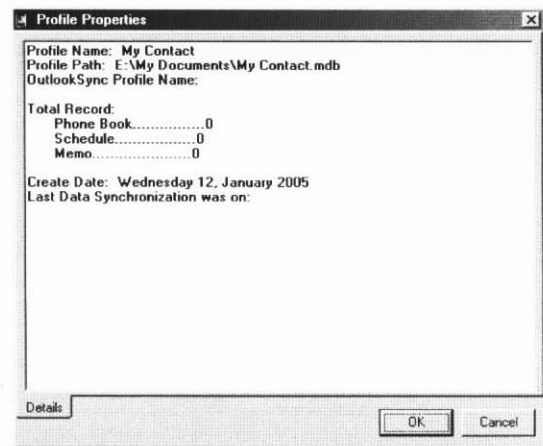


Synchronization Now

Perform synchronization to the PDA.

Password Setup


The profile can be protected by a password.

 When open a protected profile, the program will ask for password.



Password setup allow you to input the password and switching password protection on and off.

 Make sure you can remember the password, otherwise you can not access the data later.

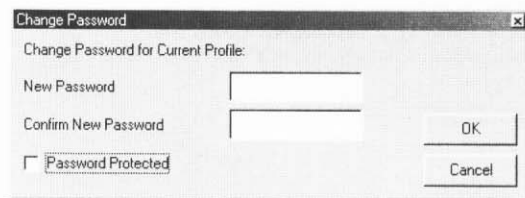

To unlock a protected profile:

- Open it which the correct password.
- Click Password Setup again.
- Clear all password displayed in *.*.*.*.
- Uncheck the Password Protect check box.
- Click Ok to unlock.

Euro Calculator

A small calculator with standard function and currency conversion.

The screenshot shows a window titled "EURO Calculator" with a standard Windows-style title bar (minimize, maximize, close buttons). Below the title bar, the word "Currency" is displayed. There are two currency selection buttons: "EUR" and "DEM". To the right of each button is a text input field containing the number "0.". Below these are two empty square boxes. The main area of the window contains a grid of buttons. The first row of buttons includes "Edit", "CE", and "AC" (which is highlighted with a dashed border). The second row includes "MC", "7", "8", "9", "+", and "->". The third row includes "MR", "4", "5", "6", "-", and "Sqr". The fourth row includes "M+", "1", "2", "3", "x", and "%". The fifth row includes "M-", "0", "+/-", ".", "/", and "=". The "AC" button is highlighted with a dashed border.

Currency					
EUR	0.				
DEM	0.				
Edit	CE	AC			
MC	7	8	9	+	->
MR	4	5	6	-	Sqr
M+	1	2	3	x	%
M-	0	+/-	.	/	=