

**English****REPLACING THE BATTERIES**

Your TAMJR150 functions using 1 x CR2032 lithium battery. Only the specified batteries must be used.

Do not use rechargeable batteries. Do not mix various types of batteries or old and new batteries. The batteries must be installed with the correct polarity. Old batteries must be removed from the product. The terminals of a battery should not be short-circuited. Do not put batteries in fire. Remove batteries if product is not going to be used for some time. Non-rechargeable batteries are not to be recharged.

If you want to replace batteries or if your apparatus presents an abnormal operation, removes the batteries from the compartment and follow the directions :

- 1) Turn off your product and open the battery compartment.
- 2) Replace with new battery.
- 3) Replace the battery cover.
- 4) Replace the battery in less than 1 minute to keep your data intact.

The machine will automatically switch off after 7 minutes of non-use.

TEMPERATURE OF EXPOSURE: 0°C with 40°C (32°F with 104°F). MEMORY SIZE: Press on "MEUN" "▼", to visualize the remaining capacity.

Zone horaire	Ville	Abbréviation	Décalage Horaire
1	LONDRES	LON	+0
2	LISBONNE	LIS	+0
3	PARIS	PAR	+1
4	BERLIN	BER	+1
5	ROME	ROM	+1
6	AMSTERDAM	AMS	+1
7	BARCELONE	BCN	+1
8	HELSINKI	HEL	+2
9	CAIRE	CAI	+2
10	MOSCOU	MOW	+3
11	RIYADH	RUH	+3
12	TEHRAN	THR	+3.5
13	DUBAI	DXB	+4
14	KABUL	KBL	+4.5
15	KARACHI	KHI	+5
16	DELHI	DEL	+5.5
17	DHAKA	DAC	+6
18	YANGON	RGN	+6.5
19	BANGKOK	BKK	+7
20	BEIJING	BEI	+8
21	HONG KONG	HKG	+8
22	SINGAPOUR	SIN	+8
23	TOKYO	TYO	+9
24	ADELAIDE	ADL	+9.5
25	SYDNEY	SYD	+10
26	GUAM	GUM	+10
27	NOUMEA	NOU	+11
28	WELLINGTON	WLG	+12
29	AUCKLAND	AKL	+12
30	TONGA	TNG	+13
31	MIDWAY	MID	-11
32	HONOLULU	HNL	-10
33	ANCHORAGE	ANC	-9
34	LOS ANGELES	LAX	-8
35	DENVER	DEN	-7
36	CHICAGO	CHI	-6
37	NEW YORK	NYC	-5
38	TORONTO	YYZ	-5
39	LARACAS	CCS	-4
40	RIO DE JANEIRO	RIO	-3
41	MID ATLANTIC	MAT	-2
42	----	-2H	-2
43	AZORES	AZO	-1

# English

## RESET

Before using your organiser for the first time, press the RESET BUTTON located on the back of the product using a fine point. "RESET?" is displayed with the screen. Press "ENTER" to confirm. This operation can take several seconds.

## NUMBER KEY

2 keyboards are available: letters and numbers. Use the 2nd key to toggle between the different keyboard layouts.

## CAPITALS AND LOWER CASE

Press "CAP" to change alphabet in capitals or lower case letters.

## SOUNDS

Press "B" key to turn the beep sound on or off.

## LANGUAGE PREFERENCES

- 1) Press the "MENU" button located on the numeric keyboard.
- 2) Use the "▲" and "▼" buttons to select the "Language" option.
- 3) Press "ENTER".
- 4) Use "▲" and "▼" to select the desired language.
- 5) Press "ENTER" to confirm.

## SCROLLING FUNCTION MESSAGE

To set and scroll message in time mode, follow these steps:

- 1) Press "QPZMG" continuously in home time mode.
- 2) Input message on the first line (36 characters or numbers max.) then press "ENTER". The message is now set.
- 3) Press "Power" twice, the message begins scrolling automatically.
- 4) Press any key to stop scrolling and the screen returns to home time display.

Once message has been set, it will begin scrolling automatically every time you press "Power" to activate the organiser. If no key is pressed, the message will keep scrolling until the organiser auto-powers off.

If you want to change the message, just repeat all procedures above, then the new message will overwrite the old.

## 12/24 HOUR DISPLAY

Press "12/24" to toggle between 12-hour and 24-hour format.

## LOCAL TIME

Before setting the hour, you must define your local time zone:

OPERATION	DISPLAY
Press "⌚"	* LON            SUN 2000- 1- 1 A 12-00-00

Press "Edit"	*_ON	SUN
	2000-1-1	A 12-00-00
Press "A" or "V" to choose the city corresponding to your time zone ex: NYC	NYC	FRI
	2000-1-1	A 12-00-00

Press "ENTER" to confirm.

### SETTING HOME TIME

OPERATION	DISPLAY	
Press "C"	*_LON	SUN
	2000-1-1	A 12-00-00
Press "Edit"	*_ON	SUN
	2000-1-1	A 12-00-00
Press "<>A" or "<>V" to highlight the field you wish to edit. Ex: "V"	*_NYC	FRI
	_999-12-31	P 7-01-17
Use the numeric keypad to enter the exact values. Ex: "2001"	*_NYC	FRI
	2001-12-31	P 7-01-17

### WORLD TIME

- 1) Press "C" twice to enter World Time mode.
- 2) Press "A" and "V" to select the city desired.
- 3) 43 cities are registered. (p. 3)

### CHANGING DATE FORMAT

- 1) Press the "MENU" button located on the numeric keypad.
- 2) Use the "A" and "V" buttons to select the "DATE SET?" option.
- 3) Press "ENTER"
- 4) Use "A" and "V" to select the desired format.
- 5) Press "ENTER" to confirm.

### TELEPHONE MODE

There are two kinds of telephone directory- PERSONAL & BUSINESS. Press "☎" once for PERSONAL and twice for BUSINESS mode.

You can input 36 characters or numbers max. on the 1st line and 36 digits max. on the 2nd or 3rd line.

OPERATION	DISPLAY
Press "☎" to choose the personal or business directory.	Personal
Enter the name then press "V"	ADDRESS ?
Enter the address then press "V"	E-MAIL?
Enter email address	jsmith@hinet.com
Press "V"	URL ?
Enter web site address	www.lexibook.com
Press "V"	TEL / FAX
Enter the first telephone number	111-343-4230
Press "V"	NUMBER?
Enter the second telephone number	111-343-4230
	333-345-1234
Press "ENTER" to confirm	STORED!
The screen returns to the original screen	PERSONAL?

The following symbols can be obtained by pressing SYM repeatedly: @, #, \$, %, &, <, >, (, ), -, ', :, /, \, ~, &, ß, !, ?, i, ð.

Press SYM and then press one of the following characters repeatedly to get the desired letters with accent marks.

Press [SYM] [A/á] display (CAPS OFF) á → à → ã → ä → å → ä → ã → à → á.

[SYM] [A/Á] display (CAPS ON) Á → Â → Ã → Ä → Å → Ä → Ã → Â → Á.

### DATA RETRIEVAL

#### Sequential Search

Enter the telephone mode.

Press "A" or "V".

Press "V" to view the desired information.

Direct Search:

Enter the first letters of a name, then press "A" or "V".

#### VIEWING THE DATA

Press "<" or ">" to view lines of more than 12 characters. Press and hold "<" or ">" for 3 seconds to activate automatic scrolling. Press "<" or ">" again to stop scrolling and again to re-start. Press "CE/C" to deactivate automatic scrolling.

### EDITING OR DELETING DATA

#### Editing Data:

1) Find the data to be edited, press "EDIT", then "<" or ">" to move the cursor to the part you wish to edit.

Press "DEL" to delete a character or "INS" to insert a character.

2) Press "ENTER" to confirm.

 
 
 
### Deleting Data:

- 1) Find the data to be deleted.
- 2) Press " DEL ". DELETE? " appears on the screen.
- 3) Press " ENTER " to confirm. " DELETE " is displayed and the data is deleted.

**Note:** If the DEL key has been pressed in error, simply press any other key except ENTER to avoid deletion.

### SCHEDULE MODE

1st line : 36 character capacity. 2nd line: date. 3rd line: hour.

OPERATION	DISPLAY
Press  to enter the Schedule mode	SCHEDULE?
Enter the heading then press " ✓ "	NEW MEETING 00-00-0000 A 00 - 00
Enter the date and hour Press " ENTER " to confirm	NEW MEETING 07 - 18 - 2002 P 12 - 30
To set the alarm, press "  " 3 times and then "EDIT" key. "ALARM SET" appears. Press "  " until the symbol (( (/ ))) appears on the left of the screen. Press " ENTER " to exit alarm mode. AGENDA ? (( \ ))	(( \ )) SCHEDULE ?


### DATA RETRIEVAL

- 1) Sequential search using " ^ " and " ✓ ".
- 2) Direct search is same as telephone mode.

### EDITING AND DELETING DATA

Same as telephone mode.

### MEMO MODE

- 1) Press  3 times to enter memo mode. Display shows: " MEMO ? "
- 2) Enter the heading then press " ✓ ".
- 3) Enter the date.
- 4) Press " ENTER " to confirm.

### DATA RETRIEVAL

Same procedure as Schedule.

### EDITING AND DELETING DATA

Same as telephone mode.

### TO DO MODE



To-do activities are stored by date and priority order in two categories: Pending (P) and Done (D).

### ALARM MODE

#### Alarm Types:

Daily Alarm	(( ( • )))
Hourly Alarm	
Schedule Reminder	(( (/ ))) (Schedule)

Adjustment of daily alarm :


 

OPERATION	DISPLAY
Press "  " key three times to select ALARM mode	ALARM A 12 - 00
Press " EDIT "	SHIFT LOCK ALARM SET A 12-00
Press 0630	SHIFT LOCK ALARM SET A 06 - 30
Press "  " repeatedly until (( (   ))) appears	SHIFT LOCK ALARM SET (( (   ))) A 06-30
Press " ENTER "	SHIFT LOCK ALARM (( (   ))) = A 6-30

### SECRET CODE

Using the password feature available in the Phone, Schedule, To-Do and Memo modes can protect your data. Once password has been set, when you press Power key to activate the organiser and then enter Telephone, Schedule, Memo or To Do mode, you must input the password. The Password feature is case sensitive. You must use the exact same character combination to open the protected data as you used to originally create the password.

#### WARNING:

ONCE A PASSWORD HAS BEEN SET, THERE IS NO WAY TO RETRIEVE THE DATA WITHOUT THE CORRECT PASSWORD. PLEASE KEEP A RECORD OF YOUR PASSWORD. THERE IS NO 'BACK DOOR' TO GET INFORMATION IN PASSWORD PROTECTION.

OPERATION	DISPLAY
In local time mode, press  (numeric keyboard). The symbol "  " is blinking.	PASSWORD ?
Enter a password up to 6 characters	SUGAR
Ex: SUGAR then press " ENTER "	

Re-enter your password then press ENTER	SUGAR 🔑
The display returns to the local time screen.	* NYC FRI 2001-12-31 P 7-01-17

### CHANGING THE PASSWORD

- 1) Press on the symbol in Standard time mode, then enter password and confirm by pressing "ENTER"
- 2) Press "ENTER" once more to confirm the change of password.
- 3) Enter the new password and press "ENTER"  
Confirm the password and press "ENTER". Display returns to local time.

### CALCULATOR MODE

- Press . Use the numeric keypad to carry out all your calculations: (+) (-) (x) (÷) (.) (=) (√) (%)
- Use CE/C to correct a mistake.
  - To display a negative number, use the key ± numeric keypad.
  - Use the keys M+, M-, M+ to record amounts in memory.

### CONVERSION MODE

Press twice for currency conversion, three times for EURO currency conversion and four times for metric conversion.

#### 1. To program the monetary conversion rates.

OPERATION	DISPLAY
Press  twice to enter currency conversion mode	EURO → USD CAPS 0.
Select a conversion using the keys "▲" or "▼"	JPY → USD CAPS 0.
Press "2nd" "EDIT" to re-name the currency, 1st character will flashing. Type in the name of currency.	JPY → USD CAPS 0.
Press "ENTER" to confirm the name change	HKD → NTD CAPS 0.
Enter the conversion rate then press "ENTER"	HKD → NTD CAPS 3.659

To convert an amount: Example: ? HKD = 500

OPERATION	DISPLAY
Select the conversion wanted using the keys "▲" or "▼"	HKD → NTD CAPS 3.659
Type the amount	HKD → NTD CAPS 500
Press "↵" to display conversion	HKD ← NTDCAPS 136.65

### 2. Euro conversion mode

Example: 500 EURO = ATS

OPERATION	DISPLAY
Press  three times to enter Euro conversion mode	EURO → ATS CAPS 13.7603
Select the conversion desired using the keys "▲" or "▼"	EURO → ATS CAPS 13.7603
Type the amount	EURO → ATS CAPS 500
Press "↵" to obtain conversion	EURO → ATS CAPS 6880.15

### 3. Metric conversion mode

Example: 25km = ? mile

OPERATION	DISPLAY
Press  4 times to enter metric conversion mode	inch → cm CAPS 2.54
Select the conversion desired using the keys "▲" or "▼"	mile → km CAPS 1.609344
Type measurement then press "↵"	mile ← km CAPS 15.5342798

### GAMES

Your organiser has two games – Magic Keyboard and Lotter

OPERATION	DISPLAY
Press  twice to enter Lottery game	15 16 18 CAPS 28 27 03
Press "ENTER". Repeat for other combinations	24 26 15 CAPS 26 16 42

- The numbers must be different from/to each other.

### Magic Keyboard

There are 20 levels of play (from 01 to 20) corresponding to different speeds of play. The screen displays numbers (0,1-9) and the letters of alphabet (A-Z) randomly.

OPERATION	DISPLAY
Press  to enter Magic Keyboard game	KEYBOARD WIZ 1 CAPS

Enter the desired level Ex: 5	KEYBOARD WIZ
	5                      CAPS
Press " ENTER " to start the game	Start!                      CAPS
A series of numbers and letters scroll on the screen	5XB 9                      CAPS

• the figure or the letter disappears when you press on the corresponding key but remains on the display if you press a wrong key. • The speed increases each time you get 12 numbers or letters correct. When the screen displays 12 characters, you lose the game. "Game Over!" will be displayed on the screen.

When you have passed the 20 levels "You Win!" will be displayed on the screen. The screen returns level 01.

## WARRANTY

This product is guaranteed for 2 years.

For any requirement of the guarantee or after sales service, you must return your product with your proof of purchase. Our guarantee covers the defects of hardware or assembly to the manufacturer other than any deterioration coming from the non-observance of the instructions of use or any inopportune intervention on the article (such as disassembling, exposure to heat or the humidity...).

The warranty does not cover batteries.

Model : TMJR150P or TMJR150B

Guarantee 2 years.